TURCK

Your Global Automation Partner

TBEN-S…
Digital and Analog Modules

Instructions for Use

Table of Contents

1 About these instructions ... 6
- **1.1 Target groups ... 6**
- **1.2 Explanation of symbols ... 6**
- **1.3 Other documents ... 6**
- **1.4 Feedback about these instructions ... 7**

2 Notes on the product ... 8
- **2.1 Product identification ... 8**
- **2.2 Scope of delivery ... 8**
- **2.3 Turck service ... 8**

3 For your safety ... 9
- **3.1 Intended use ... 9**
- **3.2 General safety instructions ... 9**
- **3.3 Notes on Ex protection ... 9**
- **3.4 Requirements for Ex approval ... 9**

4 Product description ... 10
- **4.1 Device overview ... 10**
  - 4.1.1 Display elements ... 11
  - 4.1.2 Block diagrams ... 12
- **4.2 Properties and features ... 14**
- **4.3 Functions and operating modes ... 15**
  - 4.3.1 Multiprotocol technology ... 15
  - 4.3.2 Digital modules – extended digital functions ... 16
  - 4.3.3 Backplane Ethernet Extension Protocol (BEEP) ... 17
  - 4.3.4 Turck Field Logic Controller function (FLC ARGEE) ... 17
- **4.4 Possible Ethernet network structures ... 18**
  - 4.4.1 Ethernet daisy chain - max. number of connected modules ... 20
- **4.5 Technical accessories ... 20**

5 Installing ... 21
- **5.1 Installing a device in zone 2 and zone 22 ... 21**
- **5.2 Combine TBEN-S modules for mounting ... 22**
  - 5.2.1 Combine TBEN-S modules for composite mounting to a mounting plate ... 22
  - 5.2.2 Combine TBEN-S modules for single and composite mounting on a DIN rail ... 23
- **5.3 Attach TBEN-S modules to a mounting plate ... 24**
- **5.4 Mounting TBEN-S modules on a DIN rail (TS35) ... 24**
- **5.5 Outdoor device installation ... 25**
- **5.6 Grounding the device ... 25**
  - 5.6.1 Equivalent wiring diagram and shielding concepts ... 25
  - 5.6.2 Fieldbus and I/O level shielding ... 26
  - 5.6.3 Grounding the device – I/O and fieldbus level ... 27
  - 5.6.4 Grounding the device – mounting on a DIN rail ... 27
  - 5.6.5 Grounding the device – mounting on a mounting plate ... 28

6 Connecting ... 29
- **6.1 Connecting a device in zone 2 and zone 22 ... 29**
- **6.2 Connecting a device to Ethernet ... 30**
  - 6.2.1 Applications with QuickConnect (QC) and Fast Start Up (FSU) ... 30

6.3 Connecting the supply voltage ... 31
6.3.1 Supply concept ... 32
6.4 Connecting digital sensors and actuators ... 34
6.5 Connecting analog sensors and actuators ... 37

7 Commissioning ... 41
7.1 Adjusting network settings ... 41
7.1.1 Adjusting network settings via TAS (Turck Automation Suite) ... 41
7.1.2 Adjusting network settings via the web server ... 43
7.2 Commissioning the devices in PROFINET ... 44
7.2.1 Address setting in PROFINET ... 44
7.2.2 PROFINET IO device model ... 45
7.2.3 FSU – Fast Start-Up (prioritized startup) ... 46
7.2.4 MRP (Media Redundancy Protocol) ... 48
7.2.5 User data for acyclic services ... 49
7.3 Connecting the devices to a PROFINET controller with TIA Portal ... 51
7.3.1 Installing the GSDML-file ... 51
7.3.2 Configuring device functions ... 53
7.3.3 Assigning the PROFINET device name ... 54
7.3.4 Setting the IP address in TIA Portal ... 55
7.3.5 Setting module parameters ... 56
7.3.6 Connecting the device online with the controller ... 57
7.3.7 PROFINET – Mapping ... 57
7.4 Commissioning the devices in Modbus TCP ... 58
7.4.1 Implemented Modbus functions ... 58
7.4.2 Modbus registers ... 58
7.4.3 Data width of the I/O modules ... 61
7.4.4 Register mapping of TBEN-S modules ... 62
7.4.5 Meaning of the register bits ... 78
7.4.6 Error behavior (watchdog) ... 80
7.5 Connecting devices to a Modbus Client with CODESYS ... 81
7.5.1 Connecting the device to the PLC ... 82
7.5.2 Configuring the Network Interface ... 85
7.5.3 Modbus TCP Server (Slave): setting the IP address ... 87
7.5.4 Defining modbus channels ... 88
7.5.5 Going online with the PLC ... 90
7.5.6 Reading process data ... 92
7.6 Commissioning the devices in EtherNet/IP ... 93
7.6.1 Common EtherNet/IP features ... 93
7.6.2 EDS files and catalog files ... 93
7.6.3 QuickConnect (QC) ... 93
7.6.4 Device Level Ring (DLR) ... 95
7.6.5 Diagnostic messages via process data ... 96
7.6.6 EtherNet/IP standard classes ... 96
7.6.7 VSC – Vendor Specific Classes ... 126
7.7 Connecting the devices to an EtherNet/IP scanner with Studio 5000 ... 152
7.7.1 Adding the devices from the Catalog files to the new project ... 153
7.7.2 Configuring the device in Logix Designer ... 155
7.7.3 Parameterizing the device ... 156
7.7.4 Going online with the PLC ... 157
7.7.5 Reading process data ... 159

7.8 Commissioning the devices in CC-Link IE Field Basic ... 160
7.8.1 General features CC-Link IE Field Basic ... 160
7.8.2 CSP+ files ... 160
7.8.3 Cyclic data transmission ... 161
7.8.4 Occupied Stations ... 161
7.8.5 Bit area ... 162
7.8.6 Word area ... 172
7.8.7 Parameter mapping ... 176
7.8.8 Acyclic communication via SLMP – supported functions ... 184
7.9 Connecting devices to a CC-Link IE Field Basic client with GX Works3 ... 187
7.9.1 Register the CSP+ files in GXWorks3 ... 187
7.9.2 Configuring the network settings ... 188
7.9.3 Configuring the CC-Link IE Field Basic network ... 189
7.9.4 Defining the process data mapping for CC-Link devices in the network ... 195
7.9.5 Going online with the PLC ... 196
7.9.6 Reading process data ... 198

8 Parameterizing and configuring ... 199
8.1 I/O channel parameters ... 199
8.2 PROFINET parameters ... 203
8.3 Parameters – overview ... 203

9 Operating ... 204
9.1 Process input data – overview ... 204
9.1.1 Process input data – digital modules ... 204
9.1.2 Process input data – analog modules ... 210
9.2 Process output data – overview ... 212
9.2.1 Process output data – digital modules ... 212
9.2.2 Process output data – analog modules ... 216
9.3 LED displays ... 217
9.3.1 Module LEDs TBEN-S ... 217
9.3.2 Channel LEDs – digital modules ... 218
9.3.3 Channel LEDs – analog modules ... 218
9.4 Evaluating diagnostic data ... 219
9.4.1 PROFINET diagnostics ... 219
9.5 Measurement value representation of analog modules ... 229
9.5.1 Measurement value representation – TBEN-S2-4AI ... 229
9.5.2 Measurement value representation – TBEN-S2-4AO ... 251

10 Troubleshooting ... 264

11 Maintenance ... 265
11.1 Updating the firmware via TAS ... 265
11.2 Updating the firmware via web server ... 267
11.3 Updating the firmware via FDT/DTM ... 269

12 Repair ... 272
12.1 Returning devices ... 272

13 Disposal ... 272

14 Technical data ... 273
14.1 General technical data ... 273
14.2 Techincal data – TBEN-S1-8DIP ... 275
14.3 Techincal data – TBEN-S1-8DIP-D ... 276

14.4 Technical data – TBEN-S2-8DIP 277
14.5 Technical data – TBEN-S1-8DOP 278
14.6 Technical data – TBEN-S1-4DIP-4DOP 279
14.7 Techincal data – TBEN-S1-4DXP 280
14.8 Techincal data – TBEN-S1-8DXP 281
14.9 Techincal data – TBEN-S2-8DXP 282
14.10 Technical data – TBEN-S2-4AI 283
14.10.1 Basic error at 25 °C 285
14.10.2 Measurement error total (FSR) 286
14.10.3 Example calculation: operational error limit and absolute max. total error 287
14.11 Technical data – TBEN-S2-4AO 288
15 Turck branches — contact data 289

1 About these instructions

These instructions describe the setup, functions and use of the product and help you to operate the product according to its intended purpose. Read these instructions carefully before using the product. This will prevent the risk of personal injury and damage to property. Keep these instructions safe during the service life of the product. If the product is passed on, pass on these instructions as well.

1.1 Target groups

These instructions are written for specifically trained personnel and must be read carefully by anyone entrusted with the installation, commissioning, operation, maintenance, disassembly or disposal of the device.

When using the device in Ex areas, the user must also have knowledge of explosion protection (IEC/EN 60079-14 etc.).

1.2 Explanation of symbols

The following symbols are used in these instructions:

⚠	**DANGER** DANGER indicates a hazardous situation with a high level of risk, which, if not avoided, will result in death or serious injury.
⚠	**WARNING** WARNING indicates a hazardous situation with a medium level of risk, which, if not avoided, will result in death or serious injury.
⚠	**CAUTION** CAUTION indicates a hazardous situation with a medium level of risk, which, if not avoided, will result in moderate or minor injury.
!	**NOTICE** CAUTION indicates a situation which, if not avoided, may cause damage to property.
i	**NOTE** NOTE indicates tips, recommendations and important information about special action steps and issues. The notes simplify your work and help you to avoid additional work.
▶	**MANDATORY ACTION** This symbol denotes actions that the user must carry out.
⇨	**RESULT OF ACTION** This symbol denotes the relevant results of an action.

1.3 Other documents

The following additional documents are available online at **www.turck.com**:

- Data sheet
- TBEN-Accessories list (D301367)
- Operating instructions TBEN-S2-4IOL (D301369)
- Operating instructions TBEN-S2-2COM-4DXP (D301439)
- EU Declaration of Conformity (current version)
- Notes on Use in Ex zone 2 and 22 (100022986)
- Approvals

1.4 Feedback about these instructions

We make every effort to ensure that these instructions are as informative and as clear as possible. If you have any suggestions for improving the design or if some information is missing in the document, please send your suggestions to **techdoc@turck.com**.

2 Notes on the product

2.1 Product identification

These instructions apply for the compact I/O modules of the TBEN-S product family with the specified firmware version or higher:

Device	Firmware version
TBEN-S1-8DIP	V 3.1.4.0
TBEN-S1-8DIP-D	V 3.1.4.0
TBEN-S1-8DOP	V 3.1.4.0
TBEN-S1-4DIP-4DOP	V 3.1.4.0
TBEN-S1-4DXP	V 3.4.3.0
TBEN-S1-8DXP	V 3.1.4.0
TBEN-S2-8DIP	V 3.1.0.0
TBEN-S2-8DXP	V 3.1.0.0
TBEN-S2-4AI	V 3.1.2.0
TBEN-S2-4AO	V 3.1.2.0

2.2 Scope of delivery

The delivery consists of the following:

- Closing caps for M8 or M12 sockets
- Labeling clips

2.3 Turck service

Turck supports you in your projects – from the initial analysis right through to the commissioning of your application. The Turck product database at www.turck.com offers you several software tools for programming, configuring or commissioning, as well as data sheets and CAD files in many export formats.

For the contact details of our branches worldwide, please see page [▶ 289].

3 For your safety

The product is designed according to state of the art technology. Residual hazards, however, still exist. Observe the following safety instructions and warnings in order to prevent danger to persons and property. Turck accepts no liability for damage caused by failure to observe these safety instructions.

3.1 Intended use

Due to the Turck multiprotocol technology, the compact multiprotocol I/O modules for Ethernet can be operated in the four Ethernet protocols PROFINET, EtherNet/IP, Modbus TCP and CC-Link IE Field Basic. The modules detect the bus protocol automatically during the start-up.

The TBEN-S1-devices provide eight M8 female connectors for the connection of up to eight digital sensors or actuators. The digital TBEN-S2-devices provide four M12 female connectors for the connection of up to 8 digital sensors or actuators or respectively up to 4 analog sensors and actuators.

Installation directly in the field is possible thanks to degree of protection IP65, IP67 IP67K. Devices with the Ex marking are suitable for use in the Ex area in zone 2 and zone 22.

The device must only be used as described in these instructions. Any other use is not in accordance with the intended use. Turck accepts no liability for any resulting damage.

3.2 General safety instructions

- The device must only be fitted, installed, operated, parameterized and maintained by trained and qualified personnel.
- Only use the device in compliance with the applicable national and international regulations, standards and laws.
- The device meets the EMC requirements for the industrial areas. When used in residential areas, take measures to prevent radio frequency interference.
- Change the default password of the integrated web server after the first login. Turck recommends the use of a secure password.

3.3 Notes on Ex protection

- When using the device in Ex areas, the user must have knowledge of explosion protection (IEC/EN 60079-14 etc.).
- Observe national and international regulations for explosion protection.
- Only use the device within the permissible operating and ambient conditions (see certification data and Ex approval specifications).
- The document "Notes on Use in Ex Zone 2 and 22" (ID 100022986) contains the approval data for using the device in hazardous areas. Observe the requirements in the document.

3.4 Requirements for Ex approval

- Only disconnect and connect circuits when there is no potentially explosive atmosphere or when the power supply is switched off
- Connect the metal protective cover to the equipotential bonding in the Ex area (cable cross-section: 4 mm^2).
- Ensure impact resistance in accordance with EN IEC 60079-0 – alternative measures:
  - Install the device in the TB-SG-S protective housing (ID 100014866).
  - Install the device in an area offering impact protection (e.g. in the robot arm) and attach a warning sign: "DANGER: Do not connect or disconnect the device under power."
- Do not install the device in areas critically exposed to UV light.
- Prevent risks caused by electrostatic charge.
- Provide unused male connectors with suitable sealing or blanking caps in order to ensure degree of protection IP65, IP67 or IP69K The tightening torque for the M4 screws is 0.5 Nm.

4 Product description

The devices are designed in a fully encapsulated housing with degree of protection IP65/IP67/IP69K. For the connection of digital sensors and actuators, the devices provide four or eight input or output channels or respectively eight digital I/O channels which can be used as in- or output without configuration. For the connection of analog sensors and actuators, the analog devices provide 4 analog in- or output channels. The connectors for the digital I/Os are designed as M8 or M12 sockets, the connectors for the analog I/Os as M12 sockets. For the connection to Ethernet connection the devices provide 2 M8 sockets. The power supply connectors are designed as 4-pole M8 connectors.

4.1 Device overview

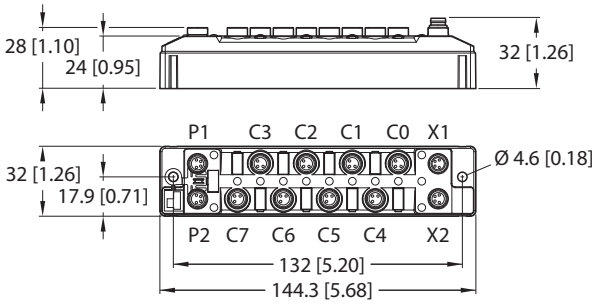

mm [Inch]

Fig. 1: TBEN-S1-… – dimensions

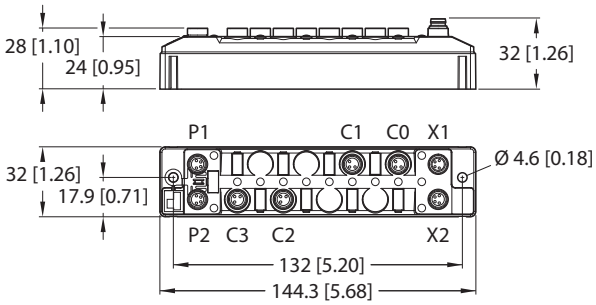

mm [Inch]

Fig. 2: TBEN-S1-4DXP – dimensions

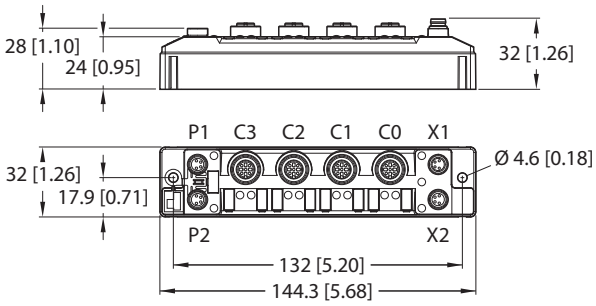

mm [Inch]

Fig. 3: TBEN-S2… – dimensions

4.1.1 Display elements

The device is provided with the following LEDs:

- Power supply voltage
- Group and bus error
- Status
- Diagnostics

4.1.2 Block diagrams

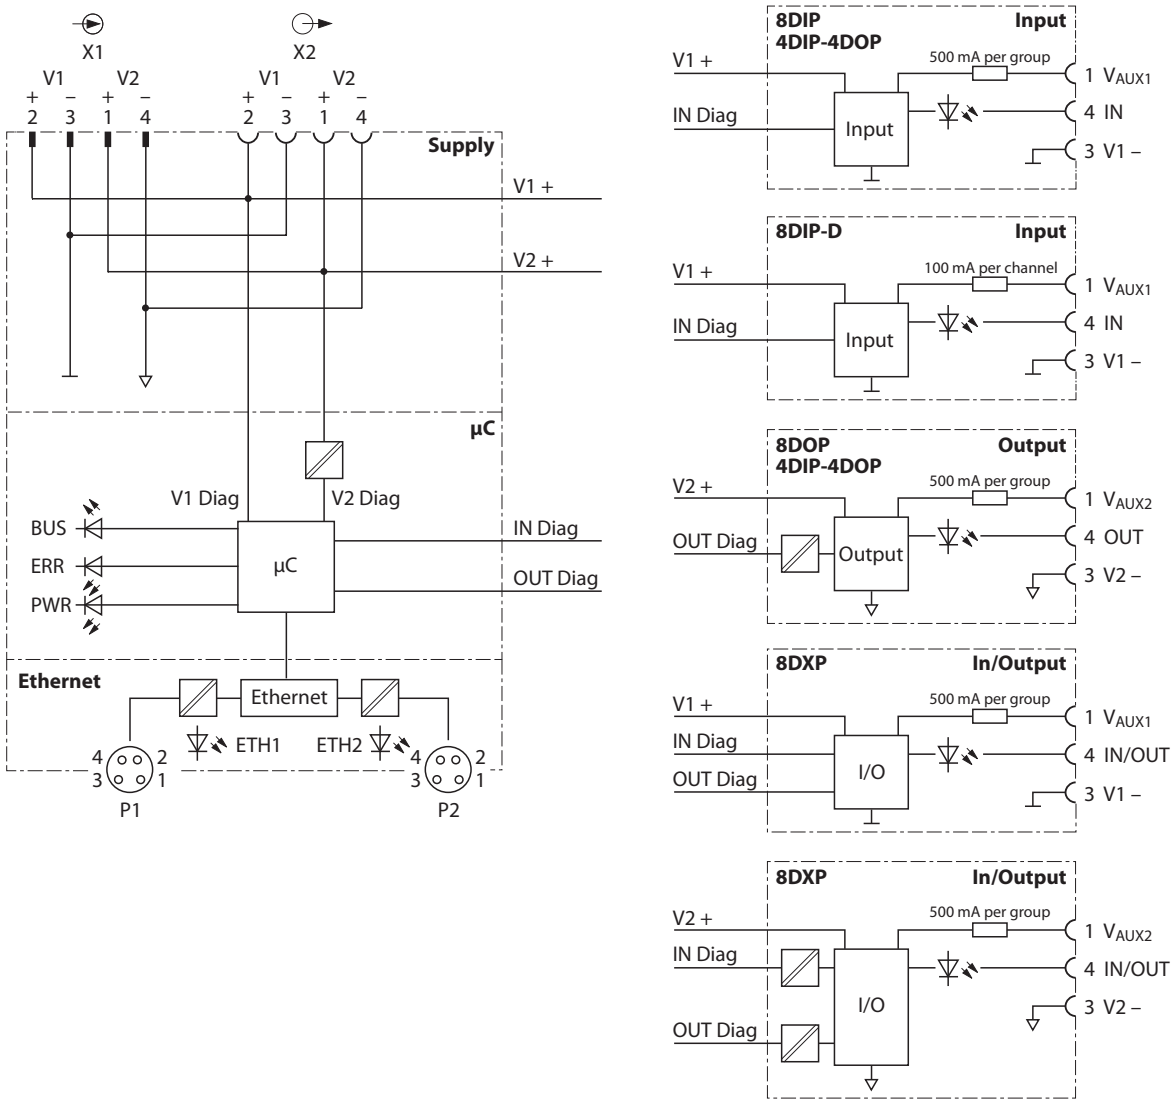

Fig. 4: Block diagram – digital modules

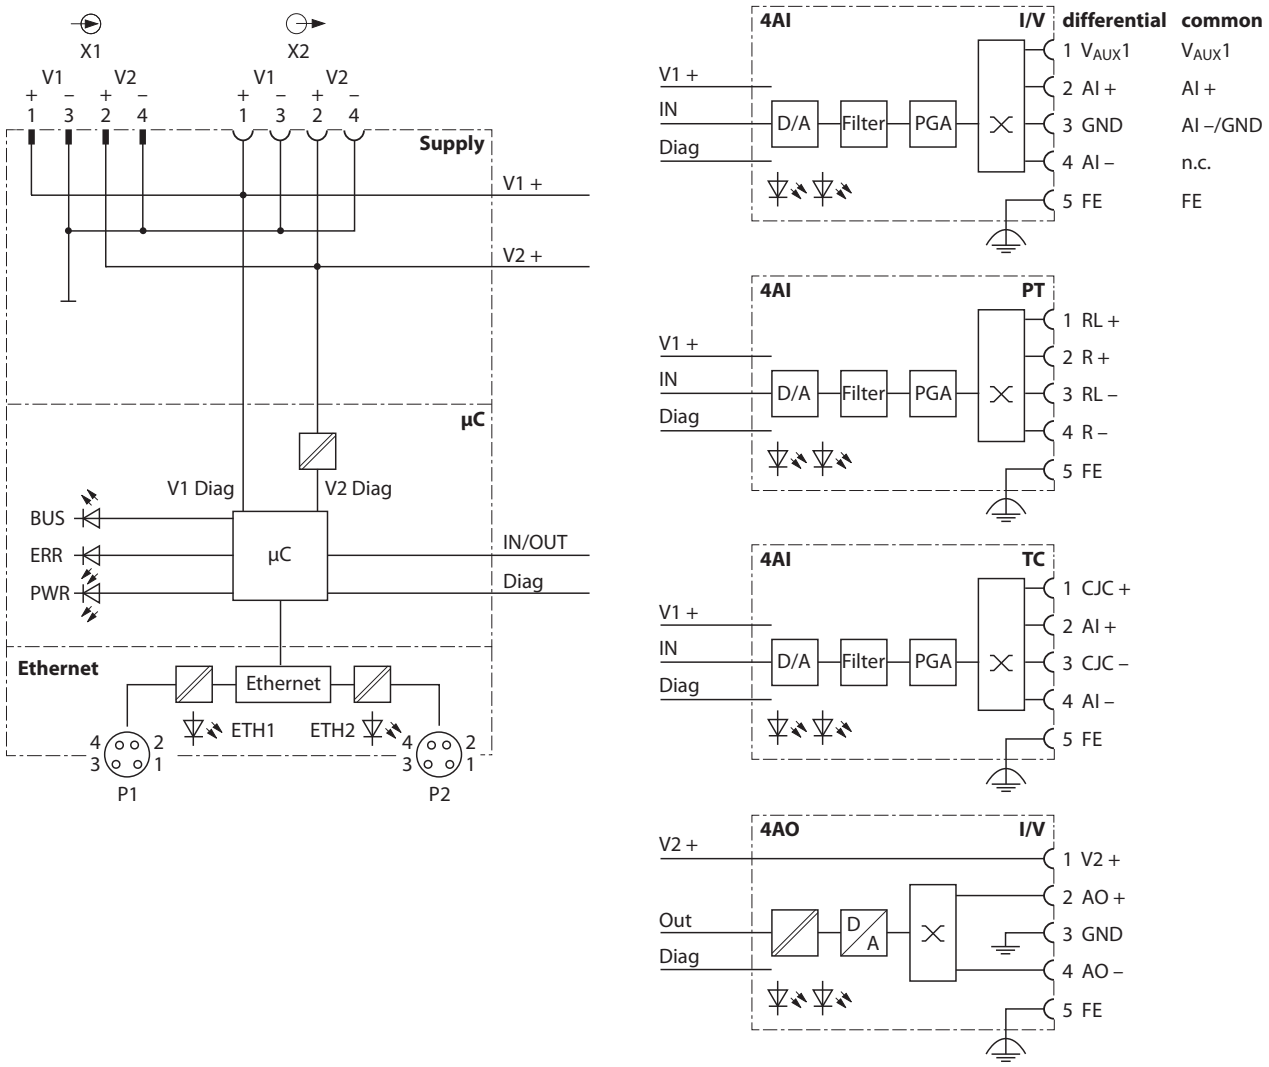

Fig. 5: Block diagram – analog modules

4.2 Properties and features

- Fiber-glass reinforced housing
- Shock and vibration tested
- Fully potted module electronics
- Degree of protection IP65/IP67/IP69K
- 4-pole M8-connectors for voltage supply
- Tw 4-pole M8 connectors for the connection to Ethernet
- Digital modules with up to 8 digital in-/outputs
- Analog in- and output modules with configurable channels
- Group or channel input diagnostics
- Separated voltage groups
- LED displays and diagnostics
- Multiprotocol: PROFINET device, EtherNet/IP device, Modbus TCP server, CC-Link Field Basic server
- Integrated Ethernet-switch for building up a line-topology
- Transmission speed 10 Mbps/100 Mbps
- Integrated web server
- BEEP (Backplane Ethernet Extension Protocol) [▸ 17]
- PROFINET:
  - Conformance Class B PA
  - Conformity according to PROFINET specification V2.35
  - System redundancy S2
  - Network load class 3
- EtherNet/IP:
  - Predefined in- and output assemblies

4.3 Functions and operating modes

4.3.1 Multiprotocol technology

The device can be used in the following Ethernet protocols:

- PROFINET
- EtherNet/IP
- Modbus TCP
- CC-Link IE Field Basic

The required Ethernet protocol can be detected automatically or determined manually.

Automatic protocol detection

A multiprotocol device can be operated without intervention of the user (which means, without changes in the parameterization) in all of the three Ethernet protocols mentioned.

During the system start-up phase (snooping phase), the module detects which Ethernet protocol requests a connection to be established and adjusts itself to the corresponding protocol. After this an access to the device from other protocols is read-only.

Manual protocol selection

The user can also define the protocol manually. In this case, the snooping phase is skipped and the device is fixed to the selected protocol. With the other protocols, the device can only be accessed read-only.

Protocol-dependent functions

The device supports the following Ethernet protocol-specific features:

PROFINET

- Fast Startup (FSU), prioritized startup
- Topology detection
- Address allocation with LLDP
- Media redundancy protocol (MRP)
- S2 redundancy

EtherNet/IP

- QuickConnect (QC)
- Device Level Ring (DLR)

Ethernet ports used

Port	Protocol
00022	SFTP
00053	DNS TCP
00067	DHCP
00080	HTTP
00093	PROFINET DCP
00502	Modbus TCP
58554	Turck Services

4.3.2 Digital modules – extended digital functions

In PROFINET, the extended digital functions are configured via device parameterization via GSDML file. In EtherNet/IP, the functions are provided in special catalog files for RSLogix from Rockwell Automation. In Modbus TCP the extended functions are configured via Modbus registers. In addition to that, the functions are configurable via the device's web server or the device DTMs.

The digital TBEN modules provide the following extended digital functions:

Digital filter

The function ”digital filter” extends the filter time of digital inputs to 3 ms. Digital input signals can thus be reliably detected even when short-term interfering signals in rough environments occur.

Impulse stretch

The function "impulse stretch" allows a detection of short input signals in longer PLC cycle times by means of signal extension.

Counter function

A counter is always available on the first input channel.

- 32-bit counter
- Rotation speed monitoring up to 10 kHz without rotational direction detection
- Detection of many pulses in short intervals
- Detection of one track

PWM function

The PWM function is provided at the channels 3 (except for TBEN-S…-4DIP-4DOP) and 7.

- Applications: Dimming of indicator lights, LEDs etc.
- Fix frequency setting of 100 Hz
- Mark-to-space ratio: 0…100 %
  0: off (digital 0)
  100: on (digital 1)
- Operational range: 10…90 %
- Accuracy (mark-to-space ratio in operational range) 5 %
- Duty-Cycle (mark-to-space ratio): 0…100 in %,
  default 0,
  example: 20: Duty cycle 20 to 80 = ratio "on" to "off

Input latch function

In addition to the "impulse stretch" the "input latch" provides another possibility to extend digital input signals. Rising edges at the digital inputs are hold in a latch register as long as they are acknowledged by the PLC. The minimum pulse duration for detecting signals is 1 ms.

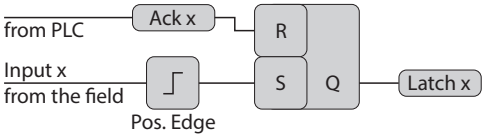

R	S	Q	State
0	0	x	Hold
0	1	1	Set
1	0	0	Reset
1	1	1	Reset

Fig. 6: Input latch function

In PROFINET, the extended digital functions are configured via device parameterization via GSDML file. In Modbus TCP an EtherNet/IP a configuration is not necessary. The process values can directly be used.

4.3.3 Backplane Ethernet Extension Protocol (BEEP)

BEEP (Backplane Ethernet Extension Protocol) is a technology that is available in many digital Turck multi protocol block I/O modules. BEEP allows a network, of up to 33 participants (one controller and 32 devices) or 480 bytes of data, to appear to the PLC as a single device on a single connection using a single IP address.

Detailed information about BEEP can be found in the document "BEEP – Backplane Ethernet Extension Protocol" (ID **100002454**).

4.3.4 Turck Field Logic Controller function (FLC ARGEE)

The device supports logic processing via the "Turck Field Logic Controller (FLC ARGEE)" function. This enables the device to implement small to medium-sized control tasks in order to reduce the load of the central controller. The FLCs can be programmed in the ARGEE engineering environment.

The ARGEE programming software can be downloaded free of charge from **www.turck.com**.

The "SW_ARGEE_Environment_Vx.x.zip" file also contains the documentation for the programming environment as well as the software.

4.4 Possible Ethernet network structures

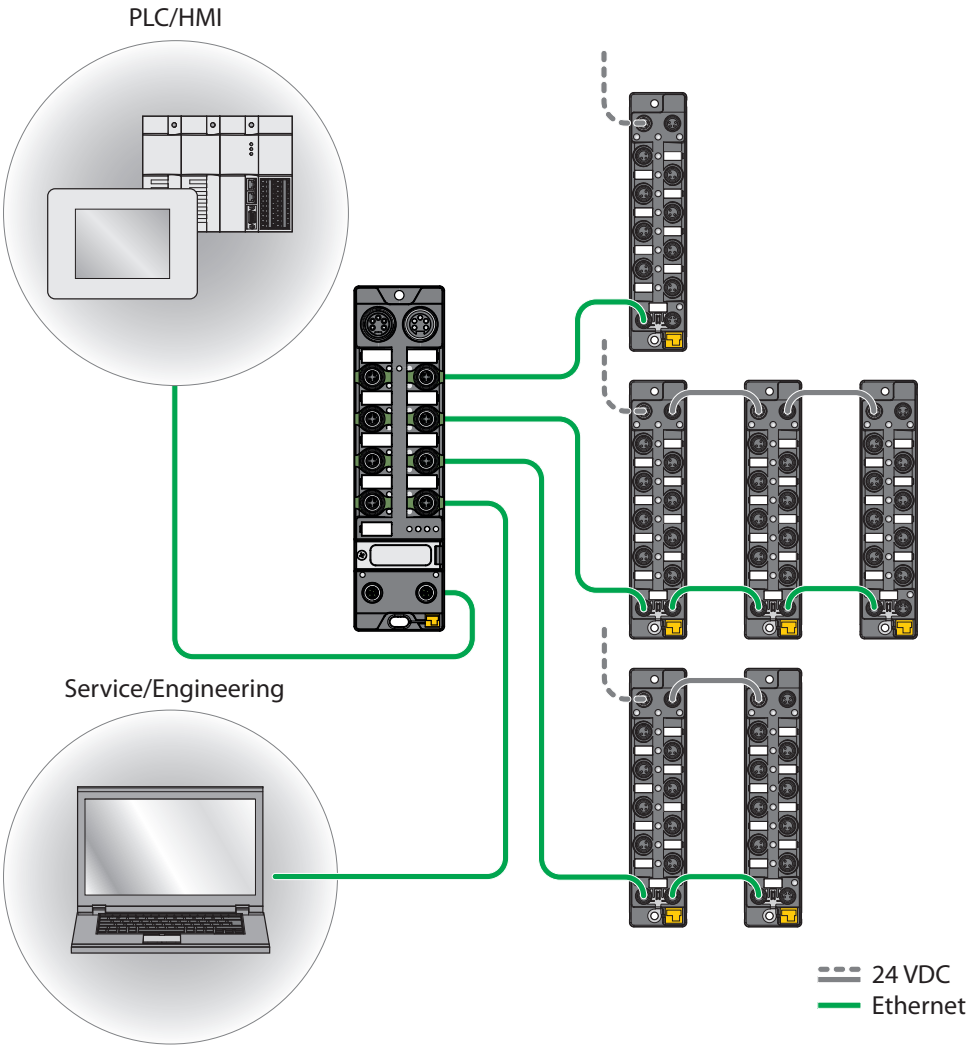

Fig. 7: Network structure, example 1

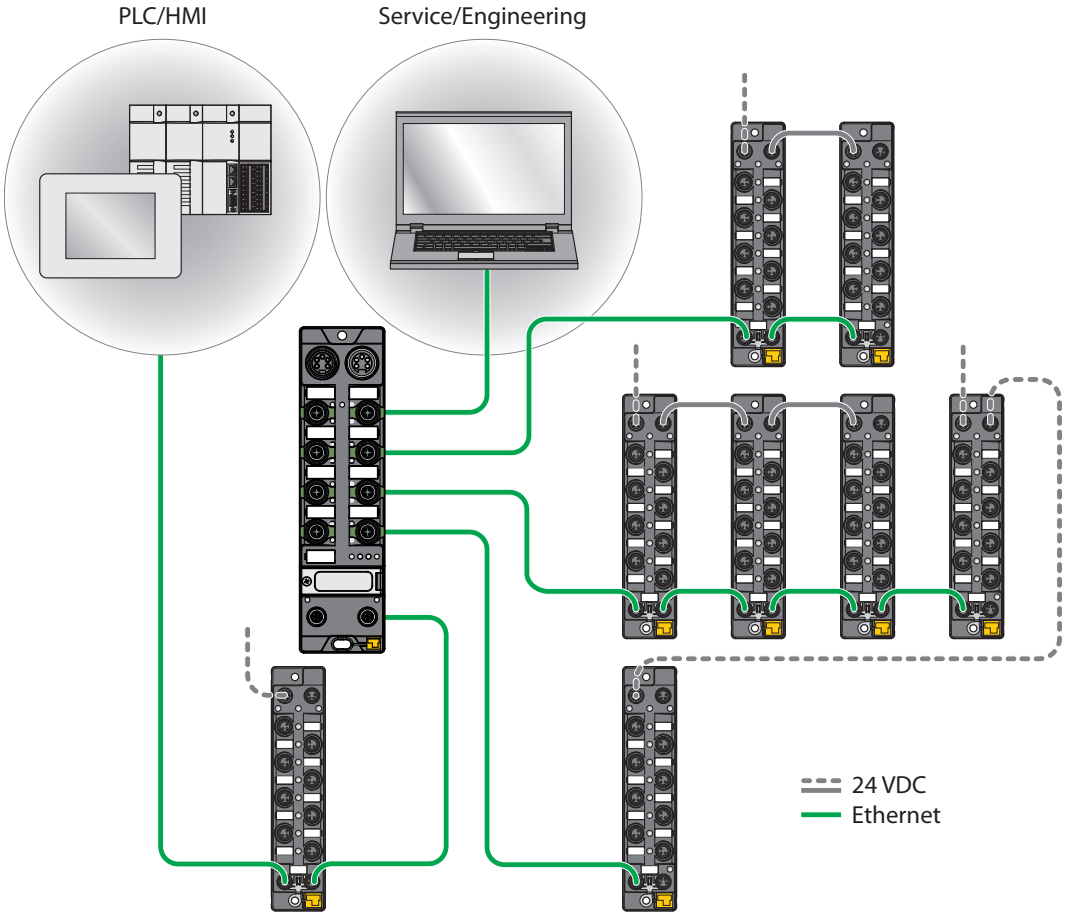

Fig. 8: Network structure, example 2

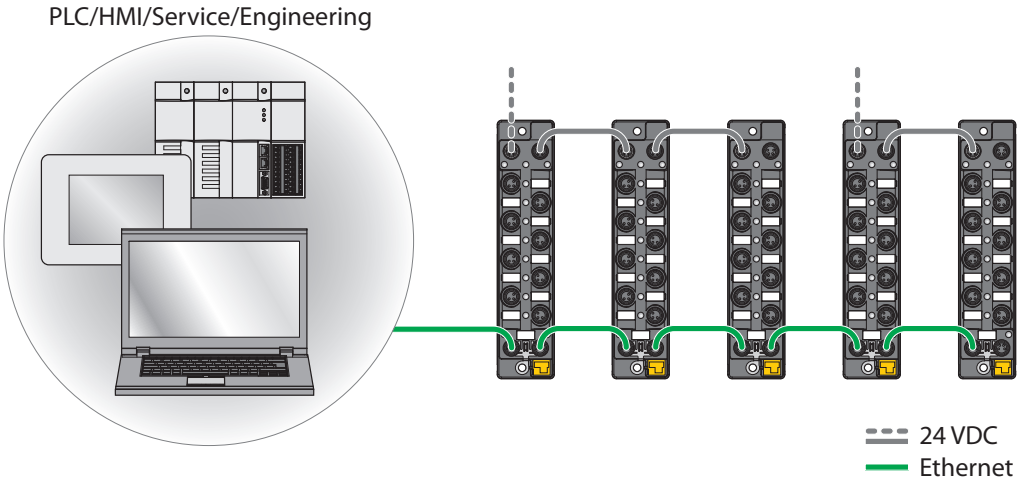

Fig. 9: Network structure, example 3

4.4.1 Ethernet daisy chain - max. number of connected modules

Prerequisites:

- Optimized network Only TBEN-S-modules in the daisy chain, no additional switches, no third-party devices
- Exchange of pure cyclical process data, no acyclical data

Cycle time	Maximum number of TBEN-S modules
1 ms	21
2 ms	42

NOTE
Deviations from the specification above may lead to a reduction of possible TBEN-S modules connected to one daisy chain.

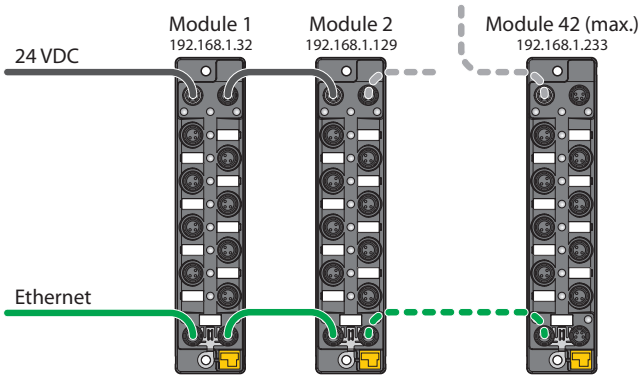

Fig. 10: Daisy chain

4.5 Technical accessories

Optionally available accessories for mounting, connecting and parameter setting can be found in the Turck product database at www.turck.com. Accessories are not supplied with the device.

5 Installing

The device can be mounted on a DIN rail according to EN 60715 (TS35) or screwed onto an even mounting plate. Both composite and individual assembly are possible.

5.1 Installing a device in zone 2 and zone 22

The devices can be used in combination with the TB-SG-S (ID 100014866) protective housing set in zone 2 and zone 22. Combined mounting is not possible in zone 2 and zone 22.

DANGER
Potentially explosive atmosphere
Risk of explosion due to spark ignition
Operation in zone 2 or zone 22:

- Only install the device if there is no potentially explosive atmosphere present.
- Observe the requirements for Ex approval.

- Screw on the housing. Use a Torx T8 screwdriver.
- Place the device on the base plate of the protective housing and fasten both together on the mounting plate, see Mounting plate fixing.
- Connect the device, see [▶ 29].
- Fit the housing cover and screw on as shown in the following figure. The tightening torque for the Torx T8 screw is 0.5 Nm.

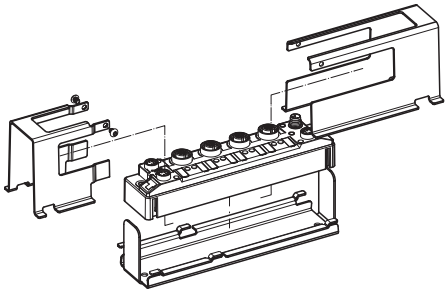

Fig. 11: Installing the device in the TB-SG-S protective housing

5.2 Combine TBEN-S modules for mounting

The modules can be mounted individually or in combination as a group of modules on a mounting plate or DIN rail.

5.2.1 Combine TBEN-S modules for composite mounting to a mounting plate

The TBNN-S0-STD connector serves for composite mounting of TBEN-S modules on a mounting plate:

- Unlock the cover flap at the connector with a flat tool (e.g. screw driver) (1).
- Open the flap completely (2).
- Connect the module and the connector so that the spring of the connector is inserted into the groove of the TBEN-S module (3).
- Flap back the cover and close it (4). It has to engage audibly.
- Repeat steps 1 to 4 until the module group in complete.

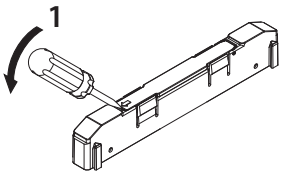

Fig. 12: Step 1

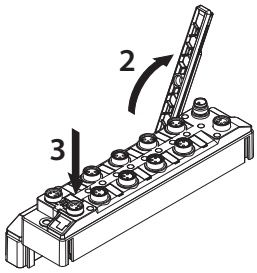

Fig. 13: Step 2

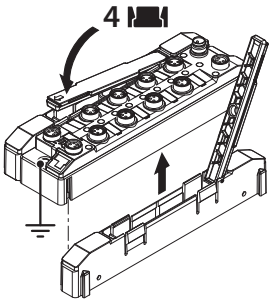

Fig. 14: Step 3

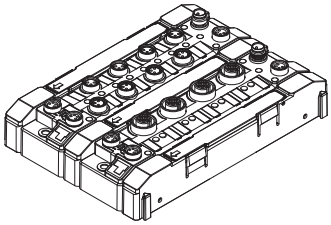

Fig. 15: Step 4

5.2.2 Combine TBEN-S modules for single and composite mounting on a DIN rail

The TBNN-S0-DRS adapter serves for single and composite mounting of TBEN-S modules on a DIN rail.

NOTICE
Incorrect mounting
Incorrect grounding may cause malfunction

- Align the adapters so that the arrow on the locking lever points in the direction of the M8 Ethernet sockets.
- Connect the grounding contact of the adapter with the grounding contact of the module.

- Unlock the cover flap at the connector with a flat tool (e.g. screw driver) (1).
- Open the flap completely (2).
- Connect the module and the connector so that the spring of the connector engages in the groove of the module (3).
- Flap back the cover and close it (4). It has to engage audibly.
- Repeat steps 1 to 4 until the module group in complete.

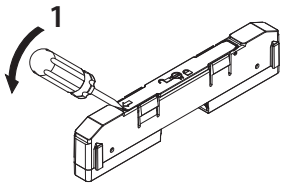

Fig. 16: Step 1

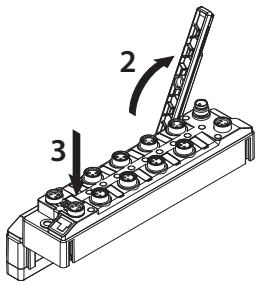

Fig. 17: Step 2

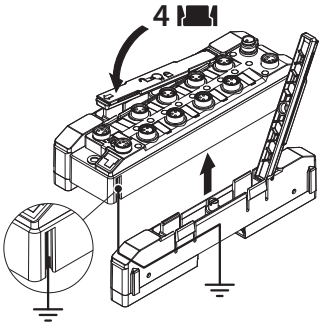

Fig. 18: Step 3

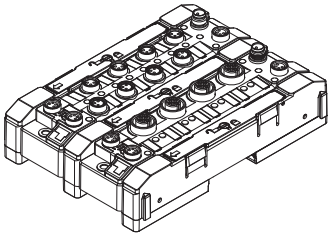

Fig. 19: Step 4

5.3 Attach TBEN-S modules to a mounting plate

- Fasten the module or module composite to a mounting plate with two M4 screws per device. The maximum tightening torque for the M4 screws is 1.3 Nm
- Avoid mechanical stresses.
- Optional: Ground the device.

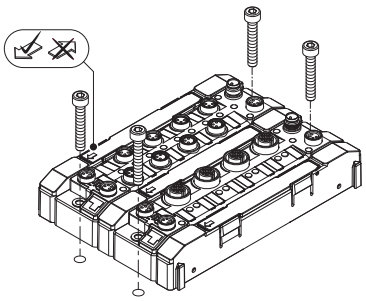

Fig. 20: Mounting the device on a mounting plate

5.4 Mounting TBEN-S modules on a DIN rail (TS35)

- For composite or single mounting: Mount connectors to the left and to the right of the module.
- Place the module or module composite on the DIN rail so that the cut-outs in the connector enclose the DIN rail (1).
- Avoid mechanical stresses.
- Close the rotating bolt of the connector with a screwdriver (2).
- Optional: Ground the device.

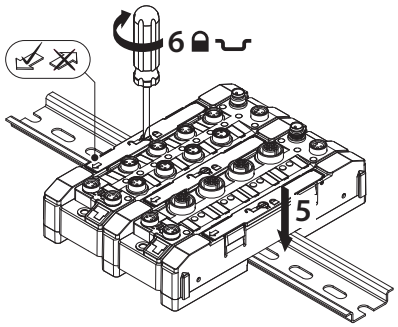

Fig. 21: Mounting a module composite on a DIN rail

NOTE
To increase stability on the DIN rail, end brackets can be mounted on the right and left of the module or the module combination.

5.5 Outdoor device installation

The device is UV resistant in accordance with DIN EN ISO 4892-2. Direct sunlight may cause material wear and changes in color. The mechanical and electrical properties of the device are not impaired.

- To prevent material wear and color changes: Protect the device from direct sunlight with protective panels.

5.6 Grounding the device

5.6.1 Equivalent wiring diagram and shielding concepts

The equivalent circuit diagrams and shielding concepts of the TBEN-S module variants are shown in the following figures:

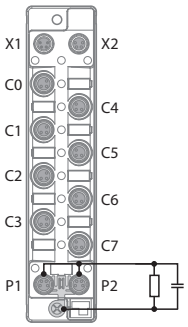

Fig. 22: TBEN-S1 digital modules – equivalent wiring diagram and shielding concept

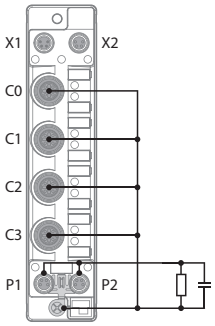

Fig. 23: TBEN-S2 digital modules – equivalent wiring diagram and shielding concept

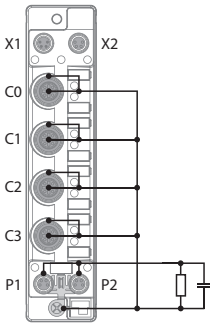

Fig. 24: TBEN-S2 analog modules – equivalent wiring diagram and shielding concept

5.6.2 Fieldbus and I/O level shielding

The fieldbus and the I/O level of the TBEN-S modules can be grounded separately.

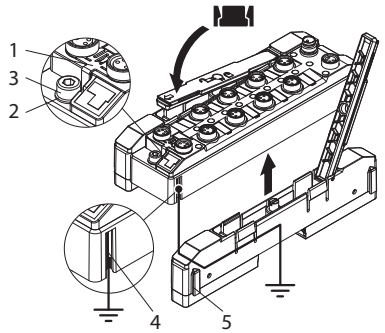

Fig. 25: Fieldbus and I/O level shielding

The grounding ring (2) and the grounding contact (4) are connected to each other and form the module grounding. The shielding of the I/O level is permanently connected to the module grounding. The module grounding is only connected to the reference potential of the installation when the module is mounted.

Shielding concept of the I/O modules (I/O level)

In the case of direct mounting on a mounting plate, the module grounding is connected to the reference potential of the system via the metal screw in the lower mounting hole (3). If no module grounding is desired, the electrical connection to the reference potential must be interrupted, e.g. by mounting the device on an insulated mounting plate.

In the case of DIN rail mounting, the module earthing is led through the side grounding contact (4) via connector TBNN-S0-DRS to the top-hat rail and connected to the reference potential of the installation. If no module grounding is desired, the electrical connection to the reference potential must be interrupted, e.g. by removing the grounding spring on the TBNN-S0-DRS.

Shielding concept of the fieldbus level

On delivery, a grounding clip (1) is provided on the connectors for the fieldbus connection (P1, P2).

In the case of direct mounting on a mounting plate, the shielding of the fieldbus cables is routed directly to the module grounding via the ground clip and the metal screw in the lower mounting hole. In the case of DIN rail mounting, the shielding of the fieldbus cables is connected to the module grounding by the metal screw. The metal screw is supplied with the TBNN-S0-DRS connector.

If direct grounding of the fieldbus shield is not desired, the grounding clip (1) must be removed. In this case, the fieldbus shield is connected to the module ground via an RC element.

5.6.3 Grounding the device – I/O and fieldbus level

The grounding of the fieldbus level can either be connected directly via the grounding clip (1) or connected and routed indirectly via an RC element to the grounding of the I/O level. If the fieldbus grounding is to be routed via an RC element, the grounding clip must be removed.

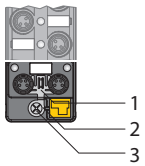

Fig. 26: Grounding clip (1)

Removing the grounding clip: disconnect the direct grounding of the fieldbus level

- ▶ Use a slim slotted screwdriver in order to lift up and remove the grounding clamp.

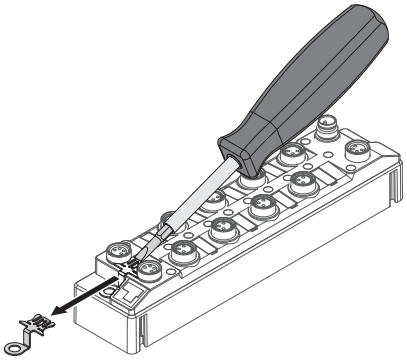

Fig. 27: Use a flat slotted screwdriver to push the grounding clip forwards and remove it.

Mounting the grounding clip: grounding the fieldbus level directly

- ▶ Place the grounding clamp between the fieldbus connectors by using a screwdriver in such way that the clamp contacts the metal housing of the connectors.
- ⇨ The shielding of the fieldbus cables is connected to the grounding clip.

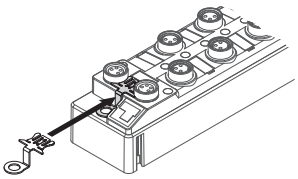

Fig. 28: Mounting the grounding clip

5.6.4 Grounding the device – mounting on a DIN rail

- ▶ For mounting on a DIN rail with TBNN-S0-DRS connectors: Screw the enclosed metal screw into the lower mounting hole of the TBEN-S module.
- ⇨ The shielding of the M8 flanges of the I/O level is connected to the reference potential of the installation via the DIN rail and the connector.
- ⇨ With mounted grounding clip: The shielding of the fieldbus is connected to the reference potential of the installation via the module grounding of the I/O level.

5.6.5 Grounding the device – mounting on a mounting plate

- ▶ For mounting onto a mounting plate: Fix the TBEN-S module with an M4 metal screw through the lower mounting hole.
- ⇨ The shielding of the M8 flanges for the I/O level is connected to the reference potential of the installation via the M4 metal screw.
- ⇨ With mounted grounding clip: The shielding of the fieldbus is connected to the reference potential of the installation via the module grounding of the I/O level.

6 Connecting

NOTICE
Penetration of liquids or foreign objects due to leaking connections
Loss of degree of protection IP65/IP67/IP69K possible

- Tighten M8 male connectors with a tightening torque of 0.4 Nm.
- Tighten M12 male connectors with a tightening torque of 0.6 Nm.
- Only use accessories that guarantee the protection class.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

6.1 Connecting a device in zone 2 and zone 22

DANGER
Explosive atmosphere
Explosion due to ignitable sparks
For use in Zone 2 and Zone 22:

- Only disconnect and connect circuits when there is no potentially explosive atmosphere or when the power supply is switched off.
- Only use connecting cables that are approved for use in potentially explosive atmospheres.
- Use all connectors or seal them with screw caps or blind caps. The tightening torque for the screw caps is 0.5 Nm.
- Observe requirements for Ex approval.

6.2 Connecting a device to Ethernet

The device is provided with an autocrossing switch with two 4-pin M8 Ethernet plug connectors for connecting to Ethernet.

NOTICE
Reversing the Ethernet and power supply cables
This may destroy the module electronics

- When connecting the Ethernet and supply cables make sure that the correct M8 plug connectors are used:
  - Ethernet: P1 and P2
  - power supply: X1 and X2



Fig. 29: M8 Ethernet plug connectors for connecting the fieldbus

- Connect the device to the fieldbus according to the pin assignment below.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

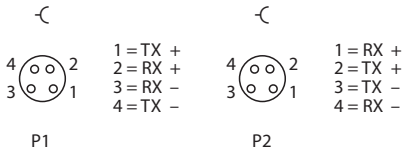

Fig. 30: Ethernet connections — pin assignment of P1 and P2

6.2.1 Applications with QuickConnect (QC) and Fast Start Up (FSU)

- Do not use crossover cables in applications with QuickConnect (QC) and and Fast Start Up (FSU) applications.
- Connect incoming Ethernet cables to P1.
- Connect outgoing Ethernet cables to P2.

6.3 Connecting the supply voltage

The device is provided with two 4-pin M8 plug connectors for connecting the power supply. V1 and V2 are galvanically isolated.

NOTICE
Reversing the Ethernet and power supply cables
This may destroy the module electronics

- When connecting the Ethernet and supply cables make sure that the correct M8 plug connectors are used:
  - Ethernet: P1 and P2
  - power supply: X1 and X2



Fig. 31: M8 connector for connecting the supply voltage

- Connect the device to the power supply according to the pin assignment shown below.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

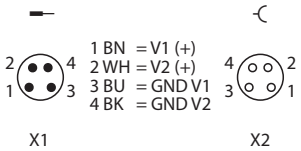

Fig. 32: Pin assignment power supply connectors

	Meaning
X1	Power feed
X2	Continuation of the power to the next node
V1	Power supply 1 (incl. supply of electronics)
V2	Power supply 2

NOTE
The system voltage (V1) and the load voltage (V2) are fed in and monitored separately. In case of an undercut of the admissible voltage, the connectors are switched-off according to the module's supply concept. In case of an undervoltage at V2, the LED PWR changes from green to red. In case of an undervoltage at V1, the LED is turned off.

6.3.1 Supply concept

All TBEN-S-modules are supplied via two separate voltages V1 and V2. The I/O-channels are therefore consequently separated into the different potential groups "switchable I/O" (supplied through V2) and "non-switchable" I/O (supplied through V1).

V1 = supply of the module electronics and the respective slots

V2 = supply of the respective slots

Digital modules

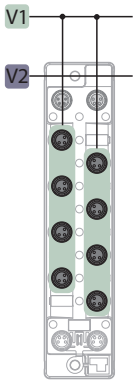

Fig. 33: Supply TBEN-S1-8DIP/ TBEN-S1-8DIP-D

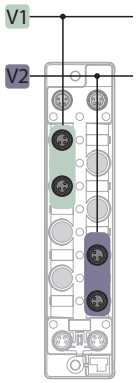

Fig. 34: Supply TBEN-S1-4DXP

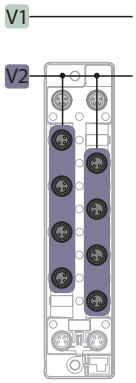

Fig. 35: Power supply TBEN-S1-8DOP

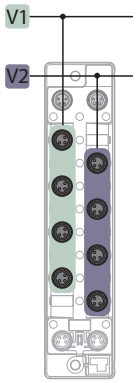

Fig. 36: Power supply TTBEN-S1-4DIP-4DOP/ TBEN-S1-8DXP

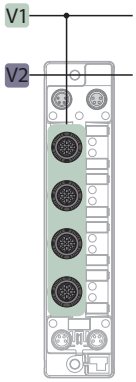

Fig. 37: Power supply TBEN-S2-8DIP

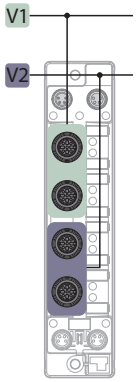

Fig. 38: Power supply TBEN-S2-8DXP

Analog modules

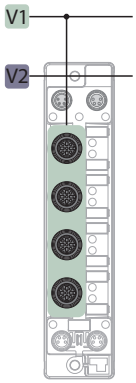

Fig. 39: Power supply TBEN-S2-4AI

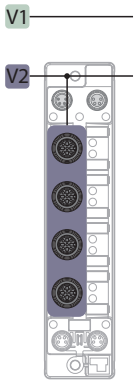

Fig. 40: Power supply TBEN-S2-4AO

6.4 Connecting digital sensors and actuators

Depending on the device type, the devices provide 3-pin M8 connectors or 5-pin M12 connectors for connecting digital sensors and actuators.

TBEN-S1-…



Fig. 41: M8 connectors for connecting digital sensors and actuators

- Connect the sensors and actuators to the device according to the pin assignment shown below.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

TBEN-S1-8DIP/TBEN-S1-8DIP-D



1 = V_{AUX1}
3 = GND V1
4 = Signal In

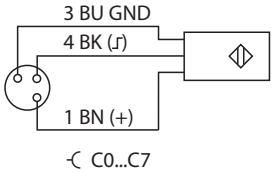

TBEN-S1-8DOP



1 = V_{AUX2}
3 = GND V2
4 = Signal Out

2-wire connection:

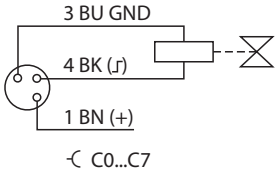

3-wire connection:

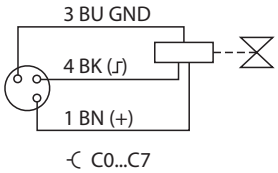

With 3-wire connection, the actuator is supplied via pin 1 but is not switched.

TBEN-S1-4DIP-4DOP

Inputs



1 = V_{AUX1}
3 = GND V1
4 = Signal In

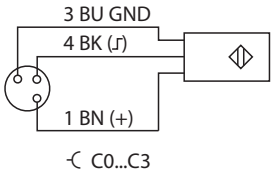

Outputs



1 = V_{AUX2}
3 = GND V2
4 = Signal Out

2-wire connection:

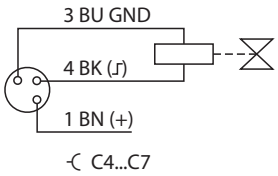

3-wire connection:

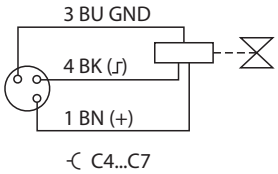

With 3-wire connection, the actuator is supplied via pin 1 but is not switched.

TBEN-S1-8DXP



1 = V_{AUX1}
3 = GND V1
4 = Signal In/Out

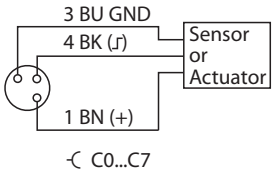



1 = V_{AUX2}
3 = GND V2
4 = Signal In/Out



Fig. 42: TBEN-S1-4DXP, M8 connector for connecting digital sensors and actuators, C0 and C1



Fig. 43: TBEN-S1-4DXP, M8 connector for connecting digital sensors and actuators, C2 and C3

TBEN-S1-4DXP



1 = V_{AUX1}
3 = GND V1
4 = Signal In/Out

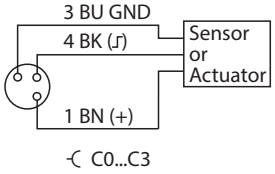



1 = V_{AUX2}
3 = GND V2
4 = Signal In/Out

TBEN-S2-…

Fig. 44: M12 connectors for connecting digital sensors and actuators

- Connect the sensors and actuators to the device according to the pin assignment shown below.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

TBEN-S2-8DIP



1 = $V_{aux}1$
2 = Signal In
3 = GND V1
4 = Signal In
5 = FE

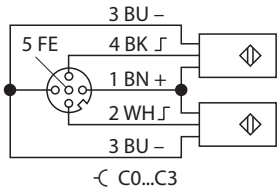

Supply VAUX (pin 1) switchable per connector

TBEN-S2-8DXP



1 = $V_{aux}1$
2 = Signal In/Out
3 = GND V1
4 = Signal In/Out
5 = FE

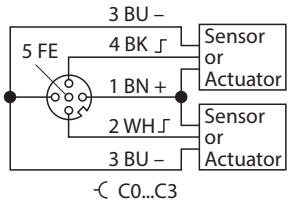



1 = $V_{aux}2$
2 = Signal In/Out
3 = GND V2
4 = Signal In/Out
5 = FE

Supply VAUX (pin 1) switchable per connector

6.5 Connecting analog sensors and actuators

The device has 5-pin M12 connectors for connecting digital sensors and actuators.



Fig. 45: M12 connectors for connecting analog sensors and actuators

- ▶ Connect the sensors and actuators to the device according to the pin assignment shown below.
- ▶ Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

TBEN-S2-4AI – current/voltage

Differential



1 = $V_{aux}1$
2 = AI +
3 = GND V1
4 = AI –
5 = FE
Flange = FE



1 = $V_{aux}1$
2 = AI+
3 = GND
4 = AI–
5 = FE
Flange = FE

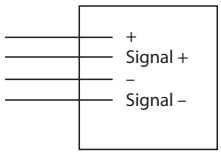

Connection of differential signals **with** connection to ground:
An internal 10 kΩ pull-down resistor between AI- (pin 4) and ground (pin3) defines the common mode voltage and prevents the common mode voltage from drifting away from ground. Compensation currents via AI- (Pin 4) might influence measured value.

- ▶ Parameterize TBEN-S2-4AI as follows:
  Current wiring type = differential

Connection of differential signals **without** connection to ground:
Connection of sensors with a high output impedance (e.g. unbuffered Wheatstone bridge). The absolute potential can float against the measurement range limits (common mode voltage max. ±18 V). This will with effect of reduced relative range. This may lead to the fact that no measurement is possible.

- ▶ Take precautions to prevent the common mode voltage from drifting away from ground.
- ▶ Parameterize TBEN-S2-4AI as follows:
  Current wiring type = differential without ground
- ⇨ The internal 10 kΩ pull-down resistor is deactivated.

Single ended



1 = $V_{aux}1$
2 = AI +
3 = AI –/GND V1
4 = n.c.
5 = FE
Flange = FE

Connection of sensors with common ground
A- and GND are internally bridged.

- ▶ Parameterize TBEN-S2-4AI as follows:
  Current wiring type = single ended

Single ended

2-wire connection

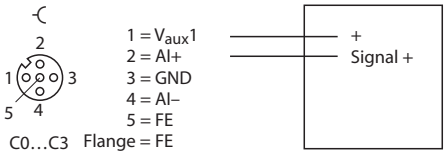

3-wire connection

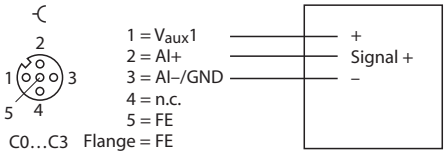

Connection examples – current/voltage

2-wire (current)

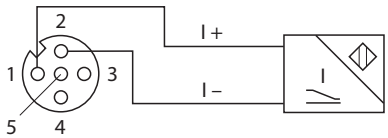

2-wire (voltage)

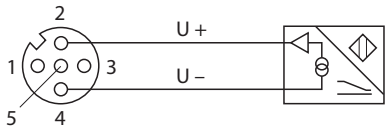

3-wire (current/voltage)

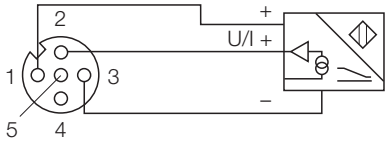

4-wire (current/voltage)

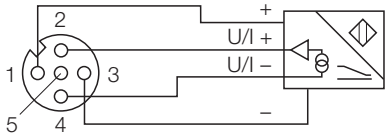

4-wire (current/voltage) with external power supply

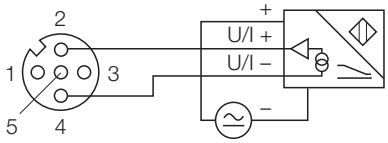

NOTE
The 2 wire and 3 wire connection are only possible in the single ended voltage or current measurement mode.

TBEN-S2-4AI – thermocouple

NOTICE
Wrong channel parameterization (operation mode)
Possible destruction of thermo couples

- Please observe correct channel parameterization.
- Do not connect thermo couples to channels which are parameterized as voltage or respectively current input.

- Connect the analog sensors and actuators to the device according to the pin assignment.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

Pin assignment



1 = CJC +
2 = AI +
3 = CJC –
4 = AI –
5 = FE
Flange = FE

TBEN-S2-4AI – resistance/RTD

NOTICE
Wrong channel parameterization (operation mode)
Possible destruction of RTDs/resistances

- Please observe correct channel parameterization.
- Do not connect RTDs or resistances to channels which are parameterized as voltage or respectively current input.

- Connect the analog sensors and actuators to the device according to the pin assignment.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

Pin assignment



1 = RL +
2 = R +
3 = RL –
4 = R –
5 = FE
Flange = FE

NOTICE
Wrong pin assignment for 2- or 3-wire connection
Inaccurate measurements possible

- Connect only the necessary signals in 2- or 3-wire mode.
- Do not connect unused pins as shown in the respective wiring diagram.

Connection examples	Resistance/RTD
2-wire connection	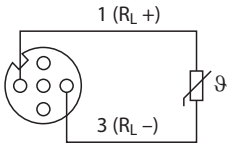
3-wire connection	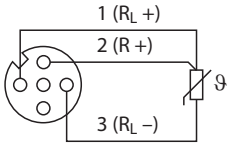
4-wire connection	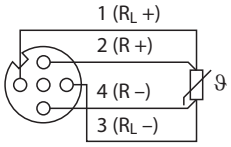

TBEN-S2-4AO – current/voltage

- Connect the analog sensors and actuators to the device according to the pin assignment shown below.
- Provide unused male connectors with suitable sealing or blanking caps. The tightening torque for the M4 screws is 0.5 Nm.

Single ended	
	1 = V2 + 2 = AO + 3 = GND V2 4 = AO –/GND V2 5 = FE Flange = FE

7 Commissioning

7.1 Adjusting network settings

NOTE
Changes to network settings are only applied after restarting the device.

The network settings can be adapted via TAS (Turck Automation Suite), the web server, the DTM, a DHCP server or PROFINET DCP.

7.1.1 Adjusting network settings via TAS (Turck Automation Suite)

In the delivery state the device has the IP address 192.168.1.254. The IP address can be set via TAS (Turck Automation Suite). TAS is available free of charge at www.turck.com.

- Connect the device to a PC via the Ethernet interface.
- Open TAS.
- Click **Scan network**.

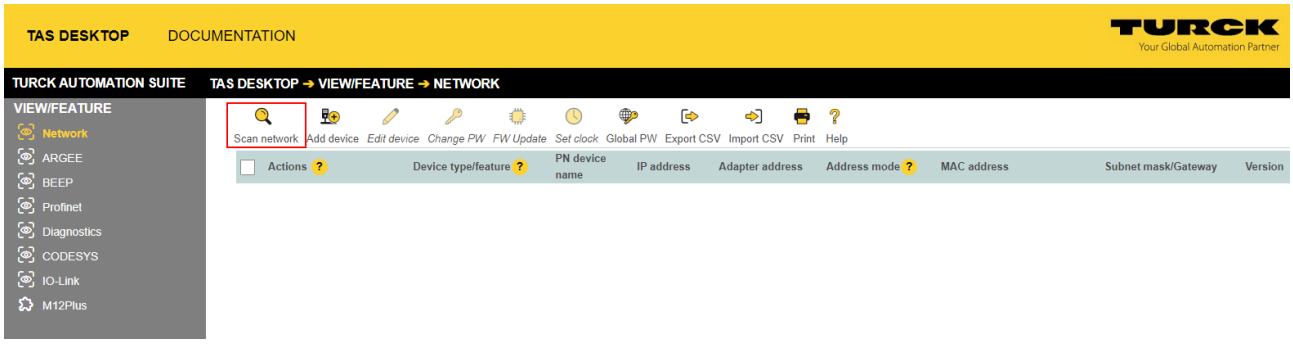

Fig. 46: Home screen in TAS

⇨ TAS shows the connected devices.

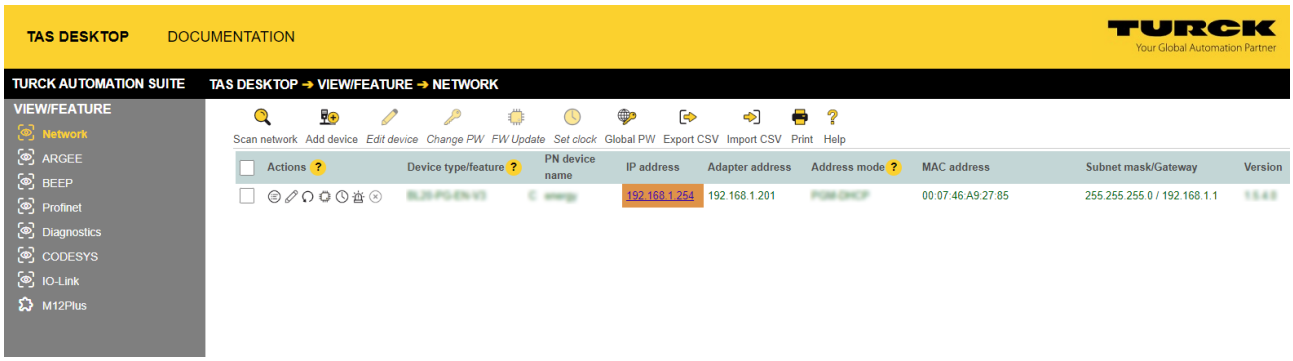

Fig. 47: Found devices in TAS

- Select the relevant device (check box).
- Click **Edit device**.

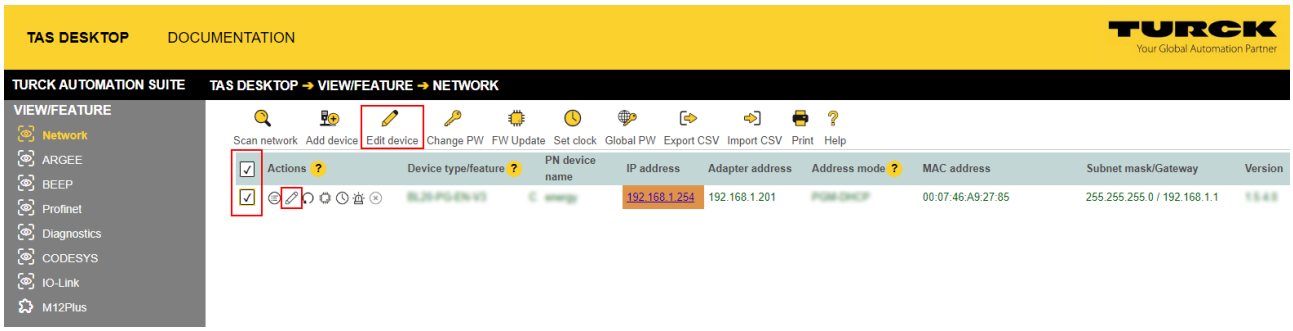

Fig. 48: Selecting the device in TAS

NOTE
By clicking on the IP address of the device, the configuration view of the device can be opened either in TAS or on the device website.

- Change the device name, the IP address and the network mask if necessary.
- Save changes by clicking on **APPLY** .

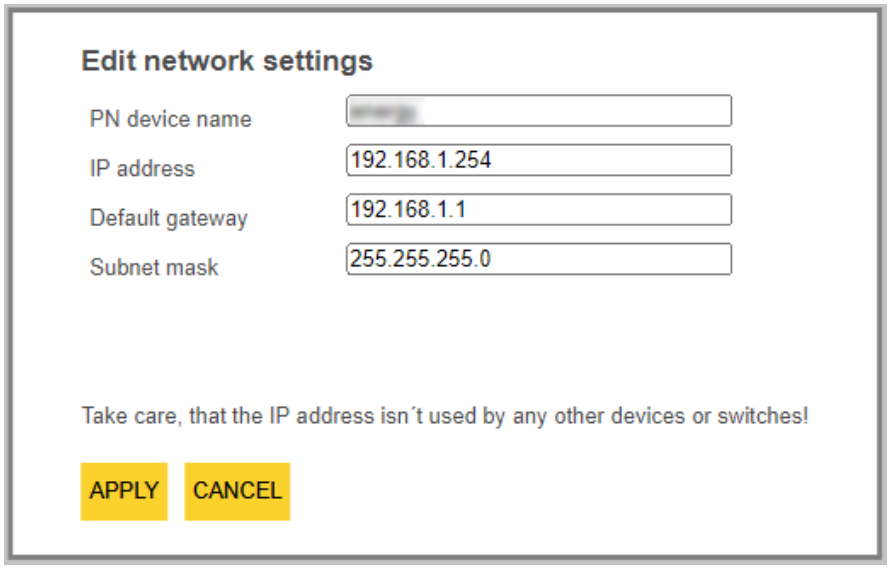

Fig. 49: Changing network settings in TAS

7.1.2 Adjusting network settings via the web server

A login is required to edit settings via the web server. The default password is "password".

NOTE
Turck recommends changing the password after the first login for security reasons.

- Open the device's web server.
- Enter **Username** and **Password**.
- Click **Login**
- Click **TBEN-L…** → **Parameter** → **Network**.
- Adjust the network settings.
- Write the changes into the device via **SET NETWORK CONFIGURATION**.

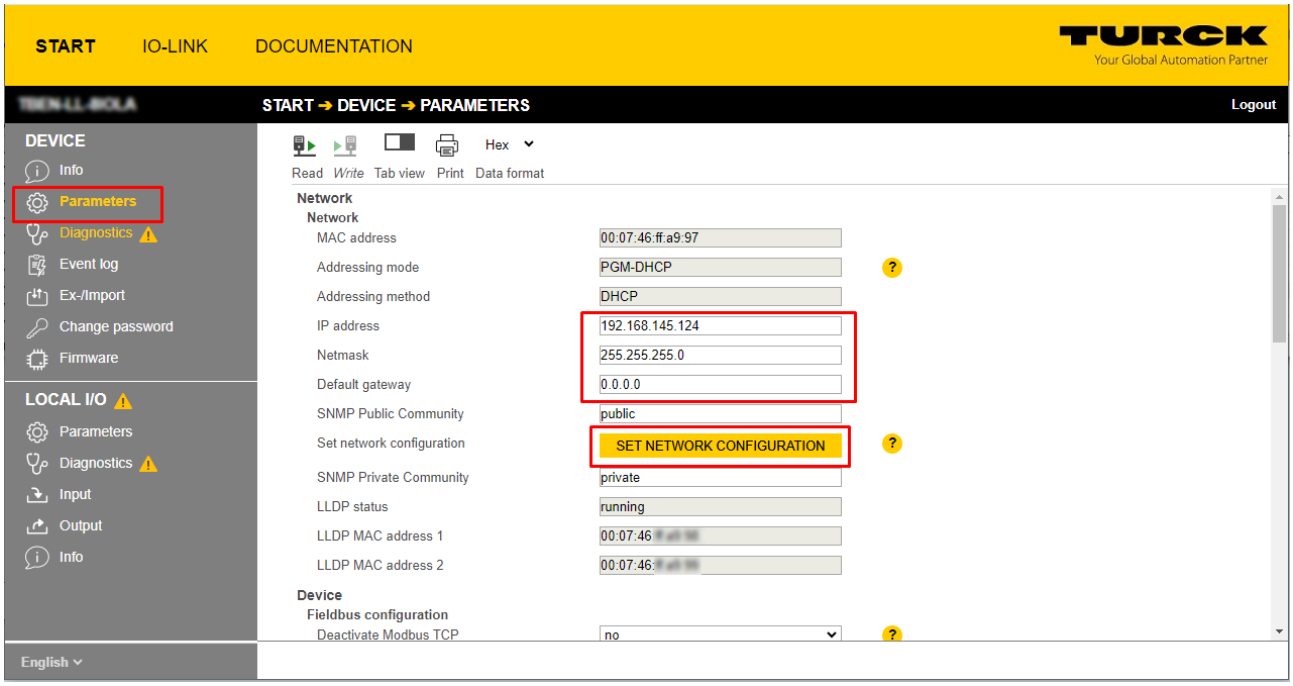

Fig. 50: Web server – adjusting network settings

7.2 Commissioning the devices in PROFINET

7.2.1 Address setting in PROFINET

In IP-based communication, the field devices are addressed by means of an IP address. PROFINET uses the Discovery and Configuration Protocol (DCP) for IP assignment.

NOTE
DCP is a standard protocol and can also be used outside PROFINET, e.g. in IPC operating systems (Windows, Linux). DCP is available in tool packages such as WinPcap, Npcap, Wireshark etc.

When delivered, each field device has, among other things, a MAC address. The MAC address is sufficient to give the respective field device a unique name.

The address is assigned in two steps:

- Assignment of a unique plant specific name to the respective field device
- Assignment of the IP address from the IO-Controller before the system start-up based on the plant-specific (unique) name

PROFINET naming convention

The names are assigned via DCP. The device name is checked for correct spelling during input. The following rules apply to the use of the device name in accordance with PROFINET specification V2.3.

- All device names must be unique.
- Maximum name size: 240 characters
  Allowed:
  - Lower case letters a…z
  - Numbers 0…9
  - Hyphen and dot
- The name may consist of several components separated by a period. A name component, i.e. a string between two dots, may be a maximum of 63 characters long.
- The device name must not start or end with a hyphen.
- The name must not begin with or ”port-xyz” (y…z = 0…9).
- The name must not have the form of an IP address (n.n.n.n, n = 0…999).
- Do not use special characters.
- Do not use capital letters.

7.2.2 PROFINET IO device model

The technical properties of PROFINET IO devices are defined via their device description file, the GSDML file. A PROFINET IO device consists of 1…n slots, which can also contain 1…n sub slots. Sub slots are placeholders for sub modules and establish the interface to the process. Sub modules can contain parameters, data and diagnostics.

Slot 0 is always reserved as Device Access Point (DAP). The DAP contains the physical interface to the Ethernet network and represents the device. The other slots and sub slots represent the other device functions. The structure is defined by the manufacturer of field devices. It is not necessary that every slot or respectively sub slot is related to physical functions. The allocation of the slots and sub slots and thus the assignment of functions (operation mode, diagnostics, etc.) is done in the configuration software of the PROFINET controller. This device model allows manufacturers to design modular and flexible decentralized field devices. User are flexible in configuring decentralized field devices.

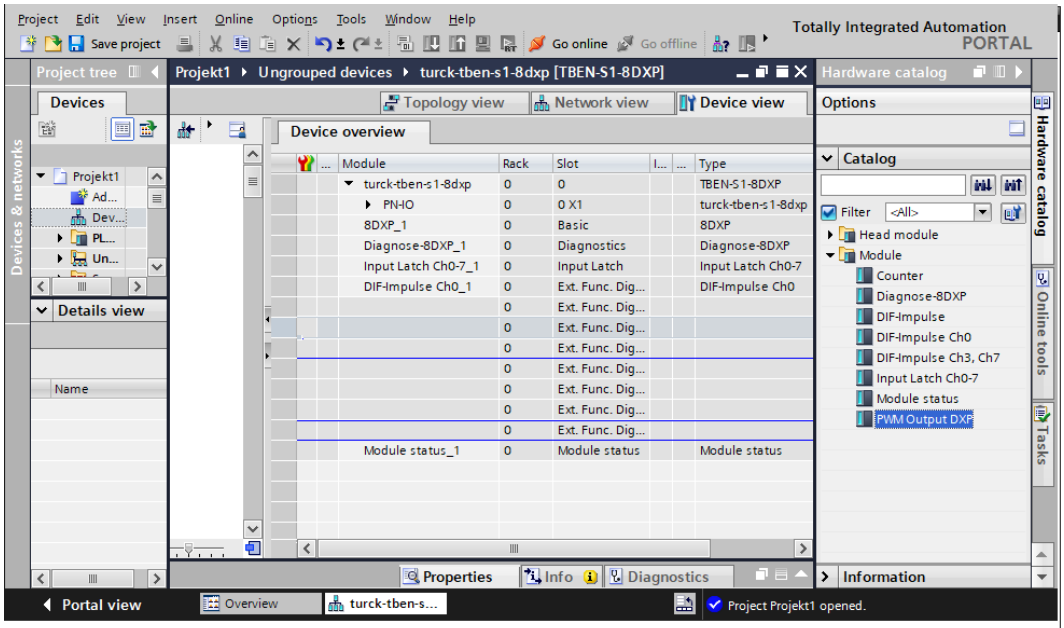

Fig. 51: TIA-Portal – assignment of the slots and sub slots on the example of an TBEN-S1-8DXP

7.2.3 FSU – Fast Start-Up (prioritized startup)

FSU enables a PLC to build up connections to PROFINET nodes in less than 500 ms after switching-on the network power supply (V1). The fast start-up is necessary for fast tool changing applications at robot arms for example in the automobile industry.

NOTE
For the correct cabling in FSU applications please observe the note in the chapter "Connecting the Device to Ethernet" [▶ 30].

Fast Start-Up (FSU) in TBEN

The devices support the prioritized start-up (FSU).

Activating FSU

In order to enable FSU, the fieldbus nodes have to be configured respectively, for example in TIA-Portal (Siemens).

Auto negotiation:	deactivated
Transmission medium/duplex:	Set to a fixed value

- ▶ During configuration, please observe that the neighboring devices do also support FSU and that the settings for the ports of neighboring devices are identical.
- ▶ Set "Transmission rate/duplex" to a fix value.
- ▶ Deactivate auto-negotiation

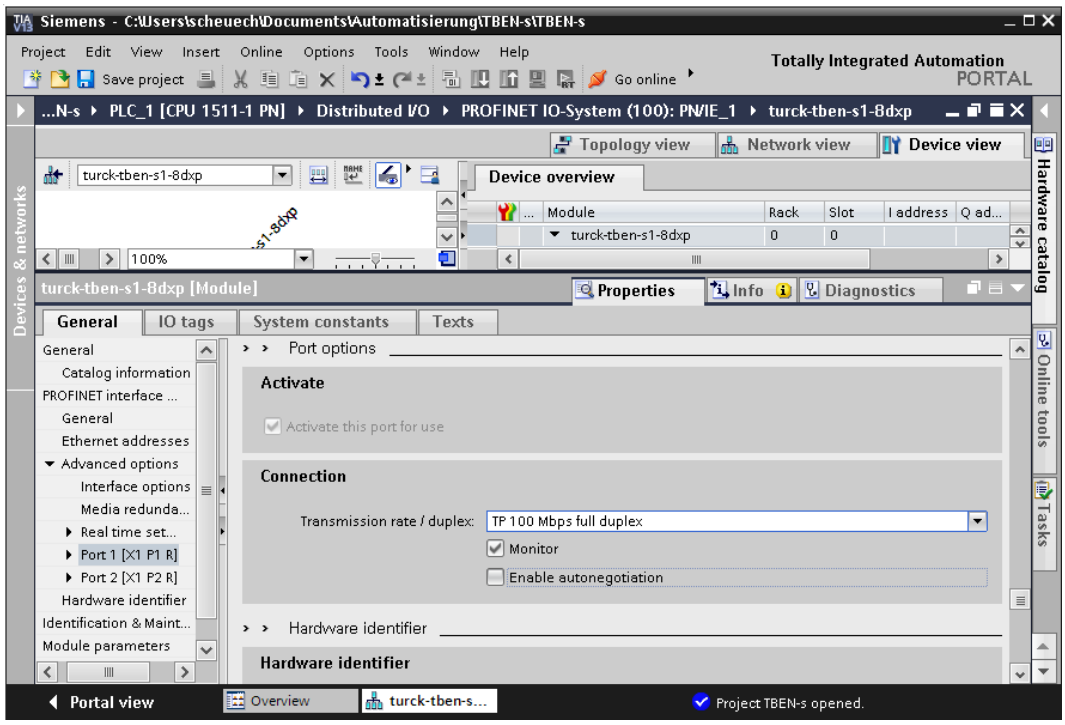

Fig. 52: TIA-Portal – port-settings for FSU

▶ Activate the prioritized start-up at the I/O device.

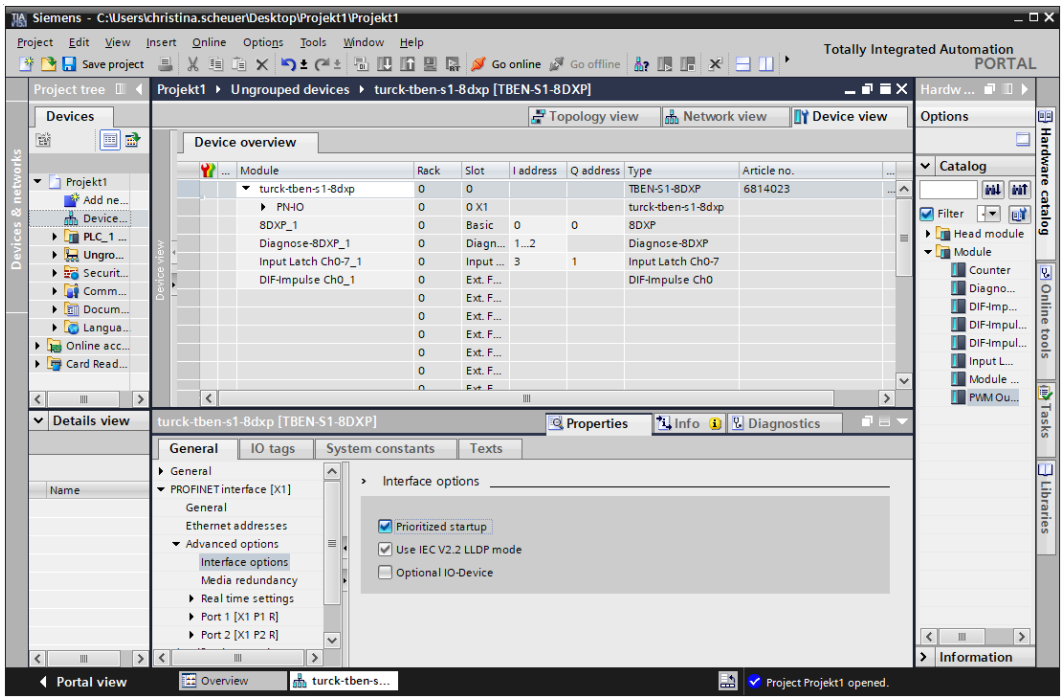

Fig. 53: TIA-Portal – prioritized start-up, activation at the I/O device

7.2.4 MRP (Media Redundancy Protocol)

The device supports MRP. MRP is a standardized protocol according to IEC 62439. It describes a mechanism for media redundancy in ring topologies. With MRP, a defective ring topology with up to 50 nodes is detected and reconfigured in the event of an error. With MRP a trouble-free switch-over is not possible.

A Media Redundancy Manager (MRM) checks the ring topology of a PROFINET network defined by the network configuration for functionality. All other network nodes are Media Redundancy Clients (MRC). In the error-free state, the MRM blocks normal network traffic on one of its ring ports, with the exception of the test telegrams. The physical ring structure thus becomes a line structure again at the logical level for normal network traffic. If a test telegram fails to appear, a network error has occurred. In this case, the MRM opens its blocked port and establishes a new functioning connection between all remaining devices in the form of a linear network topology.

The time between ring interruption and recovery of a redundant path is called reconfiguration time. For MRP, this is a maximum of 200 ms. Therefore, an application must be able to compensate for the 200 ms interruption. The reconfiguration time always depends on the Media Redundancy Manager (e.g. the PROFINET PLC) and the I/O cycle and watchdog times set here. For PROFINET, the response monitoring time must be selected accordingly > 200 ms.

It is not possible to use Fast Start-Up in an MRP network.

7.2.5 User data for acyclic services

The acyclic data exchange is by using via Record Data CRs (Communication Relation). Via these Record Data CRs the reading and writing of the following services is realized:

- Writing of AR data (AR = Application Relation)
- Writing of configuration data
- Reading and writing of device data
- Reading of diagnostic data
- Reading of I/O data
- Reading of Identification Data Objects (I&M functions)

Acyclic device user data

Index		Name	Data type	Access	Comment
Dec.	Hex.				
1	0x01	Module parameters	WORD	read/ write	Parameter data of the module (slot 0)
2	0x02	Module designation	STRING	read	Designation assigned to the module (slot 0)
3	0x03	Module revision	STRING	read	Firmware revision of the module
4	0x04	Vendor ID	WORD	read	Vendor ID for Turck
5	0x05	Module name	STRING	read	The device name assigned to the module
6	0x06	Module type	STRING	read	Device type of the module
7	0x07	Device ID	WORD	read	Device ID of the module
8…23	0x08… 0x17	reserved	-	-	-
24	0x18	Module diagnostics	WORD	read	Diagnostic data of the module (slot 0).
25…31	0x19… 0x1F	reserved	-	-	-
32	0x20	Input list	ARRAY of BYTE	read	List of all module input channels
33	0x21	Output list	ARRAY of BYTE	read	List of all module output channels
34	0x22	Diag. list	ARRAY of BYTE	read	List of all I/O-channel diagnostics
35	0x23	Parameter list	ARRAY of BYTE	read	List of all I/O-channel parameters
36… 28671	0x24… 0x6FFF	reserved	-	-	-
28672	0x7000	Module parameters	WORD	read/ write	Activate fieldbus protocol
28673… 45039	0x7001 … 0xAFEF	reserved	-	-	-
45040	0xAFF0	I&M0-functions		read	Identification & Maintaining
45041	0xAFF1	I&M1-functions	STRING[54]	read/ write	I&M Tag function and location

Index		Name	Data type	Access	Comment
45042	0xAFF2	I&M2-functions	STRING[16]	read/ write	I&M Installation Date
45043	0xAFF3	I&M3-functions	STRING[54]	read/ write	I&M Description Text
45044	0xAFF4	I&M4-functions	STRING[54]	read/ write	I&M Signature
45045… 45055	0xAFF5 … 0xAFFF	I&M5 to I&M15-functions		-	Not supported

Acyclic I/O channel user data

Index		Name	Data Type	Access	Comment
Dec.	Hex.				
1	0x01	Module parameters	specific	read/ write	Parameters of the module
2	0x02	Module type	ENUM UINT8	read	Contains the module type
3	0x03	Module version	UINT8	read	Firmware version of I/O channels
4	0x04	Module ID	DWORD	read	Ident number of the I/O
5…9	0x05 … 0x09	reserved	-	-	-
10	0x0A	Controller Version	UINT8 array [8]	read	
11…18	0x0B… 0x12	reserved	-	-	-
19	0x13	Input data	specific	read	Input data of the respective I/O-channel
20…22	0x14 … 0x16	reserved	-	-	-
23	0x17	Output data	specific	read/ write	Output data of the respect-ive I/O-channel
…	…	reserved	-	-	-

7.3 Connecting the devices to a PROFINET controller with TIA Portal

The following example describes the connection of the devices to a Siemens PLC in PROFINET by means of the programming software SIMATIC STEP7 Professional V13 (TIA-Portal).

Used hardware

The following hardware components are used in this example:

- Siemens PLC S7-1500
- TBEN-S… block module

Used software

The following software tools are used in this example:

- SIMATIC STEP7 Professional V13 (TIA-Portal)
- GSDML file for TBEN-S… (can be downloaded for free as ZIP archive "TBEN-S_PROFINET.zip" under www.turck.com)

Prerequisites

- The software is started.
- A new project has been created.
- The controller has been added to the project.

7.3.1 Installing the GSDML-file

The GSDML file is available for free at www.turck.com.

▶ Adding the GSDML file: Click **Options** → **Manage general station description files (GSD)**.

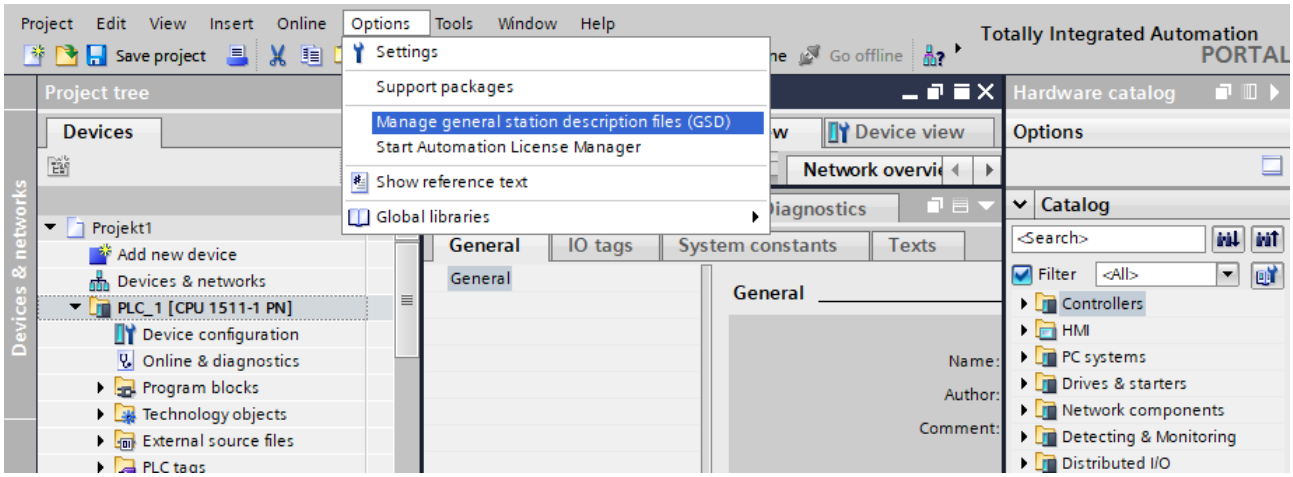

Fig. 54: Manage general station description files (GSD) in TIA Portal

▶ Installing the GSDML file: Define the source path for the GSDML-file and click **Install**.

⇨ The device is added to the hardware catalog.

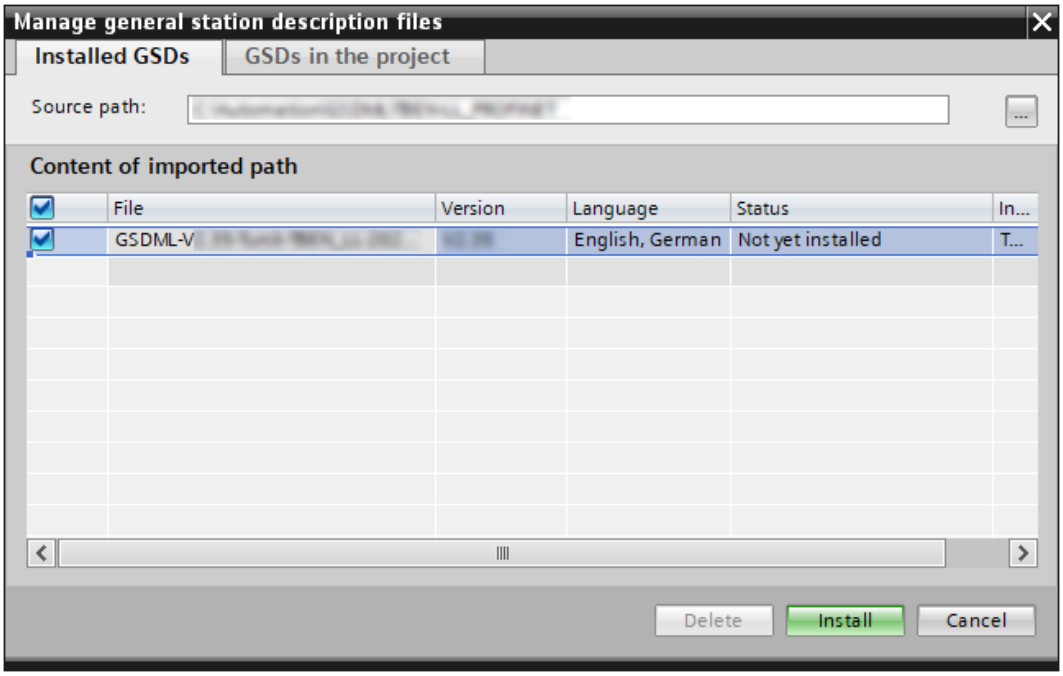

Fig. 55: TIA Portal – installing the GSDML file

7.3.2 Configuring device functions

- Select **Device view → Device overview**.
- Select functions as operation mode, diagnostics etc. from the hardware catalog and add them to the devoce slots via drag&drop.

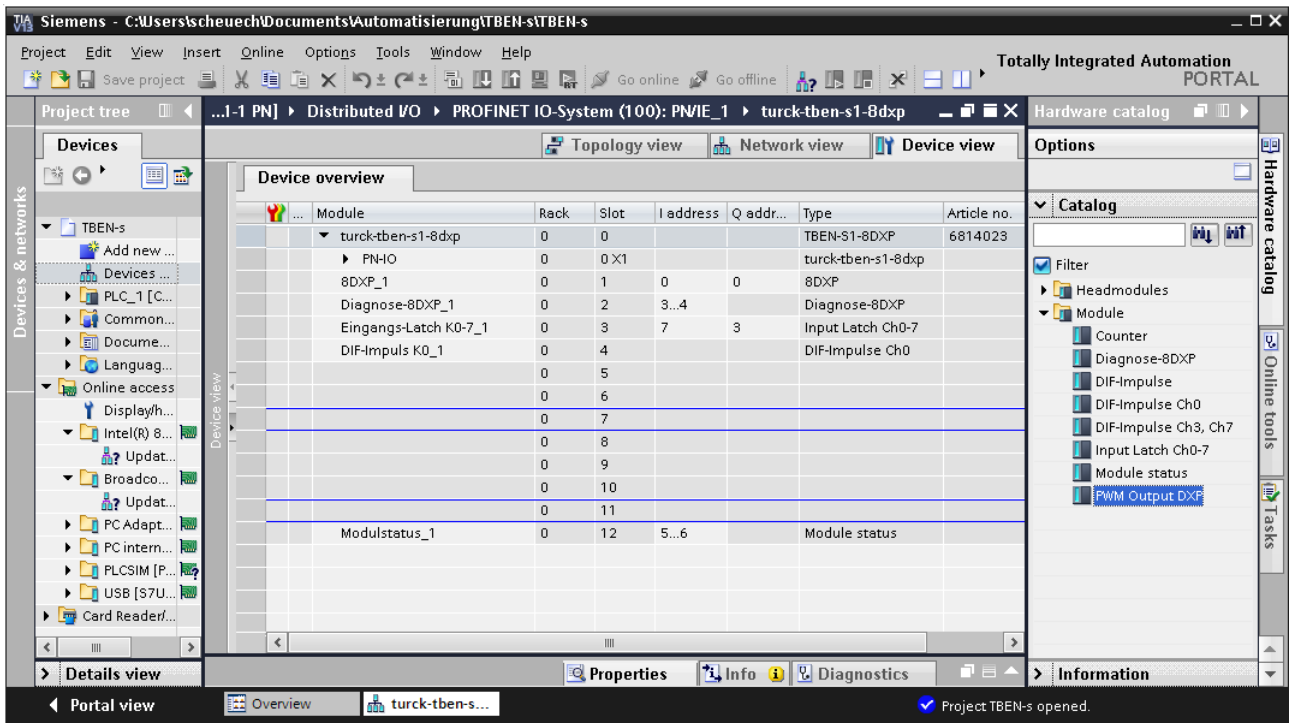

Fig. 56: Configuring the device slots

7.3.3 Assigning the PROFINET device name

- Select **Online access → Online & diagnostics.**
- **Functions → Assign PROFINET device name.**
- Assign the desired PROFINET device name with **Assign name.**

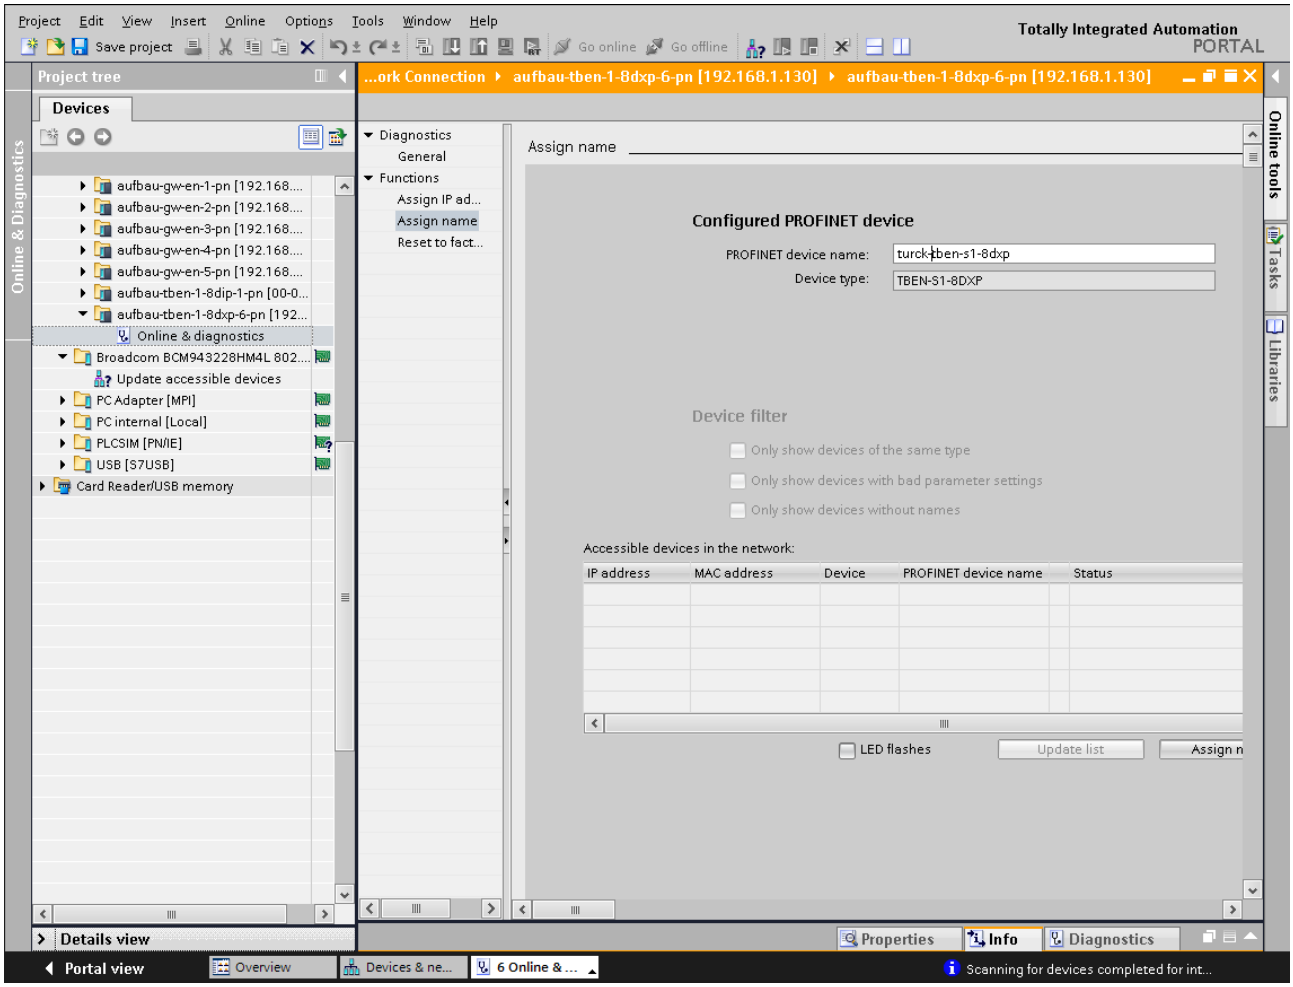

Fig. 57: TIA-Portal: Assigning the PROFINET device name

7.3.4 Setting the IP address in TIA Portal

- Select **Device view** → register **Properties** → **Ethernet addresses** .
- Assign the desired IP address.

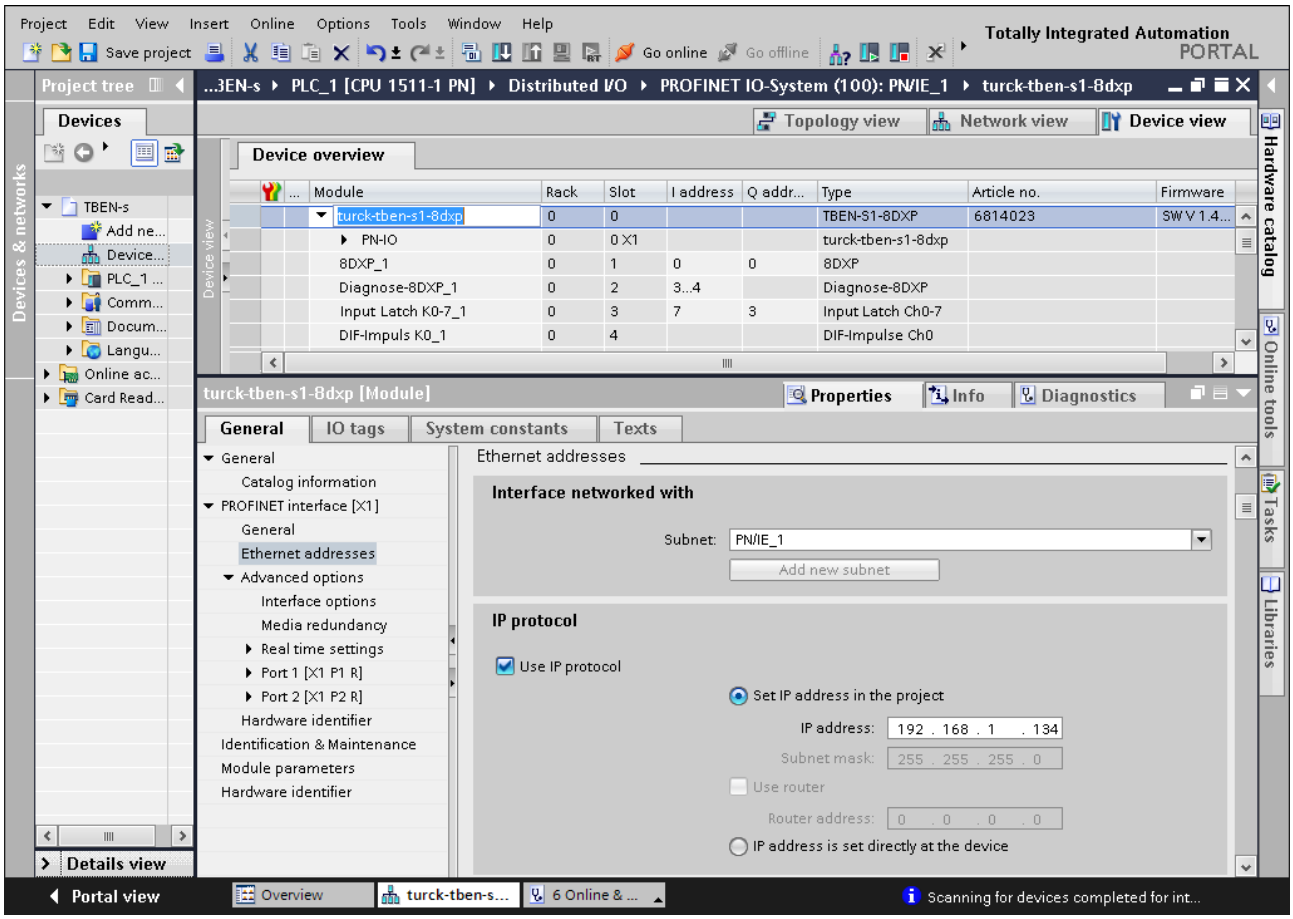

Fig. 58: TIA-Portal: Assigning the IP address

7.3.5 Setting module parameters

- Select **Device view** → **Device overview**.
- Select the device to be parameterized.
- Click **Properties** →**General** →**Module parameters**.
- Set the device parameters.

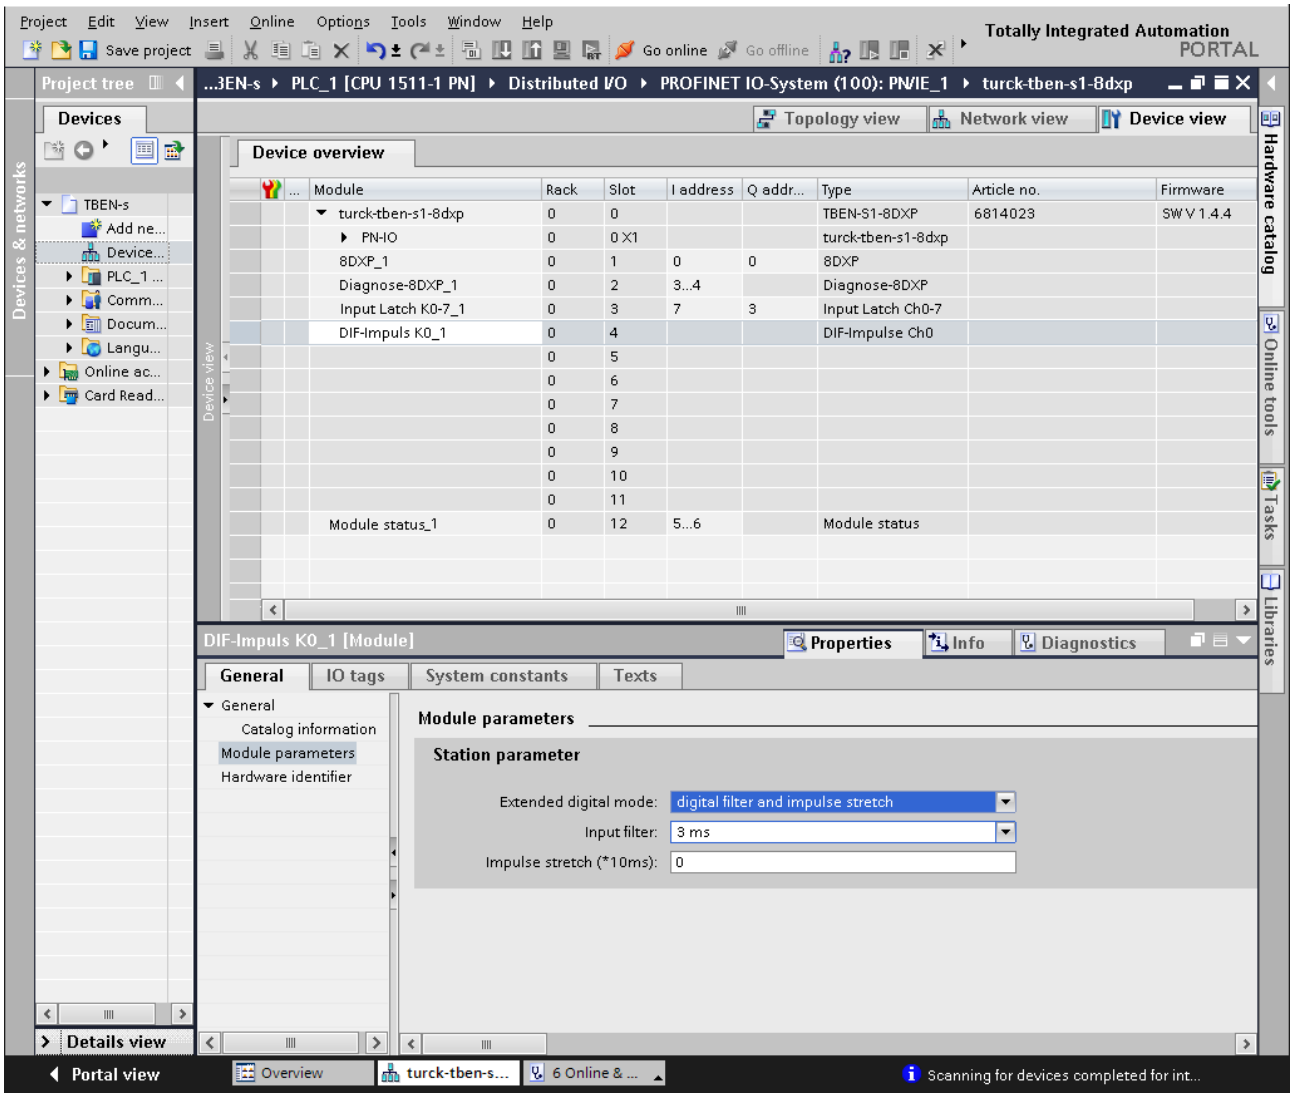

Fig. 59: Setting module parameters

7.3.6 Connecting the device online with the controller

- ▶ Start the online mode (Go online).
- ⇨ The device has been successfully connected to the PLC.

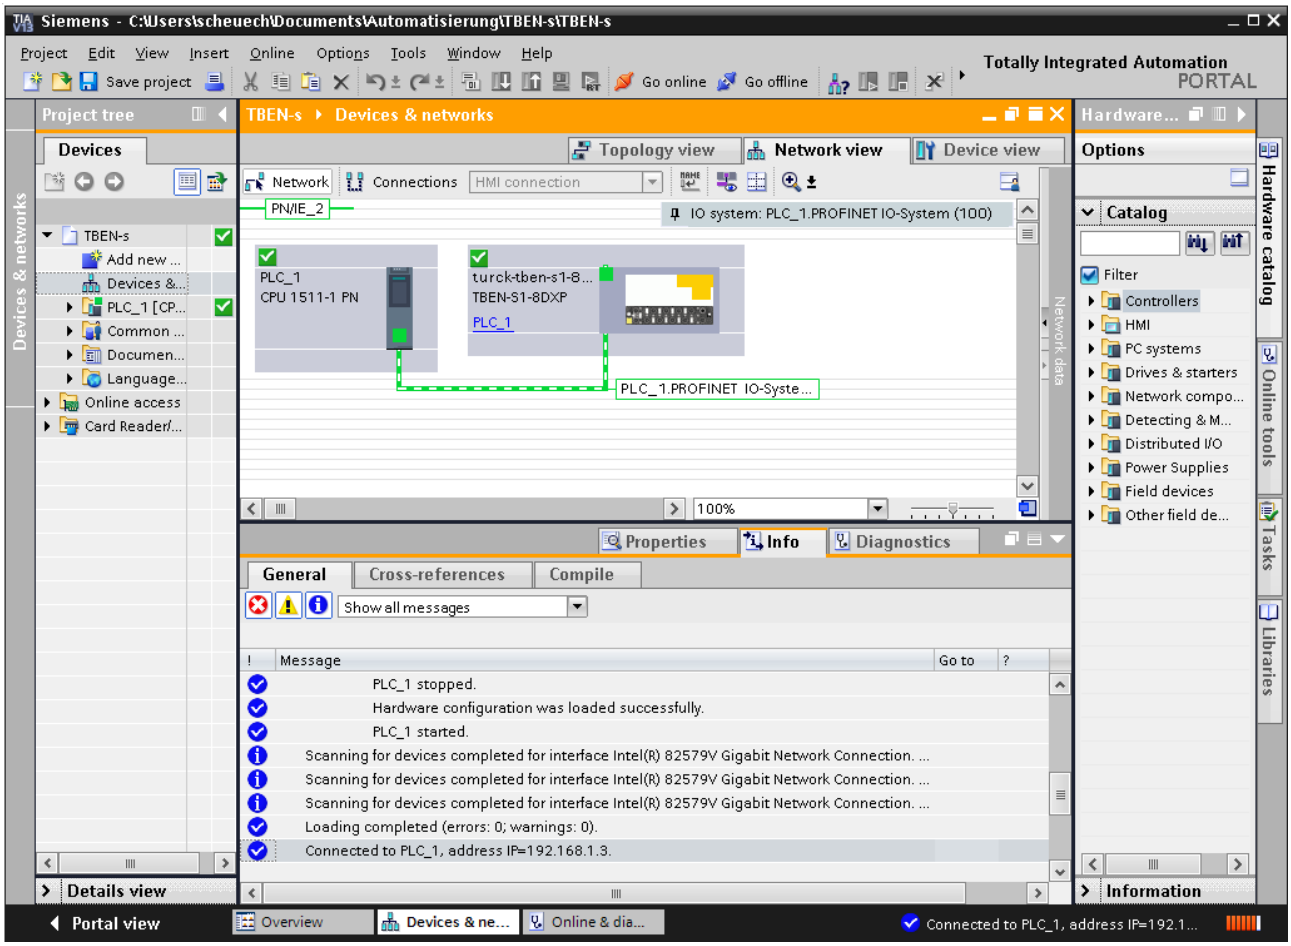

Fig. 60: TIA-Portal: Online mode

7.3.7 PROFINET – Mapping

The PROFINET mapping corresponds to the data mapping described in the sections “Process input data [▸ 204] and „Process output data” [▸ 212].

7.4 Commissioning the devices in Modbus TCP

7.4.1 Implemented Modbus functions

The devices support the following functions for accessing process data, parameters, diagnostics and other services.

Function Code	
3	Read Holding Registers – reading multiple output registers
4	Read Input Registers – reading multiple input registers
6	Write Single Register – writing single output register
16	Write Multiple Registers – writing multiple output
23	Read/Write Multiple Registers – reading and writing multiple registers

7.4.2 Modbus registers

Address	Access	Meaning
0x0000…0x01FF	read only	Process data of inputs (identical to registers 0x8000…0x8FFF)
0x0800…0x09FF	read/write	Process data of the outputs (identical to registers 0x9000…0x9FFF)
0x1000…0x100B	read only	Module identifier
0x100C	read only	Module status
0x1017	read only	Register mapping revision (always 2, if not, mapping is incompatible with this description)
0x1020	read only	Watchdog, actual time in ms
0x1120	read/write	Watchdog, predefined time in ms (default: 500 ms)
0x1130	read/write	Modbus connection mode register
0x1131	read/write	Modbus Connection Timeout in s. (def.: 0 = never)
0x113C…0x113D	read/write	Modbus parameter restore (reset of parameters to default values)
0x113E…0x113F	read/write	Modbus parameter save (permanent storing of parameters)
0x1140	read/write	Deactivate protocol Deactivates explicitly the selected Ethernet protocol: ■ Bit 0 = deactivate EtherNet/IP ■ Bit 1 = deactivate Modbus TCP ■ Bit 2 = deactivate PROFINET ■ Bit 15 = deactivate web server
0x1141	read/write	Active protocol ■ Bit 0 = EtherNet/IP active ■ Bit 1 = Modbus TCP active ■ Bit 2 = PROFINET active ■ Bit 15 = Web server active
0x2400	read only	V1 in mV: 0 at < 18 V
0x2401	read only	V2 in mV: 0 at < 18 V
0x8000…0x8FFF	read only	Process data of the inputs (identical to registers 0x0000…0x01FF)
0x9000…0x9FFF	read/write	Process data of the outputs (identical to registers 0x0800…0x09FF)

Address	Access	Meaning
0xA000…0xAFFF	read only	Diagnostics
0xB000…0xBFFF	read/write	Parameters

The following table shows the register mapping for the different Modbus addressing methods

Description	Hex	Decimal	5 digit	Modicon
Inputs	0x0000…0x01FF	0…511	40001…40512	400001…400512
Outputs	0x0800…0x09FF	2048…2549	42049…42560	402049…402560
Module identifier	0x1000…0x1006	4096…4102	44097…44103	404097…404103
Module status	0x100C	4108	44109	404109
Watchdog, actual time	0x1020	4128	44129	404129
Watchdog, predefined time	0x1120	4384	44385	404385
Modbus connection mode	0x1130	4400	44401	404401
Modbus connection timeout in s.	0x1131	4401	44402	404402
Modbus parameter restore	0x113C…0x113D	4412…4413	44413…44414	404413…404414
Modbus parameter save	0x113E…0x113F	4414…4415	44415…44416	404415…404416
Deactivate protocol	0x1140	4416	44417	404417
Active protocol	0x1141	4417	44418	404418
V1 in mV	0x2400	9216	49217	409217
V2 in mV	0x2401	9217	49218	409218
Process data inputs	0x8000, 0x8001	32768, 32769	-	432769, 432770
Process data outputs	0x9000, 0x9001	36864, 36865	-	436865, 436866
Diagnostics	0xA000, 0xA001	40960, 40961	-	440961, 440962
Parameters	0xB000, 0xB001	45056, 45057	-	445057, 445058

Register 0x1130: Modbus connection mode

This register defines the behavior of the Modbus connections.

Bit	Designation	Value	Meaning
0	MB_OnlyOneWrite Permission	**0**	All Modbus connections receive the write authorization.
		1	Only one Modbus connection can receive the write permission. A write permission is opened until a disconnect. After the disconnect the next connection which requests a write access receives the write authorization.
1	MB_ImmediateWrite Permission	**0**	With the first write access, a write authorization for the respective Modbus connection is requested. If this request fails, an exception response with exception-code 0x01 is generated. If the request is accepted, the write access is executed and the write authorization remains active until the connection is closed.
		1	The write authorization for the respective Modbus connection is already opened during the connection establishment. The first Modbus connection thus receives the write authorization, all following connections do not (only if bit 0 = 1).
2…15	Reserved	-	-

Register 0x1131: Modbus connection timeout

This register defines after which time of inactivity a Modbus connection is closed through a disconnect.

Value range: 0…65535 s

default: 0 s = never (Modbus connection will never be closed)

Behavior of the BUS LED

If Modbus is the active protocol in case of a connection timeout and no further Modbus connections exist, the BUS LED behaves as follows:

Connection timeout	BUS LED
Timeout	Green flashing

Register 0x113C and 0x113D: Restore Modbus connection parameters

Registers 0x113C and 0x113D serve for resetting the parameter-register 0x1120 and 0x1130 to 0x113B to the default settings. The service resets the parameters without saving them.

Procedure:

- ▶ Write 0x6C6F to register 0×113C.
- ▶ To activate the reset of the registers, write 0x6164 (”load”) within 30 seconds in register 0x113D. Both registers can also be written with one single request using the function codes FC16 and FC23.
- ⇨ The parameters are reset to default values.
- ▶ Save changes via a subsequent Save service.

Register 0x113E and 0x113F: Save Modbus connection parameters

Registers 0x113E and 0x113F are used for the non-volatile saving of parameters in registers 0x1120 and 0x1130 to 0x113B.

Procedure:

- ▶ Write 0x7361 to register 0×113E.
- ▶ Write 0x7665 (”save”) within 30 seconds in register 0x113F to activate the reset of the registers. Both registers can also be written with one single request using the function codes FC16 and FC23.
- ⇨ The parameters are saved.

7.4.3 Data width of the I/O modules

The following table shows the data width of the TBEN-S modules within the Modbus register area and the type of data alignment.

Module	Process input data	Process output data	Alignment
TBEN-S1-8DIP	8 bit	-	Bit by bit
TBEN-S2-8DIP	8 bit	-	Bit by bit
TBEN-S1-8DIP-D	8 bit	-	Bit by bit
TBEN-S1-8DOP	-	8 bit	Bit by bit
TBEN-S1-4DIP-4DOP	4 bit	4 bit	Bit by bit
TBEN-S1-4DXP	4 bit	4 bit	Bit by bit
TBEN-S1-8DXP	8 bit	8 bit	Bit by bit
TBEN-S2-8DXP	8 bit	8 bit	Bit by bit
TBEN-S2-4AI	8 byte	-	Word by word
TBEN-S2-4AO	-	8 byte	Word by word

7.4.4 Register mapping of TBEN-S modules

TBEN-S1-8DIP-D – input registers

Meaning of the process input data [▸ 204]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
IN																
0x0000	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagn.																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	-	-	VERR V1 Ch4-7	VERR V1 Ch0-3
Latch IN																
0x0002	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
CNT Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
Module status																
0x0007	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DIP – output registers

Meaning of the process output data [▸ 212]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Latch reset																
0x0800	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0801	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset

TBEN-S1-8DIP – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0																
0xB000	IST DI0								DIFT DI0	DMOD_CNT DI0						
Channel 1																
0xB001	IST DI1								DIFT DI1	DMOD DI1						
…																
Channel 7																
0xB007	IST DI7								DIFT DI7	DMOD DI7						

TBEN-S1-8DIP-D – input registers

Meaning of the process input data [▶ 204]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
IN																
0x0000	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagn.																
0x0001	-	-	-	-	-	-	-	-	VERR V1 C7	VERR V1 C6	VERR V1 C5	VERR V1 C4	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
Latch IN																
0x0002	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
CNT K0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
Module status																
0x0007	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DIP-D – output registers

Meaning of the process output data [▶ 212]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Latch reset																
0x0800	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0801	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset

TBEN-S1-8DIP-D – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Channel 0																
0xB000	IST DI0								DIFT DI0	DMOD_CNT DI0						
Channel 1																
0xB001	IST DI1								DIFT DI1	DMOD DI1						
…																
Channel 7																
0xB007	IST DI7								DIFT DI7	DMOD DI7						

TBEN-S2-8DIP – input registers

Meaning of the process input data [▸ 204]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
IN																
0x0000	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagn.																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
Latch IN																
0x0002	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
CNT Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
Module status																
0x0007	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S2-8DIP – output registers

Meaning of the process output data [▸ 212]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Latch reset																
0x0800	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0801	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset

TBEN-S2-8DIP – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0																
0xB000	IST DI0								DIFT DI0	DMOD_CNT DI0						
Channel 1																
0xB001	IST DI1								DIFT DI1	DMOD DI1						
…																
Channel 7																
0xB007	IST DI7								DIFT DI7	DMOD DI7						
VAUX																
0xB009	-	-	-	-	-	-	VAUX1 Pin1 C1 (Ch2/3)		-	-	-	-	-	-	VAUX1 Pin1 C0 (Ch0/1)	
0xB00A	-	-	-	-	-	-	VAUX1 Pin1 C3 (Ch6/7)		-	-	-	-	-	-	VAUX1 Pin1 C2 (Ch4/5)	

TBEN-S1-8DOP – input registers

Meaning of the process input data [▸ 204]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Diagn.																
0x0000	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch4-7	VERR V2 Ch0-3
PWM diag. Ch 3																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM diag. Ch7																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	
Module status																
0x0003	-	FCE	-	-	-	COM	V1	-	V2	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DOP – output registers

Meaning of the process output data [▸ 212]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OUT																
0x0800	-	-	-	-	-	-	-	-	DO7 C7P4	DO6 C6P4	DO5 C5P4	DO4 C4P4	DO3 C3P4	DO2 C2P4	DO1 C1P4	DO0 C0P4
PWM Ch3																
0x0801	-	-	-	-	-	-	-	-	Duty Cycle							
PWM Ch7																
0x0802	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-8DOP – parameter registers

Parameter description [▸ 199]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0…channel 7																
0xB000	-	-	-	-	-	-	-	-	SRO7	SRO6	SRO5	SRO4	SRO3	SRO2	SRO1	SRO0
Channel 3																
0xB001	-	-	-	-	-	-	-	-	DMOD_PWM DO3							
0xB002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Channel 7																
0xB003	-	-	-	-	-	-	-	-	DMOD_PWM DO7							
0xB004	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

TBEN-S1-4DIP-4DOP – input registers

Meaning of the process input data [▸ 204]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
IN																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagn.																
0x0001	-	-	-	-	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V1 Ch4-7	VERR V1 Ch0-3
Latch IN																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DI3	DI2	DI1	DI0
CNT Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
PWM diag. Ch7																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR	
Module status																
0x0008	-	FCE	-	-	-	COM	V1	-	V2	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-4DIP-4DOP – output registers

Meaning of the process output data [▸ 212]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OUT																
0x0800	-	-	-	-	-	-	-	-	-	-	-	-	DO7 C7P4	DO6 C6P4	DO5 C5P4	DO4 C4P4
Latch reset																
0x0801	-	-	-	-	-	-	-	-	-	-	-	-	DI3	DI2	DI1	DI0
CNT reset																
0x0802	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset
PWM Ch7																
0x0803	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-4DIP-4DOP – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0…channel 7																
0xB000	-	-	-	-	-	-	-	-	-	-	-	-	SRO7	SRO6	SRO5	SRO4
0xB001	IST DI0								DIFT DI0	DMOD_CNT DI0						
Channel 1																
0xB002	IST DI1								DIFT DI1	DMOD DI1						
Channel 2																
0xB003	IST DI2								DIFT DI2	DMOD DI2						
Channel 3																
0xB004	IST DI3								DIFT DI3	DMOD DI3						
Channel 7																
0xB005	-	-	-	-	-	-	-	-	-	DMOD_PWM DO7						

TBEN-S1-4DXP – input registers

Meaning of the process input data [▶ 204]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
IN																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Diagn.																
0x0001	-	-	-	-	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch2-3	VERR V1 Ch0-1
Latch IN																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
CNT Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
PWM diag. Ch 3																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR	
Module status																
0x0008	-	FCE	-	-	-	COM	V1	-	V2	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-4DXP – output registers

Meaning of the process output data [▶ 212]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OUT																
0x0800	-	-	-	-	-	-	-	-	-	-	-	-	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Latch reset																
0x0801	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
CNT reset																
0x0802	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset
PWM Ch3																
0x0803	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-4DXP – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0…channel 7																
0xB000	-	-	-	-	EN DO3	EN DO2	EN DO1	EN DO0	-	-	-	-	SRO3	SRO2	SRO1	SRO0
Channel 0																
0xB001	IST DX0								DIFT DX0	DMOD_CNT DX0						
Channel 1																
0xB002	IST DX1								DIFT DX1	DMOD DX1						
Channel 2																
0xB003	IST DX2								DIFT DX2	DMOD DX2						
Channel 3																
0xB004	IST DX3								DIFT DX3	DMOD_PWM DX3						

TBEN-S1-8DXP – input registers

Meaning of the process input data [▸ 204]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
IN																
0x0000	-	-	-	-	-	-	-	-	DX7 C7P4	DX6 C6P4	DX5 C5P4	DX4 C4P4	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Diagn.																
0x0001	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch4-7	VERR V1 Ch0-3
Latch IN																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
PWM diag. Ch 3																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR	
PWM diag. Ch7																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR	
Module status																
0x0009	-	FCE	-	-	-	COM	V1	-	V2	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DXP – output registers

Meaning of the process output data [▸ 212]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OUT																
0x0800	-	-	-	-	-	-	-	-	DX7 C7P4	DX6 C6P4	DX5 C5P4	DX4 C4P4	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Latch reset																
0x0801	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT reset																
0x0802	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset
PWM Ch3																
0x0803	-	-	-	-	-	-	-	-	Duty Cycle							
PWM Ch7																
0x0804	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-8DXP – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Channel 0…channel 7																
0xB000	EN DO7	EN DO6	EN DO5	EN DO4	EN DO3	EN DO2	EN DO1	EN DO0	SRO7	SRO6	SRO5	SRO4	SRO3	SRO2	SRO1	SRO0
Channel 0																
0xB001	IST DX0								DIFT DX0	DMOD_CNT DX0						
Channel 1																
0xB002	IST DX1								DIFT DX1	DMOD DX1						
Channel 2																
0xB003	IST DX2								DIFT DX2	DMOD DX2						
Channel 3																
0xB004	IST DX3								DIFT DX3	DMOD_PWM DX3						
0xB005	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Channel 4																
0xB006	IST DX4								DIFT DX4	DMOD DX4						
Channel 5																
0xB007	IST DX5								DIFT DX5	DMOD DX5						
Channel 6																
0xB008	IST DX6								DIFT DX6	DMOD DX6						
Channel 7																
0xB009	IST DX7								DIFT DX7	DMOD_PWM DX7						
0xB00A	-															

TBEN-S2-8DXP – input registers

Meaning of the process input data [▸ 204]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
IN																
0x0000	-	-	-	-	-	-	-	-	DX7 C3P2	DX6 C3P4	DX5 C2P2	DX4 C2P4	DX3 C1P2	DX2 C1P4	DX1 C0P2	DX0 C0P4
Diagn.																
0x0001	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	VERR V2 P1 Ch6-7	VERR V2 P1 Ch4-5	VERR V1 P1 Ch2-3	VERR V1 P1 Ch0-1
Latch IN																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Freq. Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
PWM diag. Ch 3																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM diag. Ch7																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	
Module status																
0x0009	-	FCE	-	-	-	COM	V1	-	V2	-	-	-	-	-	ARGEE	DIAG

TBEN-S2-8DXP – output registers

Meaning of the process output data [▶ 212]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
OUT																
0x0800	-	-	-	-	-	-	-	-	DX7 C3P2	DX6 C3P4	DX5 C2P2	DX4 C2P4	DX3 C2P2	DX2 C1P4	DX1 C0P2	DX0 C0P4
Latch reset																
0x0801	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT reset																
0x0802	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT reset
PWM Ch7																
0x0803	-	-	-	-	-	-	-	-	Duty Cycle							
PWM Ch7																
0x0804	-	-	-	-	-	-	-	-	Duty Cycle							
VAUX Control																
0x0805	-	-	-	-	-	-	-	-	-	-	-	-	VAUX 1 P1 C3	VAUX 1 P1 C2	VAUX 1 P1 C1	VAUX 1 P1 C0

TBEN-S2-8DXP – parameter registers

Parameter description [▶ 199]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0…channel 7																
0xB000	EN DO7	EN DO6	EN DO5	EN DO4	EN DO3	EN DO2	EN DO1	EN DO0	SRO7	SRO6	SRO5	SRO4	SRO3	SRO2	SRO1	SRO0
Channel 0																
0xB001	IST DX0								DIFT DX0	DMOD_CNT DX0						
Channel 1																
0xB002	IST DX1								DIFT DX1	DMOD DX1						
Channel 2																
0xB003	IST DX2								DIFT DX2	DMOD DX2						
Channel 3																
0xB004	IST DX3								DIFT DX3	DMOD_PWM DX3						
0xB005	-															
Channel 4																
0xB006	IST DX4								DIFT DX4	DMOD DX4						
Channel 5																
0xB007	IST DX5								DIFT DX5	DMOD DX5						
Channel 6																
0xB008	IST DX6								DIFT DX6	DMOD DX6						
Channel 7																
0xB009	IST DX7								DIFT DX7	-	-	-	-	DMOD_PWM DX7		
0xB00A	-															
VAUX																
0xB00B	-	-	-	-	-	-	VAUX1 Pin1 C1 (Ch2/3)		-	-	-	-	-	-	VAUX1 Pin1 C0 (Ch0/1)	
0xB00C	-	-	-	-	-	-	VAUX1 Pin1 C3 (Ch6/7)		-	-	-	-	-	-	VAUX1 Pin1 C2 (Ch4/5)	

TBEN-S2-4AI – input registers

Meaning of the process input data [▶ 210]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
AI0																
0x0000	MSB															LSB
AI1																
0x0001	MSB															LSB
AI2																
0x0002	MSB															LSB
AI3																
0x0003	MSB															LSB
Diagnostics																
	Channel 1								**Channel 0**							
0x0004	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTD	CJE	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTD	CJE
	Channel 3								**Channel 2**							
0x0005	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTD	CJE	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTD	CJE
Module status																
0x0006	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn

TBEN-S2-4AI – parameter registers

Parameter description [▶ 200]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Channel 0																
0xB000	INFIL				DRE		DCH	DDI	OPM				-	TMU	SUP	
0xB001	RTDWT		RRA		RWT		CWT		IMR		VWT		UMR			
0xB002	TCT				TCCCJ				RTDT							
Channel 1																
0xB003	INFIL				DRE		DCH	DDI	OPM				-	TMU	SUP	
0xB004	RTDWT		RRA		RWT		CWT		IMR		VWT		UMR			
0xB005	TCT				TCCCJ				RTDT							
Channel 2																
0xB006	INFIL				DRE		DCH	DDI	OPM				-	TMU	SUP	
0xB007	RTDWT		RRA		RWT		CWT		IMR		VWT		UMR			
0xB008	TCT				TCCCJ				RTDT							
Channel 3																
0xB009	INFIL				DRE		DCH	DDI	OPM				-	TMU	SUP	
0xB00A	RTDWT		RRA		RWT		CWT		IMR		VWT		UMR			
0xB00B	TCT				TCCCJ				RTDT							

TBEN-S2-4AO – input registers

Meaning of the process input data [▸ 210]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Diagnostics																
	Channel 1								**Channel 0**							
0x0000	-	-	-	-	-	-	WBR	OVL	-	-	-	-	-	-	WBR	OVL
	Channel 3								**Channel 2**							
0x0001	-	-	-	-	-	-	WBR	OVL	-	-	-	-	-	-	WBR	OVL
Module status																
0x0002	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn

TBEN-S2-4AO – output registers

Meaning of the process output data [▸ 216]

Register no.	Bit no.															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
AO0																
0x0800	MSB															LSB
AO1																
0x0801	MSB															LSB
AO2																
0x0802	MSB															LSB
AO3																
0x0803	MSB															LSB

TBEN-S2-4AO – parameter registers

Parameter description [▶ 200]

Register no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Channel 0																
0xB000	-	-	-	ORM	DRE		DCH	DDI	OPM				-	FFB		
0xB001	-	-	-	-	-	-	-	-	URA				IRA			
0xB002	SVAL MSB								SVAL LSB							
Channel 1																
0xB003	-	-	-	ORM	DRE		DCH	DDI	OPM				-	FFB		
0xB004	-	-	-	-	-	-	-	-	URA				IRA			
0xB005	SVAL MSB								SVAL LSB							
Channel 2																
0xB006	-	-	-	ORM	DRE		DCH	DDI	OPM				-	FFB		
0xB007	-	-	-	-	-	-	-	-	URA				IRA			
0xB008	SVAL MSB								SVAL LSB							
Channel 3																
0xB009	-	-	-	ORM	DRE		DCH	DDI	OPM				-	FFB		
0xB00A	-	-	-	-	-	-	-	-	URA				IRA			
0xB00B	SVAL MSB								SVAL LSB							

7.4.5 Meaning of the register bits

Designation	Meaning
In-/output data	
AI	Analog input
AO	Analog output
C	Connector
DI	Digital input
DO	Digital output
DX	DXP channel
P	Pin
Module status	
ARGEE	ARGEE program running in the device.
COM	Device-internal communication disturbed
DiagWarn	Diagnostics available at the device.
FCE	The Force Mode is activated, which means, the actual output values may no match the ones defined and sent by the fieldbus.
V_1	System power supply too low (< 18 VDC).
V_2	System power supply too low (< 18 VDC).
Channel diagnostics	
CJE	Cold junction error
ERR	Overcurrent at the respective output
LLVU	Lower limit value underrun

Designation	Meaning
OFL	Overflow
OVL	Overload/overcurrent
RTDSC	Overcurrent (RTD only)
UFL	Underflow
ULVE	Upper limit value exceeded
V1AOL	Overcurrent VAUX1
WBR	Wire break
Parameters	
The chapter Parameterizing and Configuring [▶ 199] contains a detailed parameter description.	
Digital modules	
DMOD	Extended digital function
DMOD_CNT	Extended digital function counter
DMOD_PWM	Extended digital function PWM
EN_DO	Activate output
IST	Impulse stretch
SRO	Manual reset after overcurrent
VAUX1 Pin1 C… (Chy-z)	Sensor/actuator supply VAUX1
Analog modules	
TBEN-S2-4AI	
CWT	Current wiring type
DCH	Deactivate channel
DDI	Deactivate diagnostics
DRE	Data representation
INFL	Input averaging filter
IMR	Current range
OPM	Operation mode
RRA	Resistance range
RTDT	RTD type
RTDWT	RTD wiring type
RWT	Resistance wiring type
SUP	Mains suppression
TCCCJ	Thermocouple cold junction compensation
TCT	Thermocouple type
TMU	Temperature unit
UMR	Voltage range
VWT	Voltage wiring type
TBEN-S2-4AO	
DCH	Deactivate channel
DDI	Deactivate diagnostics
DRE	Data representation
FFB	Output on fieldbus error

Designation	Meaning
IRA	Current range
OPM	Operation mode
ORM	Output recovery mode
SVAL	Substitute value
URA	Voltage range

7.4.6 Error behavior (watchdog)

Behavior of outputs

In case of a failure of the Modbus communication, the outputs' behavior is as follows, depending on the defined time for the Watchdog (register 0x1120):

Watchdog	Behavior of outputs
0 ms	All outputs maintain the actual value in case of an error
> 0 ms (default = 500 ms)	Outputs switch to 0 after the watchdog time has expired (setting in register 0x1120).

NOTE
Setting the outputs to predefined substitute values is not possible in Modbus TCP. Eventually parameterized substitute values will not be used.

Behavior of the BUS LED

When the watchdog triggers, the BUS LED lights up red.

Behavior of the device in case of loss of Modbus communication

If Modbus is the active protocol and all Modbus connections are closed, the watchdog switches all outputs to "0" after the watchdog time has expired, unless another protocol (PROFINET, EtherNet/IP) has been activated in the meantime.

7.5 Connecting devices to a Modbus Client with CODESYS

Naming convention

Turck uses the terms "Modbus client" and "Modbus server" according to Modbus Organization. The following description uses the terms "Modbus TCP Master" (client) and "Modbus TCP Slave" (server) only because of the naming in CODESYS.

Used hardware

The following hardware components are used in this example:

- TX715-P3CV01 (IP address: 192.168.145.72)
- Block module TBEN-S… (IP address: 192.168.145.200)

Used software

The following software tools are used in this example:

- CODESYS 3.5.18.2 (can be downloaded for free under **www.turck.com**).

7.5.1 Connecting the device to the PLC

The following components have to be added to CODESYS first, in order to connect the device to the PLC.

- Ethernet adapter
- Modbus TCP client (in CODESYS: Modbus TCP Master)
- Modbus TCP server (in CODESYS: Modbus TCP Slave)

Adding the Ethernet Adapter

- ▶ Right-click **Device** in the project tree **TX715-P3CV01**.
- ▶ Select **Add Device**.
- ▶ Select **Ethernet Adapter**.
- ▶ Click **Insert device.**
- ⇨ The Ethernet Adapter is added to the project tree as **Ethernet (Ethernet)**.

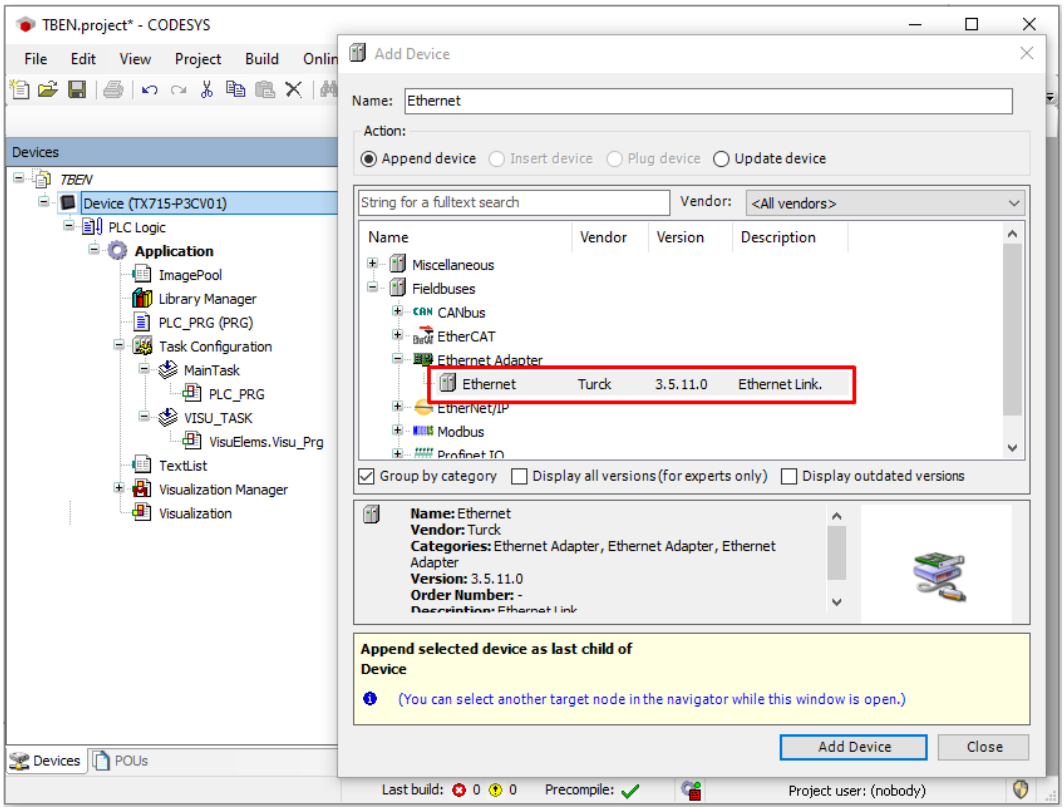

Fig. 61: Adding the Ethernet Adapter

Adding the Modbus TCP Master

- ▶ Right-click the **Ethernet (Ethernet)** in the project tree.
- ▶ Select **Add Device**.
- ▶ Double-click **Modbus TCP Master**.
- ⇨ The **Modbus_TCP_Master** is added to the project tree.

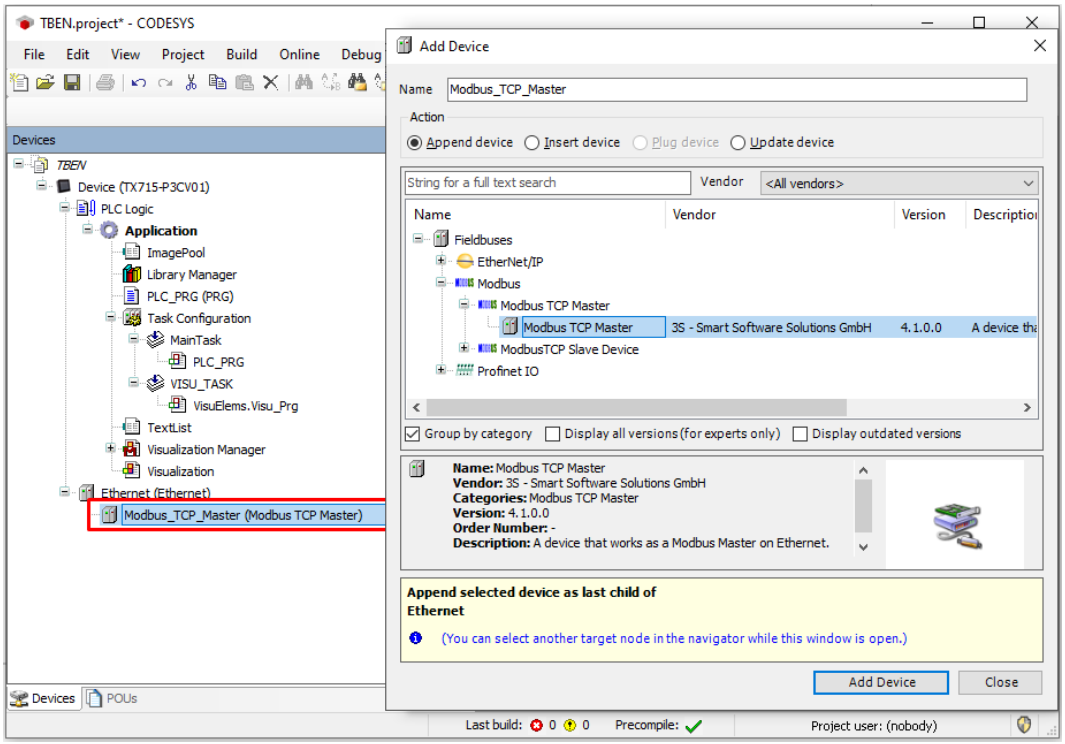

Fig. 62: Adding the Modbus TCP Master

Adding the Modbus TCP Server (Slave)

- ▶ Right-click the **Modbus TCP Master** in the project tree.
- ▶ Select **Add Device**.
- ▶ Double-click **Modbus TCP Slave**.
- ⇨ The **Modbus_TCP_Slave** is added to the project tree.

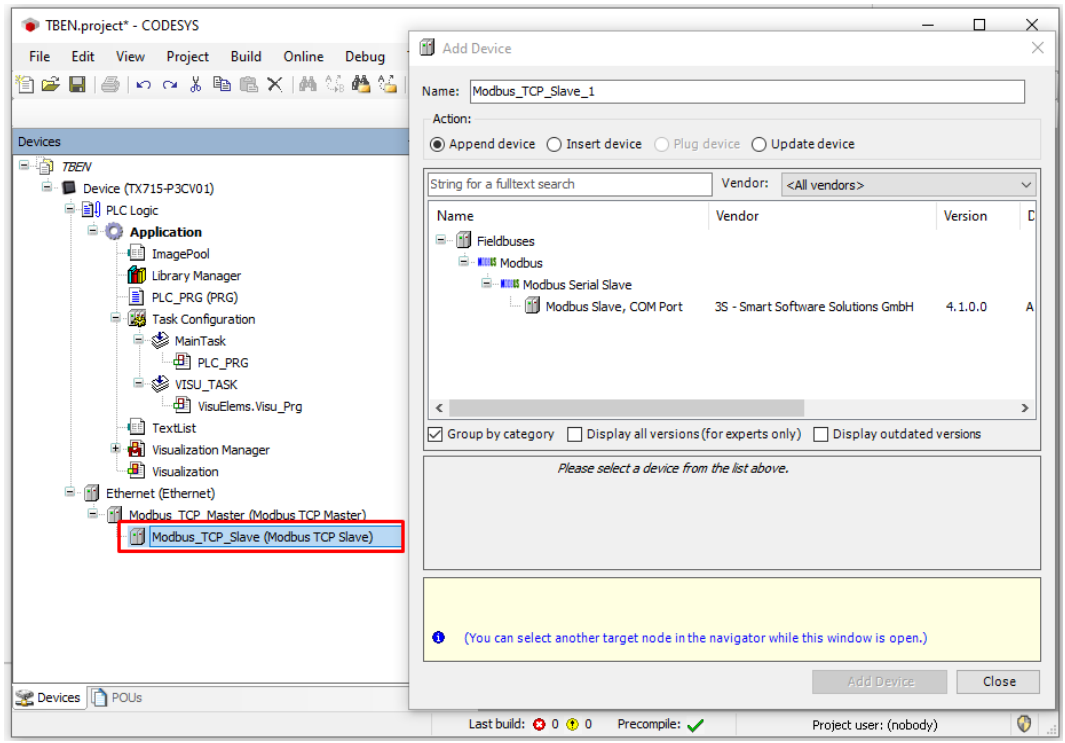

Fig. 63: Adding the Modbus TCP Slave

7.5.2 Configuring the Network Interface

- Click **Device → Scan network.**
- Select Modbus TCP Master (here: TX715-P3CV01) and confirm with OK.

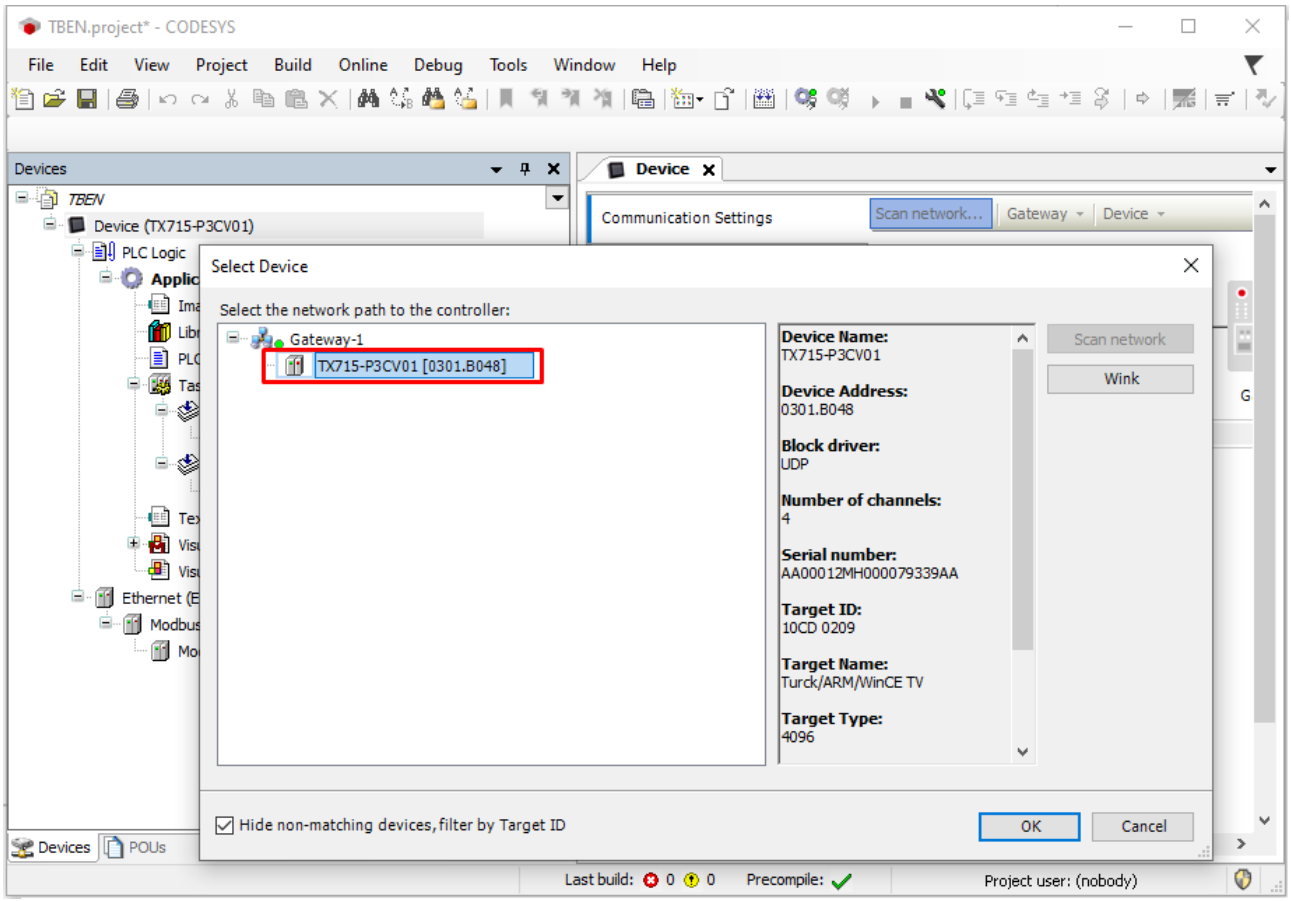

Fig. 64: Configuring the network interface

- Double-click **Ethernet**.
- Open the dialog box **Network Adapter** by clicking the **Browse…** button in the register tab **General**.
- Select the interface TX715-P3CV01 (here: 192.168.145.72)

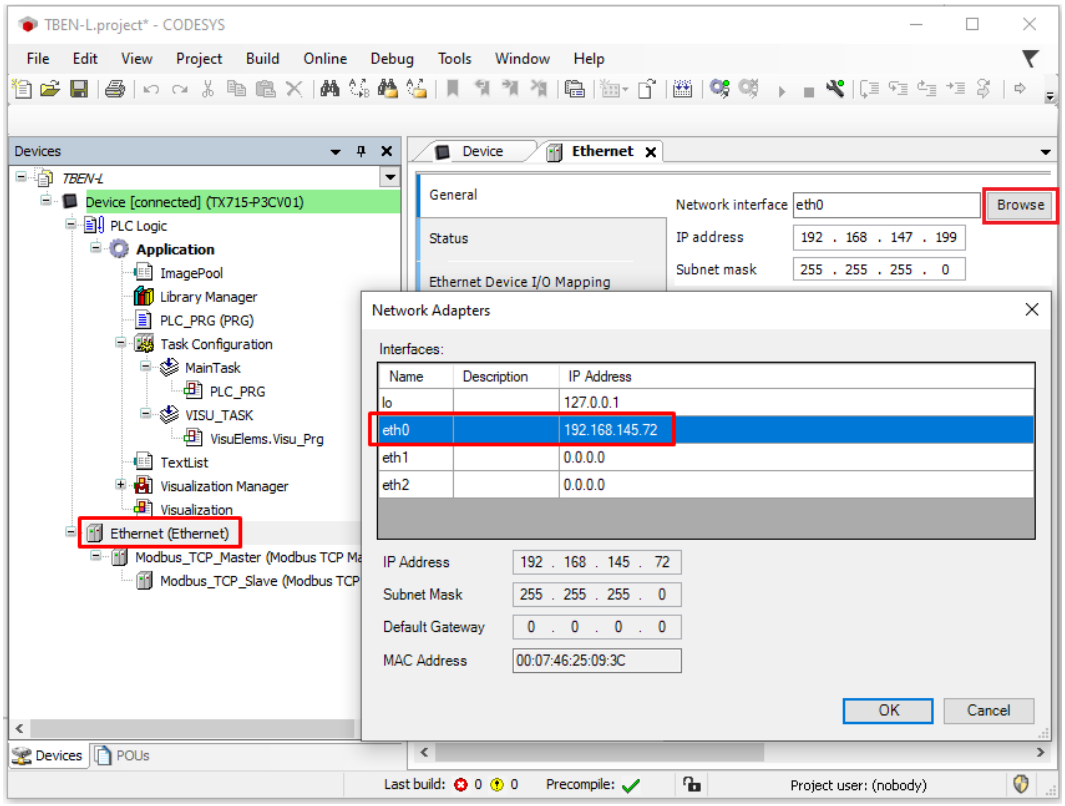

Fig. 65: Selecting the interface

7.5.3 Modbus TCP Server (Slave): setting the IP address

- Double click **Modbus TCP Server (Slave)**.
- Enter the **slave IP address** in the **General** register tab (here: 192.168.145.200).

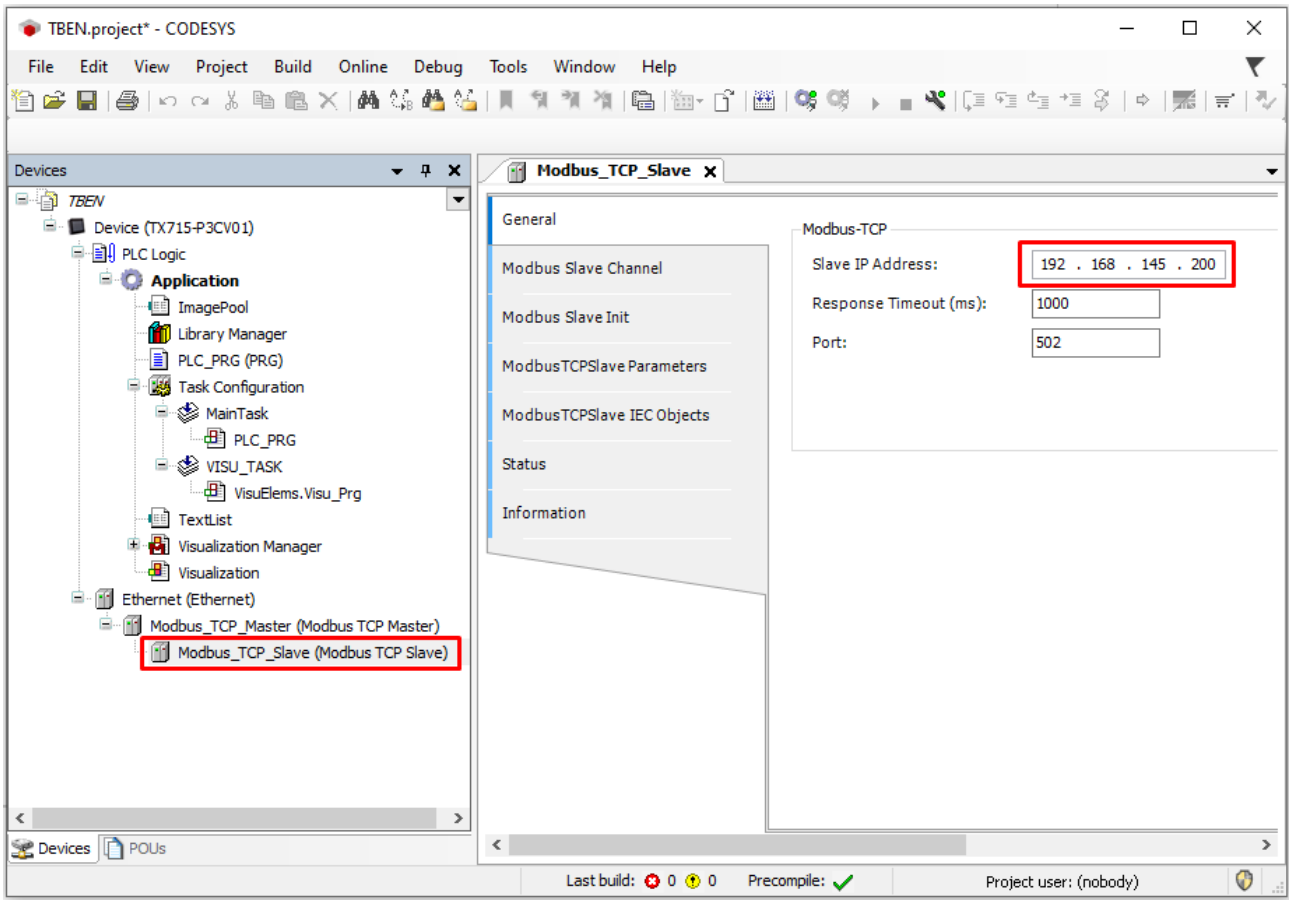

Fig. 66: Modbus TCP Slave: Setting the IP address

7.5.4 Defining modbus channels

Defining channel 0 (input data)

- Double click **Modbus TCP Slave**.
- In the register tab select **Modbus Slave Channel → Add Channel**.
- Enter the following values:
  Channel name
  Access type: Read Input Registers
  Offset: 0x0000
  Length: 1 register
- Confirm with OK.

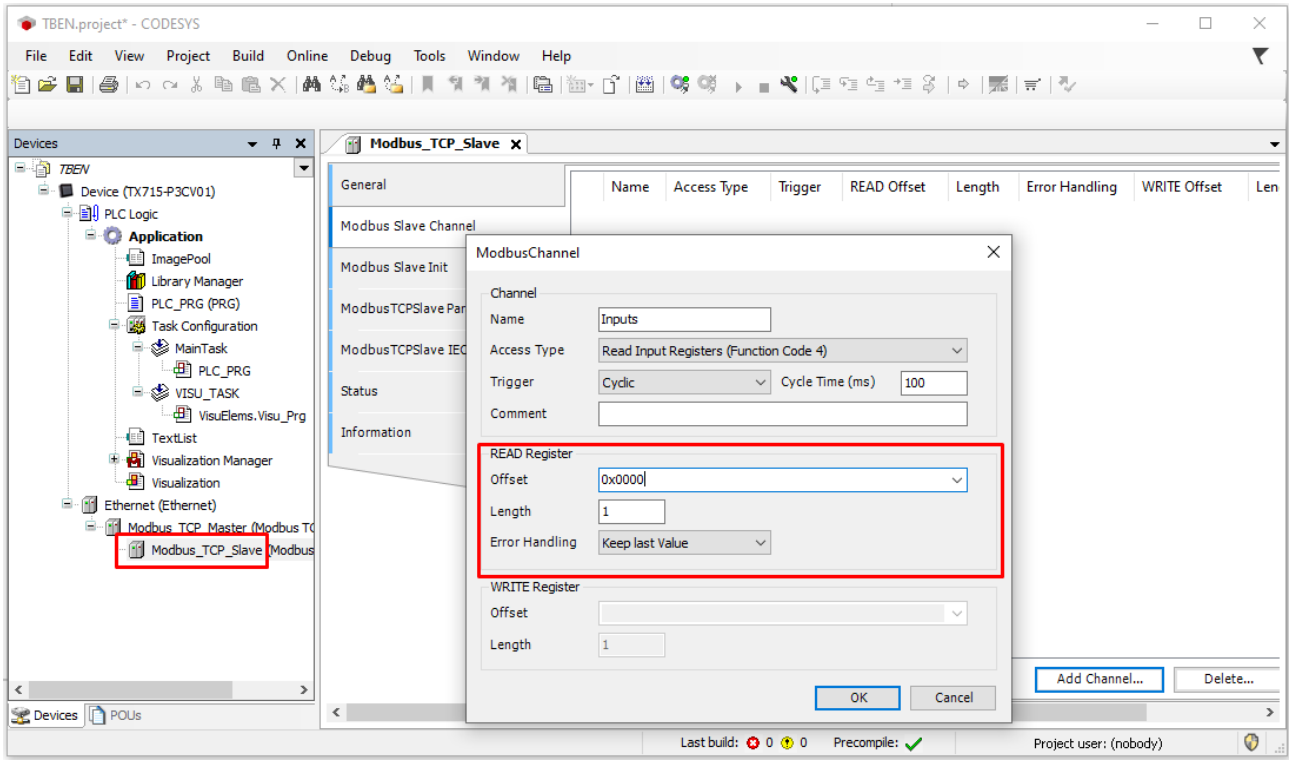

Fig. 67: Defining the input register

Defining channel 1 (output data)

- Double click **Modbus TCP Slave**.
- In the register tab select **Modbus Slave Channel → Add Channel**.
- Enter the following values:
  Channel name
  Access type Write Single Register
  Offset: 0x0800
  Length: 1 register
- Confirm with OK.

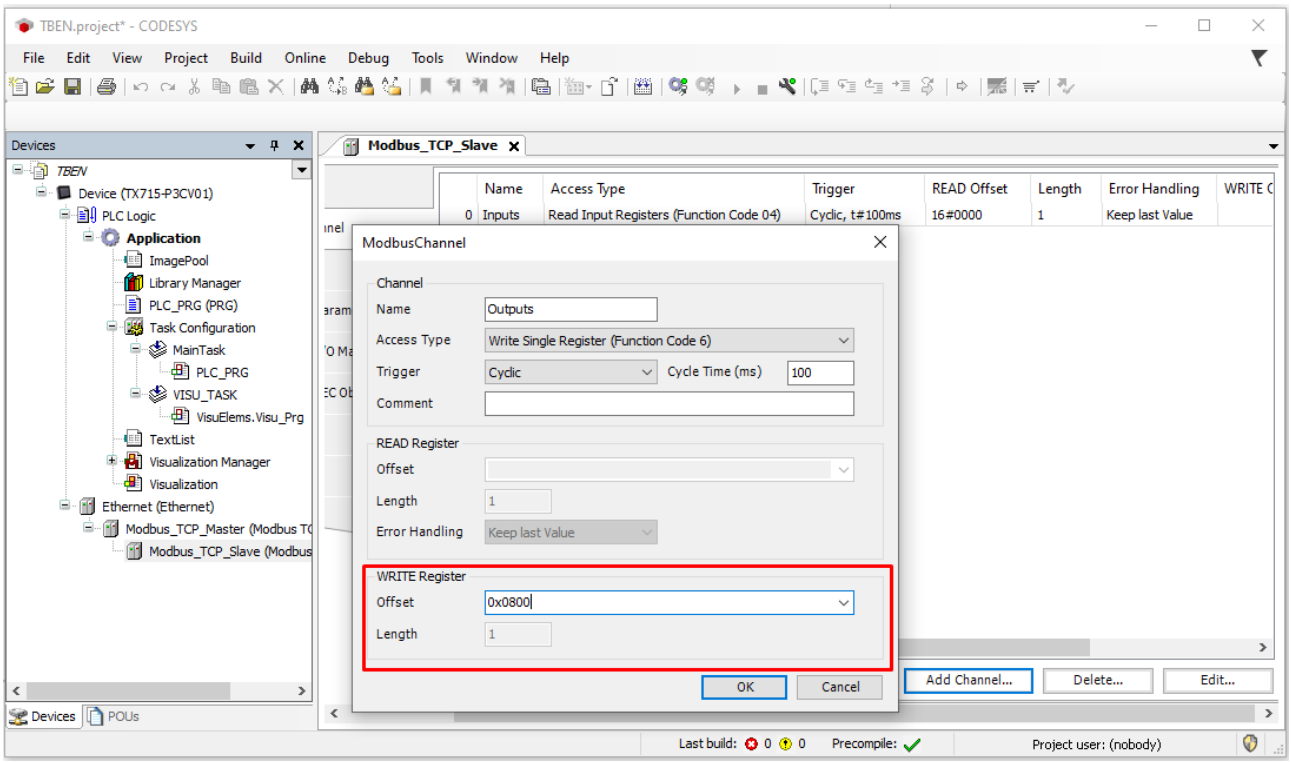

Fig. 68: Defining the output data register

7.5.5 Going online with the PLC

- Select the device.
- Click **Online → Login.**

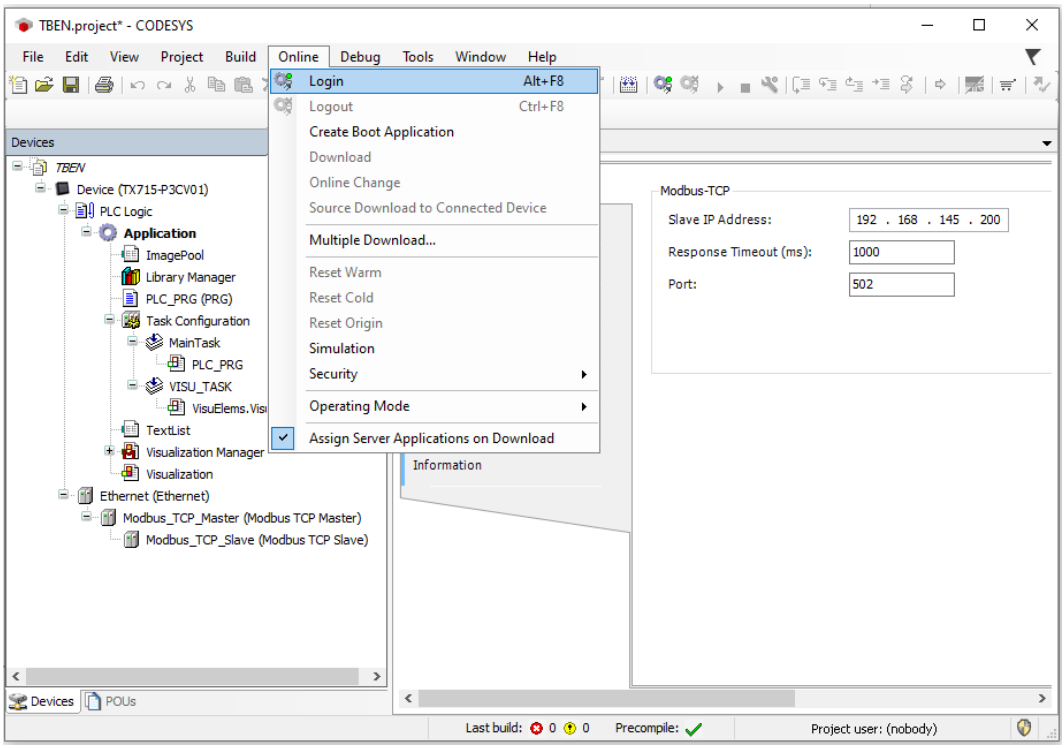

Fig. 69: Login

▶ Download the application to the PLC and start it via **Debug** → **Start**.

⇨ The Modbus TCP communication is setup.

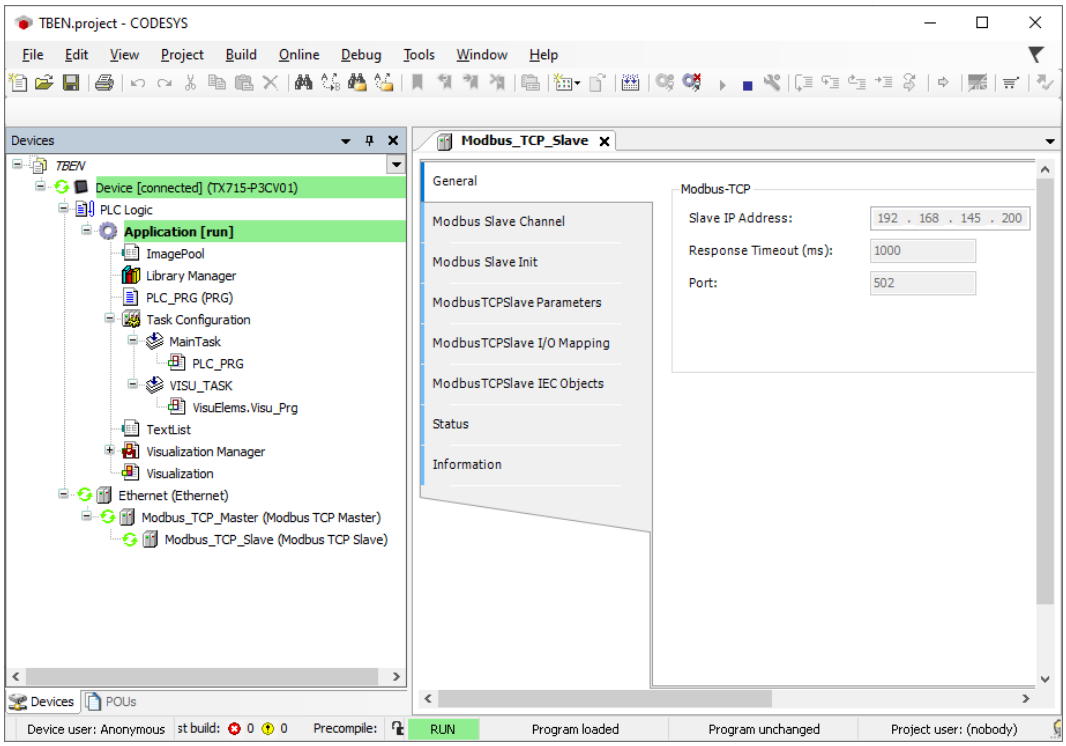

Fig. 70: Modbus TCP communication

7.5.6 Reading process data

The process data can be interpreted by means of the mapping ([▶ 62]) if the device is connected to the PLC.

The process data can be interpreted by means of the mapping (Register Mapping) if the device is connected to the PLC.

- ▶ Double click **Modbus TCP Slave**.
- ▶ Click onto register tab **Modbus TCP Slave I/O Mapping**.
- ▶ Set the function **Always update variables** to **Enabled 1 (…)**.
- ⇨ The process data are displayed.

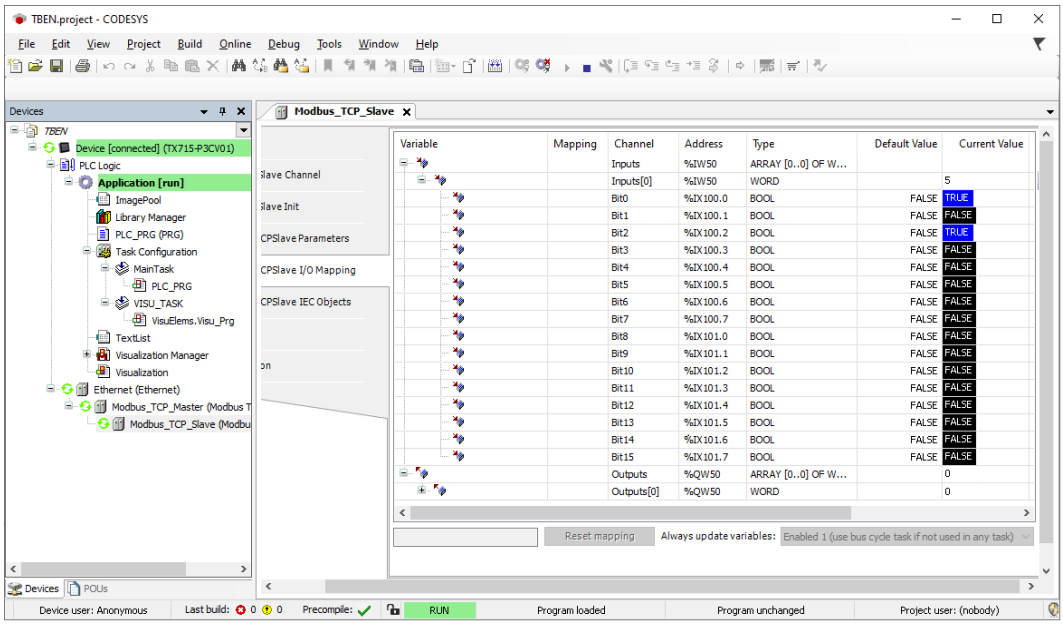

Fig. 71: Process data

7.6 Commissioning the devices in EtherNet/IP

7.6.1 Common EtherNet/IP features

Feature	Description
QuickConnect	< 500 ms
Device Level Ring (DLR)	Yes
Number of TCP connections	3
Number of CIP connections	10
Input assembly instance	103
Output assembly instance	104
Configuration assembly Instance	106

7.6.2 EDS files and catalog files

The EDS and catalog files can be downloaded free of charge from **www.turck.com**.

- TBEN-S_ETHERNETIP.zip

7.6.3 QuickConnect (QC)

The devices support QuickConnect. The maximum start-up times defined for QuickConnect are, however, only guaranteed for the digital channels.

QuickConnect enables a PLC to build up connections to EtherNet/IP nodes in less than 500 ms after switching-on the power supply for the EtherNet/IP network. The fast start-up is necessary for fast tool changing applications at robot arms for example in the automobile industry.

QuickConnect can be activated via the web server of the device, via Configuration Assembly (e.g. in Logix Designer (Studio 5000) or via Class Instance Attribute.

NOTE
Activating QuickConnect activated the automatic setting of all necessary port-properties.

Port property	Status
Auto negotiation	Deactivated
Transmission speed	100BaseT
Duplex	Full duplex
Topology	Linear
AutoMDIX	Deactivated

For information on the correct connection of Ethernet cables in QuickConnect applications, please refer to the chapter Connecting [▸ 30].

Activating QuickConnect via Configuration Assembly

The Configuration Assembly is part of the device's Assembly Class.

- Configure the Configuration Assembly in Logix Designer (Studio 5000).
- Activate QuickConnect via byte9, bit 0 = 1 in the Controller Tags.

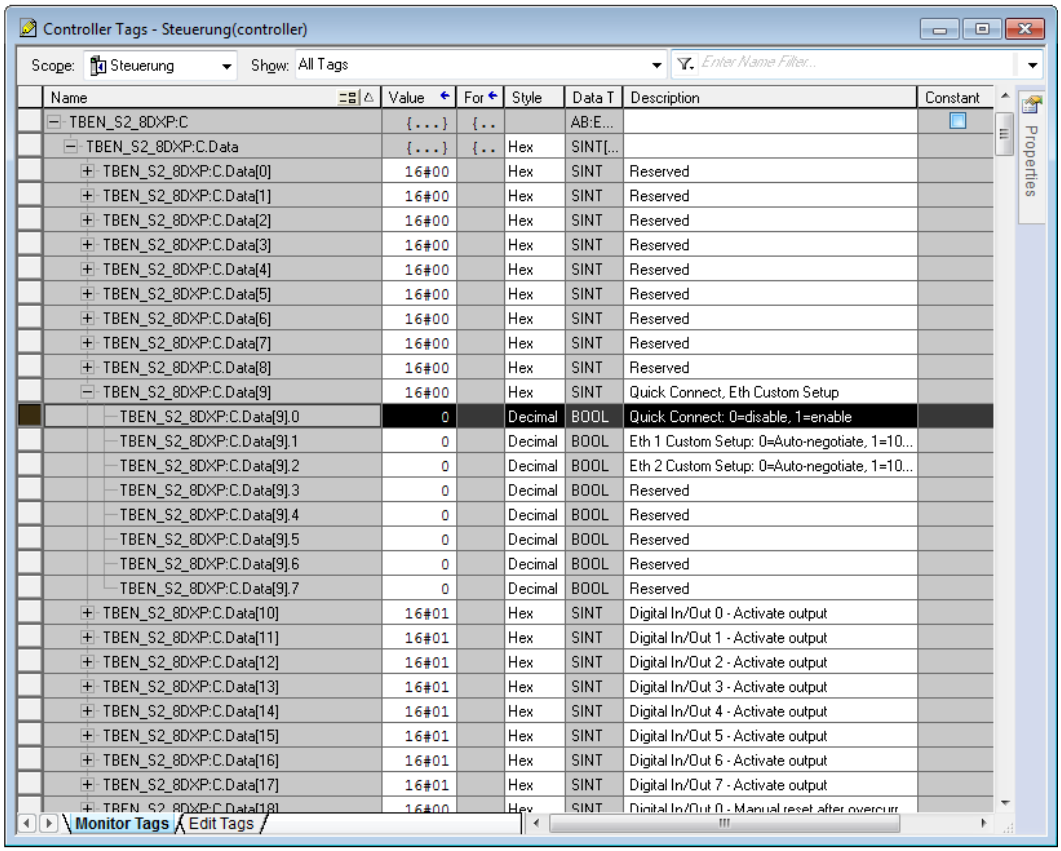

Name	Value	For	Style	Data T	Description	Constant
TBEN_S2_8DXP:C	{...}	{..		AB:E...		
TBEN_S2_8DXP:C.Data	{...}	{..	Hex	SINT[...		
TBEN_S2_8DXP:C.Data[0]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[1]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[2]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[3]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[4]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[5]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[6]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[7]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[8]	16#00		Hex	SINT	Reserved	
TBEN_S2_8DXP:C.Data[9]	16#00		Hex	SINT	Quick Connect, Eth Custom Setup	
TBEN_S2_8DXP:C.Data[9].0	0		Decimal	BOOL	Quick Connect: 0=disable, 1=enable	
TBEN_S2_8DXP:C.Data[9].1	0		Decimal	BOOL	Eth 1 Custom Setup: 0=Auto-negotiate, 1=10...	
TBEN_S2_8DXP:C.Data[9].2	0		Decimal	BOOL	Eth 2 Custom Setup: 0=Auto-negotiate, 1=10...	
TBEN_S2_8DXP:C.Data[9].3	0		Decimal	BOOL	Reserved	
TBEN_S2_8DXP:C.Data[9].4	0		Decimal	BOOL	Reserved	
TBEN_S2_8DXP:C.Data[9].5	0		Decimal	BOOL	Reserved	
TBEN_S2_8DXP:C.Data[9].6	0		Decimal	BOOL	Reserved	
TBEN_S2_8DXP:C.Data[9].7	0		Decimal	BOOL	Reserved	
TBEN_S2_8DXP:C.Data[10]	16#01		Hex	SINT	Digital In/Out 0 - Activate output	
TBEN_S2_8DXP:C.Data[11]	16#01		Hex	SINT	Digital In/Out 1 - Activate output	
TBEN_S2_8DXP:C.Data[12]	16#01		Hex	SINT	Digital In/Out 2 - Activate output	
TBEN_S2_8DXP:C.Data[13]	16#01		Hex	SINT	Digital In/Out 3 - Activate output	
TBEN_S2_8DXP:C.Data[14]	16#01		Hex	SINT	Digital In/Out 4 - Activate output	
TBEN_S2_8DXP:C.Data[15]	16#01		Hex	SINT	Digital In/Out 5 - Activate output	
TBEN_S2_8DXP:C.Data[16]	16#01		Hex	SINT	Digital In/Out 6 - Activate output	
TBEN_S2_8DXP:C.Data[17]	16#01		Hex	SINT	Digital In/Out 7 - Activate output	
TBEN_S2_8DXP:C.Data[18]	16#00		Hex	SINT	Digital In/Out 0 - Manual reset after overcurr...	

Fig. 72: Configuring QuickConnect in RSLogix

Activating Quick Connect via Class Instance Attribute

- Activate Quick Connect via Class Instance Attribute as follows:

Class	Instance	Attribute	Value
0xF5	0x01	0x0C	0: deactivated (default) 1: activated

Activating QuickConnect via the Webserver.

- Activate the checkbox **Activate QuickConnect** in the web server.

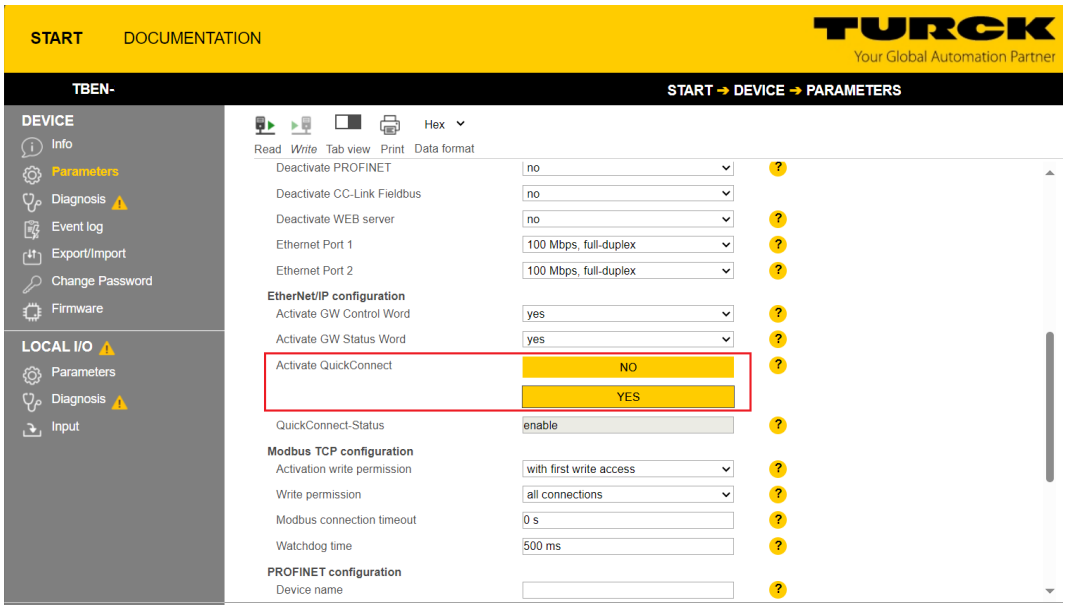

Fig. 73: Activating Quick Connect in the web server

7.6.4 Device Level Ring (DLR)

The devices support DLR (Device Level Ring). The DLR redundancy protocol is used to increase the stability of EtherNet/IP networks.

DLR-enabled devices have an integrated switch and can thus be integrated into a ring topology. The DLR protocol is used to detect an interruption in the ring. If the data line is interrupted, data are sent through an alternative network section, so that the network can be reconfigured as soon as possible.

DLR-capable network nodes (DLR supervisor) are provided with extended diagnostic functions which enable the devices to localize errors and thus decrease the time for error search and maintenance. Normally, the controller (i.e. the controller/PLC) assumes the supervisor function, all other network nodes are DLR participants. The supervisor blocks one of its two ports for normal Ethernet traffic, so that a line topology is created for normal Ethernet telegrams. DLR messages can continue to use the ring in both directions and thus continuously check the function of the ring.

7.6.5 Diagnostic messages via process data

Besides the evaluation of diagnostic data via Explicit Messages, TBEN-S from firmware version 3.1.4.0 (digital modules) and Firmware-Version 3.1.2.0 (analog modules) with EtherNet/ IP offer the possibility of mapping diagnostic data into the process data. The diagnostic messages are directly mapped into the process data. Additionally, the device's status word contains the module diagnostics.

The status word contains the module status.

Byte no.	Bit no.							
	7	6	5	4	3	2	1	0
0 (LSB)	Under-voltage V2	-	-	-	-	-	-	Module dia-gnostics pending
1 (MSB)	-	Force Mode active	-	-	-	-	Under-voltage V1	-

Control word

The control word has no function.

7.6.6 EtherNet/IP standard classes

The modules support the following EtherNet/IP standard classes in accordance with the CIP specification.

Class Code		Object name
Dec.	Hex.	
01	0x01	Identity Object [▸ 96]
04	0x04	Assembly Object [▸ 98]
06	0x06	Connection Manager Object [▸ 121]
245	0xF5	TCP/IP Interface Object [▸ 122]
246	0xF6	Ethernet Link Object [▸ 125]

Identity Object (0x01)

The following description of the Ethernet Link Object is taken from the CIP specification, Vol. 2, Rev. 2.1 by ODVA & ControlNet International Ltd. and adapted to the Turck products.

Instance attributes

Attr. no.		Attribute name	Get/Set	Type	Value
Dec.	Hex.				
1	0x01	Vendor	G	UINT	Contains the manufacturer ID. Turck = 0x30
2	0x02	Product type	G	UINT	Shows the general product type. Communications Adapter 12_{dez} = 0x0C
3	0x03	Product code	G	UINT	Identifies a special product in a device type. default: 27247_{dec} = 0x6A6F

Attr. no.		Attribute name	Get/Set	Type	Value
Dec.	Hex.				
4	0x04	Revision ■ Major ■ Minor	G	STRUCT OF: ■ USINT ■ USINT	Revision of the device which is represented by the Indentity Object. ■ 0x01 ■ 0x06
5	0x05	Device status	G	WORD	WORD
6	0x06	Serial number	G	UDINT	Contains the last 3 bytes of the MAC ID
7	0x07	Product name	G	STRUCT OF: USINT STRING [13]	i.e.: TBEN-S1-8DXP

Device status

Bit	Name	Definition
0…1	Reserved	default = 0
2	Configured	TRUE = 1: The application in the device has been configured (default setting).
3	Reserved	default = 0
4…7	Extended Device Status	0011 = no I/O connection established 0110 = at least one I/O connection in RUN mode 0111 = at least one I/O connection established, all in IDLE mode All other settings = reserved
8	Minor recoverable fault	Recoverable fault, e.g.: ■ Undervoltage ■ Force mode of DTM active ■ Diagnostics at I/O channel active
9…10	Reserved	
11	DIAG	Common error bit
12…15	Reserved	default = 0

Common services

Service code		Class	Instance	Service name
Dec.	Hex.			
1	0x01	Yes	Yes	Get_Attribute_All Returns a predefined list of object attributes
5	0x05	No	Yes	Reset Starts the reset service for the device
14	0x0E	Yes	Yes	Get_Attribute_Single Returns the content of a specified attribute
16	0x10	No	No	Set_Attribute_Single Changes a single attribute

Assembly Object (0x04)

Assembly Objects bind attributes of multiple objects. to allow data to or from each object to be sent or received over a single connection.

The following description of the Ethernet Link Object is taken from the CIP specification, Vol. 2, Rev. 2.1 by ODVA & ControlNet International Ltd. and adapted to the Turck products.

Class attributes

Attr. no.		Attribute name	Get/set	Type	Value
Dec.	Hex.				
1	0x01	Revision	G	UINT	2
2	0x02	Max. object instance	G	UINT	104

Instance Attributes

Attr. no.		Attribute name	Get/set	Type	Value
Dec.	Hex.				
3	0x03	Data	S	ARRAY OF BYTE	Identifies a special product in a device type. default: $27247_{dec.}$ = 0x6A6F
4	0x04	Size	G	UINT	Number of bytes in attribute 3: 256 or variable

Common services

Service code		Class	Instance	Service name
Dec.	Hex.			
1	0x01	Yes	Yes	Get_Attribute_All Returns a predefined list of object attributes.
14	0x0E	Yes	Yes	Get_Attribute_Single Returns the content of a specified attribute.

Configuration Assembly (Instance 106)

The modules support Configuration Assembly.

The Configuration Assembly contains:

10 bytes module configuration data (EtherNet/IP specific)

+ x Byte (parameter data, depending on device type)

Device Configuration Data

The default values are written in **bold**.

Designation	Value		Meaning
QuickConnect	0	**disabled**	QuickConnect is deactivated.
	1	Activated	QuickConnect is activated.
Eth … Port-Setup	0	**Auto negotiation**	The port is set to autonegotiation.
	1	100BT/FD	Defined setting of communication parameters for the Ethernet port to: ■ 100BaseT ■ Full duplex

■ Configuration Assembly – TBEN-S1-8DIP/TBEN-S1-8DIP-D

Byte no.		**Bit no.**							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
Channel 0									
10	0x0A	DMOD_CNT DI0							
11	0x0B	-	-	-	-	-	-	-	DIFT DI0
12	0x0C	IST DI0							
13	0x0D	-							
Channel 1									
14	0x0E	DMOD DI1							
15	0x0F	-	-	-	-	-	-	-	DIFT DI1
16	0x10	IST DI1							
17	0x11	-							
Channel 2									
18	0x12	Assignment similar to channel 1 (byte 14…17)							
19	0x13								
20	0x14								
21	0x15								
…									
Channel 7									
38	0x26	Assignment similar to channel 1 (byte 14…17)							
39	0x27								
40	0x28								
41	0x29								

- Configuration Assembly – TBEN-S2-8DIP

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
Channel 0									
10	0x0A	DMOD_CNT DI0							
11	0x0B	-	-	-	-	-	-	-	DIFT DI0
12	0x0C	IST DI0							
13	0x0D	-							
Channel 1									
14	0x0E	DMOD DI1							
15	0x0F	-	-	-	-	-	-	-	DIFT DI1
16	0x10	IST DI1							
17	0x11	-							
Channel 2									
18	0x12	Assignment similar to channel 1 (byte 14…17)							
19	0x13								
20	0x14								
21	0x15								
…									
Channel 7									
38	0x26	Assignment similar to channel 1 (byte 14…17)							
39	0x27								
40	0x28								
41	0x29								
42	0x2A	-	-	-	-	-	-	VAUX1 pin1 C0 (Ch0/1)	
43	0x2B	-	-	-	-	-	-	VAUX1 pin1 C1 (Ch2/3)	
44	0x2C	-	-	-	-	-	-	VAUX1 pin1 C2 (Ch4/5)	
45	0x2D	-	-	-	-	-	-	VAUX1 pin1 C3 (Ch6/7)	

■ Configuration Assembly – TBEN-S1-8DOP

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
10	0x0A	SRO7	SRO6	SRO5	SRO4	SRO3	SRO2	SRO1	SRO0
11	0x0B	-							
12	0x0C	DMOD_PWM channel 3							
13	0x0D	-							
14	0x0E	DMOD_PWM channel 7							

■ Configuration Assembly – TBEN-S1-4DIP-4DOP

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
10	0x0A	-	-	-	-	SRO7	SRO6	SRO5	SRO4
11	0x0B	-							
12	0x0C	DMOD_CNT DI0							
13	0x0D	-	-	-	-	-	-	-	DIFT DI0
14	0x0E	IST DI0							
15	0x0F	-							
16	0x10	DMOD_DI1							
17	0x11	-	-	-	-	-	-	-	DIFT DI1
18	0x12	IST DI1							
19	0x13	-							
20	0x14	DMOD_DI2							
21	0x15	-	-	-	-	-	-	-	DIFT DI2
22	0x16	IST DI2							
23	0x17	-							
24	0x18	DMOD_DI3							
25	0x19	-	-	-	-	-	-	-	DIFT DI3
26	0x1A	IST DI3							
27	0x1B	-							
28	0x1C	DMOD_PWM DO7							

- Configuration Assembly – TBEN-S1-4DXP

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▸ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▸ 199]									
10	0x0A	-	-	-	-	SRO3	SRO2	SRO1	SRO0
11	0x0B	-	-	-	-	EN DO3	EN DO2	EN DO1	EN DO0
12	0x0C	DMOD_CNT DX0							
13	0x0D	-	-	-	-	-	-	-	DIFT DX0
14	0x0E	IST DX0							
15	0x0F	-							
16	0x10	DMOD_DX1							
17	0x11	-	-	-	-	-	-	-	DIFT DX1
18	0x12	IST DX1							
19	0x13	-							
20	0x14	DMOD_DX2							
21	0x15	-	-	-	-	-	-	-	DIFT DX2
22	0x16	IST DI2							
23	0x17	-							
24	0x18	DMOD_DX3							
25	0x19	-	-	-	-	-	-	-	DIFT DX3
26	0x1A	IST DX3							
27	0x1B	-							

- Configuration Assembly – TBEN-S1-8DXP

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00…0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
10	0x0A	SRO7	SRO6	SRO5	SRO4	SRO3	SRO2	SRO1	SRO0
11	0x0B	EN DO7	EN DO6	EN DO5	EN DO4	EN DO3	EN DO2	EN DO1	EN DO0
12	0x0C	DMOD_CNT DX0							
13	0x0D	-	-	-	-	-	-	-	DIFT DX0
14	0x0E	IST DX0							
15	0x0F	-							
16	0x10	DMOD_DX1							
17	0x11	-	-	-	-	-	-	-	DIFT DX1
18	0x12	IST DX1							
19	0x13	-							
20	0x14	DMOD_DX2							
21	0x15	-	-	-	-	-	-	-	DIFT DX2
22	0x16	IST DI2							
23	0x17	-							
24	0x18	DMOD_DX3							
25	0x19	-	-	-	-	-	-	-	DIFT DX3
26	0x1A	IST DX3							
27	0x1B	-							
28	0x1C	DMOD_DX4							
29	0x1D	-	-	-	-	-	-	-	DIFT DX4
30	0x1E	IST DX4							
31	0x1F	-							
32	0x20	DMOD_DX5							
33	0x21	-	-	-	-	-	-	-	DIFT DX5
34	0x22	IST DX5							
35	0x23	-							
36	0x24	DMOD_DX6							
37	0x25	-	-	-	-	-	-	-	DIFT DX6
38	0x26	IST DX6							
39	0x27	-							
40	0x28	DMOD_PWM DX7							
41	0x29	-	-	-	-	-	-	-	DIFT DX7
42	0x2A	IST DX7							

■ Configuration Assembly – TBEN-S2-8DXP

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00…0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
10	0x0A	-	-	-	-	-	-	-	SRO0
…									
17	0x11	-	-	-	-	-	-	-	SRO7
18	0x12	-	-	-	-	-	-	-	EN DO0
…									
25	0x19	-	-	-	-	-	-	-	EN DO7
26	0x1A	DMOD_CNT DX0							
27	0x1B	-	-	-	-	-	-	-	DIFT DX0
28	0x1C	IST DX0							
29	0x1D	-							
30	0x1E	DMOD_DX1							
31	0x1F	-	-	-	-	-	-	-	DIFT DX1
32	0x20	IST DX1							
33	0x21	-							
34…37	0x22…0x25	Parameters DX2, assignment acc. to byte 30…33 (0x1E…0x21) for DX1							
38	0x26	DMOD_PWM DX3							
39	0x27	-	-	-	-	-	-	-	DIFT DX3
40	0x28	IST DX3							
41	0x29	-							
42…45	0x2A…0x2D	Parameters DX4, assignment acc. to byte 30…33 (0x1E…0x21) for DX1							
46…49	0x2E…0x31	Parameters DX5, assignment acc. to byte 30…33 (0x1E…0x21) for DX1							
50…53	0x32…0x35	Parameters DX6, assignment acc. to byte 30…33 (0x1E…0x21) for DX1							
54	0x36	DMOD_PWM DX7							
55	0x37	-	-	-	-	-	-	-	DIFT DX7
56	0x38	IST DX7							
57	0x39	-							
58	0x3A	-	-	-	-	-	-	VAUX1 pin1 C0 (Ch0/1)	
59	0x3B	-	-	-	-	-	-	VAUX1 pin1 C1 (Ch2/3)	
60	0x3C	-	-	-	-	-	-	VAUX1 pin1 C2 (Ch4/5)	
61	0x3D	-	-	-	-	-	-	VAUX1 pin1 C3 (Ch6/7)	

- Configuration Assembly – TBEN-S2-4AI

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
Channel 0									
10	0x0A	-	-	-	-	Operation mode			
11	0x0B	-	-	-	-	Thermocouple type			
12	0x0C	-	-	-	-	Thermocouple cold junction compensation			
13	0x0D	-	-	-	-	Voltage range			
14	0x0E	-	-	-	-	-	-	Voltage wiring type	
15	0x0F	-	-	-	-	-	-	Current range	
16	0x10	-	-	-	-	-	-	Current wiring type	
17	0x11	-	-	-	-	-	-	Resistance range	
18	0x12	-	-	-	-	-	-	Resistance wiring type	
19	0x13	RTD type							
20	0x14	-	-	-	-	-	-	RTD wiring type	
21	0x15	-	-	-	-	-	-	Data representation	
22	0x16	-	-	-	-	-	-	-	Temp. unit
23	0x17	-	-	-	-	Input averaging filter DIFT			
24	0x18	-	-	-	-	-	-	-	Deactiv. ch.
25	0x19	-	-	-	-	-	-	-	Deactivate diagn.
26	0x1A	-	-	-	-	-	-	-	Mains suppression
27	0x1B	-							
Channel 1									
28…45	0x1C… 0x2D	Assignment similar to channel 0 (byte 10…27)							
Channel 2									
46…63	0x2E… 0x3F	Assignment similar to channel 0 (byte 10…27)							
Channel 3									
64…81	0x40… 0x51	Assignment similar to channel 0 (byte 10…27)							
82…83	0x52… 0x53	reserved							

- Configuration Assembly – TBEN-S2-4AO

Byte no.		Bit no.							
Dec.	**Hex.**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Device Configuration Data [▶ 99]									
0…9	0x00… 0x09	-					Eth2 Port-Setup	Eth1 Port-Setup	Quick Connect
Parameter data [▶ 199]									
Channel 0									
10	0x0A	-	-	-	-	Operation mode			
11	0x0B	-	-	-	-	Current range			
12	0x0C	-	-	-	-	-	-	Data representation	
13	0x0D	-	-	-	-	Voltage range			
14	0x0E	-	-	-	-	-	-	-	Deactiv. ch.
15	0x0F	-	-	-	-	-	-	-	Output recovery mode
16	0x10	-	-	-	-	-	-	-	Deactivate diagn.
17	0x11	-	-	-	-	-	-	Output on fieldbus error	
18	0x12	Substitute value (SVAL)							
19	0x13								
Channel 1									
20…29	0x14… 0x1D	Assignment similar to channel 0 (byte 10…19)							
Channel 2									
30…39	0x1E… 0x27	Assignment similar to channel 0 (byte 10…19)							
Channel 3									
40…49	0x28… 0x31	Assignment similar to channel 0 (byte 10…19)							
Channel									
50…52	0x32… 0x33	reserved							

Process data instances

Instance 101
Contains the device input data (static length 256 byte)
2 byte status informationen Diagnostic messages via process data
+ process data

Instance 102
Contains the device output data (static length 256 byte)
2 byte status Control word (mapped, but unused
+ process data

Instance 103 and Instance 104

Instance 103 and Instance 104 are in- and output assembly instances with variable assembly sizes. The assembly size is pre-calculated to support the device's I/O-configuration, enabled diagnostics, etc. The effective size of the Assembly Instance can be determined using the Assembly Object (instance 0×67, attribute 0x04).

Input data	
Input Assembly Instance 103	0…470 bytes, default: 470 byte

Output data	
Output Assembly Instance 104	0…400 bytes, default: 400 byte

Process data mapping

NOTE
Activating or deactivating the Status and Control Word in EtherNet/IP changes the process data mapping.
▶ Observe the offset in the process data mapping of the device

- **Input data – TBEN-S1-8DIP** [▶ 204]
  status word + 7 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
diagn.																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	VERR V1 Ch4-7	VERR V1 Ch0-3
Latch IN																
0x0003	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Module status																
0x0007	-															

- **Output data data – TBEN-S1-8DIP** [▶ 212]
  Control word + 2 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Latch reset																
0x0001	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset

- **Input data – TBEN-S2-8DIP** [▶ 204]
  status word + 7 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
diagn.																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
Latch IN																
0x0003	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Module status																
0x0007	-															

- **Output data data – TBEN-S2-8DIP** [▶ 212]
  Control word + 2 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Latch reset																
0x0001	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
00002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset

- **Input data – TBEN-S1-8DIP-D** [▶ 204]
  status word + 7 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagn.																
0x0002	-	-	-	-	-	-	-	-	VERR V1 C7	VERR V1 C6	VERR V1 C5	VERR V1 C4	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
Latch IN																
0x0003	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Module status																
0x0007	-															

- **Output data data – TBEN-S1-8DIP-D** [▶ 212]
  Control word + 2 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Latch reset																
0x0001	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset

- **Input data – TBEN-S1-8DOP** [▶ 204]
  status word + 3 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
Diagnostics																
0x0001	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch0-7	VERR V2 Ch0-3
PWM diag. Ch3																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM diag. Ch7																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	

- **Output data data – TBEN-S1-8DOP** [▶ 212]
  Control word + 3 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
OUT																
0x0001	-	-	-	-	-	-	-	-	DO7 C7P4	DO6 C6P4	DO5 C5P4	DO4 C4P4	DO3 C3P4	DO2 C2P4	DO1 C1P4	DO0 C0P4
PWM Ch3																
0x0002	-	-	-	-	-	-	-	-	Duty cycle							
PWM Ch7																
0x0003	-	-	-	-	-	-	-	-	Duty cycle							

- **Input data – TBEN-S1-4DIP-4DOP** [▶ 204]
  status word + 8 words

Word no.	**Bit no.**															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
diagn.																
0x0002	-	-	-	-	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V1 Ch4-7	VERR V1 Ch0-3
Latch IN																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	DI3	DI2	DI1	DI0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Module status																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
PWM diag. Ch7																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	

- **Output data data – TBEN-S1-4DIP-4DOP** [▸ 212]
  Control word + 4 words

Word no.	**Bit no.**															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Control																
0x0000																
OUT	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	DO7 C7P4	DO6 C6P4	DO5 C5P4	DO4 C4P4
Latch reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DI3	DI2	DI1	DI0
CNT Reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset
PWM Ch7																
0x0004	-	-	-	-	-	-	-	-	Duty cycle							

- **Input data – TBEN-S1-4DXP** [▶ 204]
  status word + 8 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
diagn.																
0x0002	-	-	-	-	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch0-7	VERR V1 Ch0-3
Latch IN																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Module status																
0x0007	-															
PWM diag. Ch3																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	

- **Output data data – TBEN-S1-4DXP** [▶ 212]
  Control word + 4 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000																
OUT	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Latch reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
CNT Reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset
PWM Ch3																
0x0004	-	-	-	-	-	-	-	-	Duty cycle							

- **Input data – TBEN-S1-8DXP** [▶ 204]
  status word + 9 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	DX7 C7P4	DX6 C6P4	DX5 C5P4	DX4 C4P4	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
diagn.																
0x0002	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch4-7	VERR V1 Ch0-3
Latch IN																
0x0003	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Module status																
0x0007	-															
PWM diag. Ch3																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM diag. Ch7																
0x0009	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	

- **Output data data – TBEN-S1-8DXP** [▸ 212]
  Control word + 5 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000																
OUT	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
0x0001	-	-	-	-	-	-	-	-	DX7 C7P4	DX6 C6P4	DX5 C5P4	DX4 C4P4	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Latch reset																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT Reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset
PWM Ch3																
0x0004	-	-	-	-	-	-	-	-	Duty cycle							
PWM Ch7																
0x0005	-	-	-	-	-	-	-	-	Duty cycle							

- **Input data – TBEN-S2-8DXP** [▶ 204]
  status word + 9 words

Word no.	**Bit no.**															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
0x0001	-	-	-	-	-	-	-	-	DX7 C3P2	DX6 C3P4	DX5 C2P2	DX4 C2P4	DX3 C1P2	DX2 C1P4	DX1 C0P2	DX0 C0P4
diagn.																
0x0002	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	VERR V2 P1 Ch6-7	VERR V2 P1 Ch4-5	VERR V1 P1 Ch2-3	VERR V1 P1 Ch0-1
Latch IN																
0x0003	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT K0																
0x0004	Counter value LSB															
0x0005	Counter value MSB															
Freq. Ch0																
0x0006	Frequency MSB								Frequency LSB							
Status																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
PWM diag. Ch3																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR Ch3	
PWM diag. Ch7																
0x0009	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR Ch7	

- **Output data data – TBEN-S2-8DXP** [▸ 212]
  Control word + 6 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000																
OUT																
0x0001	-	-	-	-	-	-	-	-	DX7 C3P2	DX6 C3P4	DX5 C2P2	DX4 C2P4	DX3 C1P2	DX2 C1P4	DX1 C0P2	DX0 C0P4
Latch reset																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
CNT Reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT Reset
PWM Ch7																
0x0004	-	-	-	-	-	-	-	-	Duty cycle							
PWM Ch7																
0x0005	-	-	-	-	-	-	-	-	Duty cycle							
VAUX Control																
0x0006	-	-	-	-	-	-	-	-	-	-	-	-	VAUX 1 P1 C3	VAUX 1 P1 C2	VAUX 1 P1 C1	VAUX 1 P1 C0

- **Input data – TBEN-S2-4AI** [▶ 210]
  status word + 7 words

Word no.	**Bit no.**															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn
IN																
	MSB															**LSB**
0x0001	Analog value channel 0															
0x0002	Analog value channel 1															
0x0003	Analog value channel 2															
0x0004	Analog value channel 3															
diagn.																
0x0005	Channel 1								Channel 0							
	LLVU	UFL	OFL	WBR	V1A OL	ULVE	RTD SC	CJE	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTD SC	CJE
0x0006	Channel 4								Channel 3							
	LLVU	UFL	OFL	WBR	V1A OL	ULVE	RTD SC	CJE	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTD SC	CJE

- **Input data – TBEN-S2- 4AO** [▶ 210]
  status words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Status																
0x0000	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	Diag Warn

- **Output data data – TBEN-S2-4AO** [▶ 216]
  Control word + 6 words

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000																
OUT																
	MSB															**LSB**
0x0001	Analog value channel 0															
0x0002	Analog value channel 1															
0x0003	Analog value channel 2															
0x0004	Analog value channel 3															
diagn.																
0x0005	Channel 1								Channel 0							
	-	-	-	-	-	-	WBR	OVL	-	-	-	-	-	-	WBR	OVL
0x0006	Channel 4								Channel 3							
	-	-	-	-	-	-	WBR	OVL	-	-	-	-	-	-	WBR	OVL

Connection Manager Object (0x06)

This object is used for connection and connectionless communications, including establishing connections across multiple subnets.

The following description of the Ethernet Link Object is taken from the CIP specification, Vol. 2, Rev. 2.1 by ODVA & ControlNet International Ltd. and adapted to the Turck products.

Common services

Service code		Class	Instance	Meaning
Dec.	**Hex.**			
84	0x54	No	Yes	FWD_OPEN_CMD (opens a connection)
78	0x4E	No	Yes	FWD_CLOSE_CMD (closes a connection)
82	0x52	No	Yes	UNCONNECTED_SEND_CMD

TCP/IP Interface Object (0xF5)

The following description of the Ethernet Link Object is taken from the CIP specification, Vol. 2, Rev. 1.1 by ODVA & ControlNet International Ltd. and adapted to the Turck products.

Class attributes

Attr. no.		Designation	Get/Set	Type	Value
Dec.	Hex.				
1	0x01	Revision	G	UINT	1
2	0x02	Max. object instance	G	UINT	1
3	0x03	Number of instances	G	UINT	1
6	0x06	Max. class identifier	G	UINT	7
7	0x07	Max. instance attribute	G	UINT	6

Instance Attributes

Attr. no.		Designation	Get/Set	Type	Value
Dec.	Hex.				
1	0x01	Status	G	DWORD	Interface status
2	0x02	Configuration capability	G	DWORD	Interface capability flag
3	0x03	Configuration control	G/S	DWORD	Interface control flag
4	0x04	Physical link object	G	STRUCT	
		Path size		UINT	Number of 16 bit words: 0x02
		Path		Padded EPATH	0x20, 0xF6, 0x24, 0x01
5	0x05	Interface configuration	G	Structure of:	TCP/IP network interface configuration
		IP address	G	UDINT	Actual IP address
		Network mask	G	UDINT	Actual network mask
		Gateway addr.	G	UDINT	Actual default gateway
		Name server	G	UDINT	0 = no server address configured
		Name server 2	G	UDINT	0 = no secondary server address configured
		Domain name	G	UDINT	0 = no Domain Name configured
6	0x06	Host name	G	STRING	0 = no host name configured
12	0x0C	QuickConnect	G/S	BOOL	0 = deactivate 1 = activate

Common services

Service code		Class	Instance	Meaning
Dec.	Hex.			
1	0x01	Yes	Yes	Get_Attribute_All
2	0x02	No	No	Set_Attribute_All
14	0x0E	Yes	Yes	Get_Attribute_Single
16	0x10	No	Yes	Set_Attribute_Single

Interface Status

The Status attribute indicates the status of the TCP/IP network interface.

Bit	Designation	Meaning
0…3	Interface configuration status	Indicates the status of the Interface Configuration attribute: 0 = The Interface Configuration attribute has not been configured 1 = The Interface Configuration attribute contains valid configuration. 2…15 = reserved
4…31	Reserved	

Configuration Capability

The Configuration Capability indicates the device's support for optional network configuration capability.

Bit	Designation	Meaning	Value
0	BOOTP client	The device is capable of obtaining its network configuration via BOOTP.	1
1	DNS client	The device is capable of resolving host names by querying a DNS server.	0
2	DHCP client	The device is capable of obtaining its network configuration via DHCP.	1

Configuration control

The Configuration Control attribute is used to control network configuration options.

Bit	Designation	Meaning
0…3	Startup configuration	Determines how the device shall obtain its initial configuration. 0 = The device shall use the interface configuration values previously stored (for example, in non-volatile memory or via hardware switches, etc). 1…3 = reserved
4	DNS Enable	Always 0
5…31	Reserved	Set to 0

Interface Configuration

This attribute contains the configuration parameters required to operate a TCP/IP device.

To change this attribute, proceed as follows:

- ▶ Read out the attribute.
- ▶ Change the parameters.
- ▶ Set the attribute.
- ⇨ The TCP/IP Interface Object applies the new configuration upon completion of the Set service. If the value of the Startup Configuration bits (Configuration Control attribute) is 0, the new configuration is stored in non-volatile memory.

The device does not reply to the set service until the values are safely stored to non-volatile memory.

An attempt to set any of the components of the Interface Configuration attribute to invalid values results in an error (status code 0x09) returned from the Set service. If initial configuration is obtained via BOOTP or DHCP, the Interface Configuration attribute components are all 0 until the BOOTP or DHCP reply is received. Upon receipt of the BOOTP or DHCP reply, the Interface Configuration attribute shows the configuration obtained via BOOTP/DHCP.

Host name

This attribute contains the device's host name. The host name attribute is used when the device supports the DHCP-DNS Update capability and has been configured to use DHCP upon start up. The mechanism allows the DHCP client to transmit its host name to the DHCP server. The DHCP server then updates the DNS records on behalf of the client.

Ethernet Link Object (0xF6)

The following description of the Ethernet Link Object is taken from the CIP specification, Vol. 2, Rev. 1.1 by ODVA & ControlNet International Ltd. and adapted to the Turck products.

Class attributes

Attr.-no.		Designation	Get/Set	Type	Value
Dec.	Hex.				
1	0x01	Revision	G	UINT	1
2	0x02	Max. object instance	G	UINT	1
3	0x03	Number of instances	G	UINT	1
6	0x06	Max. class identifier	G	UINT	7
7	0x07	Max. instance attribute	G	UINT	6

Instance attributes

Attr.-no.		Designation	Get/Set	Type	Value
Dec.	Hex.				
1	0x01	Interface speed	G	UDINT	Speed in megabit per second (e.g. 10, 100, 1000 etc.)
2	0x02	Interface flags	G	DWORD	Interface capability flag
3	0x03	Physical address	G	ARRAY OF USINT	Contains the interface's MAC address (Turck: 00:07:46:xx:xx:xx)
6	0x06	Interface control	G	2 WORD	Allows port-wise changes of the Ethernet-settings
7	0x07	Interface type	G		
10	0x0A	Interface label	G		

Interface flags

Bit	Designation	Meaning	Default value
0	Link status	Indicates whether or not the Ethernet communications interface is connected to an active network. 0 = inactive link 1 = active link	Depends on application
1	Half/full duplex	0 = Half duplex 1 = Full duplex If the Link Status flag is 0, the value of the Half/Full Duplex flag is indeterminate.	Depends on application
2…4	Negotiation status	Indicates the status of the automatic autonegotiation 0 = autonegotiation in progress 1 = autonegotiation and speed detection failed, using default values for speed and duplex (10 Mbps/ half duplex). 2 = auto-negotiation failed but detected speed (default: half duplex). 3 = successfully negotiated speed and duplex 4 = autonegotiation not started, yet. Forced speed and duplex.	Depends on application

Bit	Designation	Meaning	Default value
5	Manual setting requires reset	0 = interface can activate changes to link parameters (auto-negotiate, duplex mode, interface speed) automatically 1 = device requires a Reset service to be issued to its Identity Object in order to adapt the changes.	0
6	Local Hardware Fault	0 = interface detects no local hardware fault 1 = local hardware error detected	0

Common services

Service code		Class	Instance	Meaning
Dec.	Hex.			
1	0x01	Yes	Yes	Get_Attribute_All
14	0x0E	Yes	Yes	Get_Attribute_Single
76	0x4C	No	Yes	Enetlink_Get_and_Clear

7.6.7 VSC – Vendor Specific Classes

In addition to supporting the above named CIP Standard Classes, the device support the vendor specific classes (VSCs) described in the following.

Class Code		Name	Description	Applies to:
Dec.	Hex.			
100	0x64	Gateway	Data and parameters for the fieldbus specific part of the device.	all
102	0x66	Process Data	Process data	
126	0x7E	Miscellaneous Parameters	Describes the EtherNet/IP port properties	
131	0x83	Analog Input	Parameters, diagnostics and data of the analog inputs	TBEN-S2-4AI
132	0x84	Analog Output	Parameters, diagnostics and data of the analog outputs	TBEN-S2-4AO
148	0x94	Basic	Data and parameters for the basic functions of the digital devices	TBEN-S1-8DIP
149	0x95			TBEN-S1-8DIP-D
150	0x96			TBEN-S1-8DOP
151	0x97			TBEN-S1-8DXP
152	0x98			TBEN-S1-4DIP-4DOP
156	0x9C	Input Latch Channel 0…3	In- and output data for the input latch function of the device	▪ TBEN-S1-4DIP-4DOP ▪ TBEN-S1-4DXP

Class Code		Name	Description	Applies to:
Dec.	Hex.			
157	9x9D	Ext. function digital	Data and parameters for the extended digital functions (counter)	■ TBEN-S1-8DIP ■ TBEN-S1-8DIP-D ■ TBEN-S1-8DXP ■ TBEN-S1-4DIP-4DOP ■ TBEN-S1-4DXP ■ TBEN-S2-8DIP ■ TBEN-S2-8DXP
158	0x9E		Data and parameters for the extended digital functions	■ TBEN-S1-8DIP ■ TBEN-S1-8DIP-D ■ TBEN-S1-8DXP ■ TBEN-S1-4DIP-4DOP ■ TBEN-S1-4DXP ■ TBEN-S2-8DIP ■ TBEN-S2-8DXP
159	0x9F		Data and parameters for the extended digital functions (PWM)	■ TBEN-S1-8DOP ■ TBEN-S1-4DIP-4DOP
160	0xA0			■ TBEN-S1-4DXP ■ TBEN-S1-8DXP ■ TBEN-S2-8DXP
162	0xA2	Input Latch Channel 0…7	In- and output data for the input latch function	■ TBEN-S1-8DIP ■ TBEN-S1-8DIP-D ■ TBEN-S1-8DXP ■ TBEN-S2-8DIP ■ TBEN-S2-8DXP
165	0xA5	Basic	Data and parameters for the basic functions of the digital devices	TBEN-S2-8DIP
168	0xA8			TBEN-S2-8DXP
170	0xAA	VAUX Control	Parameters and Diagnostics for the 24 VDC sensor and actuator supply	TBEN-S2-8DXP
171	0xAB			TBEN-S2-8DIP
188	0xBC	Basic	Data and parameters for the basic functions of the digital devices	TBEN-S1-4DXP

Gateway Class (VSC 100)

This class contains all information concerning the whole device.

Object Instance 2, Gateway Instance

Attr. no. Dec.	Attr. no. Hex.	Designation	Get/Set	Type	Meaning
109	0x6D	Device Status	G	STRUCT	Contains the device status.
115	0x73	On IO connection timeout	G/S	ENUM USINT	Reaction when the time limit for an I/O connection is exceeded:
					0: SWITCH IO FAULTED (0): The channels are switched to substitute value.
					1: SWITCH IO OFF (1): The outputs are switched to 0.
					2: SWITCH IO HOLD (2): No further changes to I/O data. The outputs are held.
138	0x8A	GW status register	G/S	DWORD	Activates or deactivates the mapping of the status word into the device's input data. Activating or deactivating of the status word is only possible in Assembly Instance 103.
139	0x8B	GW Control Register	G/S	DWORD	Activates or deactivates the mapping of the control word into the device's output data. Activating or deactivating of the control word is only possible in Assembly Instance 104.
140	0x8C	Disable Protocols	G/S	UINT	Deactivation of the used Ethernet protocol.
					Bit 0: Deactivates EtherNet/IP (cannot be deactivated via the EtherNet/IP interface).
					Bit 1: Deactivates Modbus TCP
					Bit 2: Deactivates PROFINET
					Bit 15: Deactivates the web server

Miscellaneous Parameters Class (VSC 126)

This class contains 2 instances

- Instance 1: Ethernet port ETH1
- Instance 2: Ethernet port ETH2

Attribute no.		Designation	Get/set	Type	Meaning
Dec.	Hex.				
109	0x6D	Ethernet port parameters	G/S	DWORD	0: Autonegotiate, AutoMDIX
					1: 10BaseT, half duplex, linear topology (AutoMDIX disabled)
					2: 10BaseT, full duplex, linear topology (AutoMDIX disabled)
					3: 100BaseT, half duplex, linear topology (AutoMDIX disabled)
					4: 100BaseT, full duplex, linear topology (AutoMDIX disabled)
112	0x73	I/O controller software revision	G	DWORD	Only valid for instance 1: Firmware version of the device

Analog Input Class (VSC 131)

One instance is assigned to each channel:

- Instance 1: Channel 0
- Instance 2: Channel 1
- Instance 3: Channel 2
- Instance 4: Channel 3

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
1	0x01	Operation mode	G/S	USINT	0: Thermocouple
					1: voltage
					2: Current
					3: Resistance
					4: RTD
2	0x02	Thermocouple type	G/S	USINT	0: Type K, -270…1370 °C, -454…2498 °F
					1: Type B, 100…1820 °C, 212…3308 °F
					2: Type E, -270…1000 °C, -454…1832 °F
					3: Type J, -210…1200 °C, -346…2192 °F
					4: Type N, -270…1300 °C, -454…2372 °F
					5: Type R, -50…1768 °C, -58…3214 °F
					6: Type S, -50…1768 °C, -58…3214 °F
					7: Type T, -270…400 °C, -454…752 °F
					8: Type C, 0…2315 °C, 32…4199 °F
					9: Type G, 0…2315 °C, 32…4199 °F
4	0x04	Voltage range	G/S	USINT	0: -10…10 V
					1: 0…10 V
					2: 2…10 V
					3: 0…5 V
					4: 1…5 V
					5: -1…1 V
					6:-500…500 mV
					7: -100…100 mV
					8: -50…50 mV
5	0x05	Voltage wiring type	G/S	USINT	0 = differential
					1 = single ended
					2 = differential without ground
6	0x06	Current range	G/S	USINT	0: 0…20 mA
					1: 4…20 mA
					2: -20…20 mA
7	0x07	Current wiring type	G/S	USINT	0 = differential
					1 = single ended
					2 = differential without ground

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
8	0x08	Resistance range	G/S	USINT	0: 0…100 Ohm
					1: 0…400 Ohm
					2: 0…2000 Ohm
					3: 0…4000 Ohm
9	0x09	Resistance wiring type	G/S	USINT	0: 2-wire
					1: 3-wire
					2: 4-wire
10	0x0A	RTD type	G/S	USINT	0: Pt100, -200…850 °C, -328…1562 °F
					1: Pt100, -200…150 °C, -328…302 °F
					2: Ni100, -60…250 °C, -76…482 °F
					3: Ni100, -60…150 °C, -76…302 °F
					4: Pt200, -200…850 °C, -328…1562 °F
					5: Pt200, -200…150 °C, -328…302 °F
					6: Pt500, -200…850 °C, -328…1562 °F
					7: Pt500, -200…150 °C, -328…302 °F
					8: Pt1000, -200…850 °C, -328…1562 °F
					9: Pt1000, -200…150 °C, -328…302 °F
					10: Ni1000, -60…250 °C, -76…482 °F
					11: Ni1000, -60…150 °C, -76…302 °F
11	0x0B	RTD wiring type	G/S	USINT	0: 2-wire
					1: 3-wire
					2: 4-wire
12	0x0C	Data representation	G/S	USINT	0: Standard
					1: NE43
					2: Extended range
13	0x0D	Temperature unit	G/S	USINT	0: Celsius
					1: Fahrenheit
14	0x0E	Input averaging filter DIFT	G/S	USINT	0 = standard
					1 = smooth
					2 = fast
					3: off
15	0x0F	Deactivate channel	G/S	USINT	0 = no
					1 = yes
16	0x10	Deactivate diagnostics	G/S	USINT	0 = no
					1 = yes
17	0x11	Mains suppres-sion	G/S	USINT	0: off
					1: 50 Hz
					2: 60 Hz
18	0x12	Upper limit value exceeded	G	USINT	0: -
					1: active

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
19	0x13	Lower limit value underrun	G	USINT	0: - 1: active
20	0x14	Overflow	G	USINT	0: - 1: active
21	0x15	Underflow	G	USINT	0: - 1: active
22	0x16	Cold junction error	G	USINT	0: - 1: active
23	0x17	Overcurrent (RTD only)	G	USINT	0: - 1: active
24	0x18	Wire break	G	USINT	0: - 1: active
25	0x19	Overcurrent supply VAUX1	G	USINT	0: - 1: active
26	0x1A	Input value	G	UINT	

Analog Output Class (VSC 132)

One instance is assigned to each channel:

- Instance 1: Channel 0
- Instance 2: Channel 1
- Instance 3: Channel 2
- Instance 4: Channel 3

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
1	0x01	Operation mode	G/S	USINT	0: voltage
					1: Current
2	0x02	Current range	G/S	USINT	0: 0…20 mA
					1: 4…20 mA
3	0x03	Voltage range	G/S	USINT	0: -10…+10 V
					1: 0…10 V
					2: 2…10 V
					3: 0…5 V
					4: 1…5 V
4	0x04	Data representation	G/S	USINT	0: Standard
					1: NE43
					2: Extended range
5	0x05	Deactivate channel	G/S	USINT	0 = no
					1 = yes
6	0x06	Output recovery mode	G/S	USINT	0: automatic
					1: manual
7	0x07	Deactivate diagnostics	G/S	USINT	0 = no
					1 = yes
8	0x08	Output on fieldbus error	G	USINT	0: default value
					1: Substitute value
					2: Current value
9	0x09	Substitute value	G	UINT	Substitute value to be transferred
10	0x0A	Overload	G	USINT	0: -
					1: active
11	0x0B	Wire break	G	USINT	0: -
					1: active
12	0x0C	output	G	UINT	

Class 148 (0x94) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S1-8DIP

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Diagnostics ch0…ch3 – overcurrent VAUX1	G	USINT	0: - 1: active
2	0x02	Diagnostics ch4…ch7 – overcurrent VAUX1	G	USINT	0: - 1: active
3	0x03	Input value ch0	G	USINT	0: off 1: on
4	0x04	Input value ch1	G	USINT	0: off 1: on
5	0x05	Input value ch2	G	USINT	0: off 1: on
6	0x06	Input value ch3	G	USINT	0: off 1: on
7	0x07	Input value ch4	G	USINT	0: off 1: on
8	0x08	Input value ch5	G	USINT	0: off 1: on
9	0x09	Input value ch6	G	USINT	0: off 1: on
10	0x0A	Input value ch7	G	USINT	0: off 1: on

Class 149 (0x95) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S1-8DIP-D

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Diagnostics ch0 – overcurrent VAUX1	G	USINT	0: - 1: active
2	0x02	Diagnostics ch1 – overcurrent VAUX1	G	USINT	0: - 1: active
3	0x03	Diagnostics ch2 – overcurrent VAUX1	G	USINT	0: - 1: active
4	0x04	Diagnostics ch3 – overcurrent VAUX1	G	USINT	0: - 1: active
5	0x05	Diagnostics ch4 – overcurrent VAUX1	G	USINT	0: - 1: active
6	0x06	Diagnostics ch5 – overcurrent VAUX1	G	USINT	0: - 1: active
7	0x07	Diagnostics ch6 – overcurrent VAUX1	G	USINT	0: - 1: active
8	0x08	Diagnostics ch7 – overcurrent VAUX1	G	USINT	0: - 1: active
9	0x09	Input value ch0	G	USINT	0: off 1: on
10	0x0A	Input value ch1	G	USINT	0: off 1: on
11	0x0B	Input value ch2	G	USINT	0: off 1: on
12	0x0C	Input value ch3	G	USINT	0: off 1: on
13	0x0D	Input value ch4	G	USINT	0: off 1: on
14	0x0E	Input value ch5	G	USINT	0: off 1: on
15	0x0F	Input value ch6	G	USINT	0: off 1: on
16	0x10	Input value ch7	G	USINT	0: off 1: on

Class 150 (0x96) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S1-8DOP

Attribute no.		Designation	Get/ Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Manual reset after overcurr. ch0	G/S	USINT	0: no 1: yes
2	0x02	Manual reset after overcurr. ch1	G/S	USINT	0: no 1: yes
3	0x03	Manual reset after overcurr. ch2	G/S	USINT	0: no 1: yes
4	0x04	Manual reset after overcurr. ch3	G/S	USINT	0: no 1: yes
5	0x05	Manual reset after overcurr. ch4	G/S	USINT	0: no 1: yes
6	0x06	Manual reset after overcurr. ch5	G/S	USINT	0: no 1: yes
7	0x07	Manual reset after overcurr ch6	G/S	USINT	0: no 1: yes
8	0x08	Manual reset after overcurr. ch7	G/S	USINT	0: no 1: yes
9	0x09	Diagnostics ch0 – overcurrent	G	USINT	0: - 1: active
10	0x0A	Diagnostics ch1 – overcurrent	G	USINT	0: - 1: active
11	0x0B	Diagnostics ch2 - overcurrent	G	USINT	0: - 1: active
12	0x0C	Diagnostics ch3 – overcurrent	G	USINT	0: - 1: active
13	0x0D	Diagnostics ch4 – overcurrent	G	USINT	0: - 1: active
14	0x0E	Diagnostics ch5 – overcurrent	G	USINT	0: - 1: active
15	0x0F	Diagnostics ch6 – overcurrent	G	USINT	0: - 1: active
16	0x10	Diagnostics ch7 – overcurrent	G	USINT	0: - 1: active

Attribute no. Dec.	Hex.	Designation	Get/ Set	Type	Meaning
17	0x11	Output	G	BYTE	Bit 0: Output value ch0 bit 1: Output value ch1 bit 2: Output value ch2 bit 3: Output value ch3 bit 4: Output value ch4 bit 5: Output value ch5 bit 6: Output value ch6 bit 7: Output value ch7

Class 151 (0x97) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S1-8DXP

Attribute no. Dec.	Hex.	Designation	Get/ Set	Type	Meaning
Parameters					
1	0x01	Activate output ch0	G/S	USINT	0: no 1: yes
2	0x02	Activate output ch1	G/S	USINT	0: no 1: yes
3	0x03	Activate output ch2	G/S	USINT	0: no 1: yes
4	0x04	Activate output ch3	G/S	USINT	0: no 1: yes
5	0x05	Activate output ch4	G/S	USINT	0: no 1: yes
6	0x06	Activate output ch5	G/S	USINT	0: no 1: yes
7	0x07	Activate output ch6	G/S	USINT	0: no 1: yes
8	0x08	Activate output ch7	G/S	USINT	0: no 1: yes
9	0x09	Manual reset after overcurr. ch0	G/S	USINT	0: no 1: yes
10	0x0A	Manual reset after overcurr. ch1	G/S	USINT	0: no 1: yes
11	0x0B	Manual reset after overcurr. ch2	G/S	USINT	0: no 1: yes
12	0x0C	Manual reset after overcurr. ch3	G/S	USINT	0: no 1: yes

Attribute no.		Designation	Get/ Set	Type	Meaning
Dec.	Hex.				
13	0x0D	Manual reset after overcurr. ch4	G/S	USINT	0: no
					1: yes
14	0x0E	Manual reset after overcurr. ch5	G/S	USINT	0: no
					1: yes
15	0x0F	Manual reset after overcurr. ch6	G/S	USINT	0: no
					1: yes
16	0x10	Manual reset after overcurr. ch7	G/S	USINT	0: no
					1: yes
17	0x11	Overcurrent VAUX1 ch0…3	G	USINT	0: -
					1: active
18	0x12	Overcurrent VAUX1 ch4…7	G	USINT	0: -
					1: active
19	0x13	Diagnostics ch0 – overcurrent	G	USINT	0: -
					1: active
20	0x14	Diagnostics ch1 – overcurrent	G	USINT	0: -
					1: active
21	0x15	Diagnostics ch2 - overcurrent	G	USINT	0: -
					1: active
22	0x16	Diagnostics ch3 – overcurrent	G	USINT	0: -
					1: active
23	0x17	Diagnostics ch4 – overcurrent	G	USINT	0: -
					1: active
24	0x18	Diagnostics ch5 – overcurrent	G	USINT	0: -
					1: active
25	0x19	Diagnostics ch6 – overcurrent	G	USINT	0: -
					1: active
26	0x1A	Diagnostics ch7 – overcurrent	G	USINT	0: -
					1: active
27	0x1B	Input value ch0	G	USINT	0: off
					1: on
28	0x1C	Input value ch1	G	USINT	0: off
					1: on
29	0x1D	Input value ch2	G	USINT	0: off
					1: on
30	0x1E	Input value ch3	G	USINT	0: off
					1: on
31	0x1F	Input value ch4	G	USINT	0: off
					1: on
32	0x20	Input value ch5	G	USINT	0: off
					1: on

Attribute no.		Designation	Get/ Set	Type	Meaning
Dec.	Hex.				
33	0x21	Input value ch6	G	USINT	0: off
					1: on
34	0x22	Input value ch7	G	USINT	0: off
					1: on
35	0x23	Output	G	BYTE	Bit 0: Output value ch0 bit 1: Output value ch1 bit 2: Output value ch2 bit 3: Output value ch3 bit 4: Output value ch4 bit 5: Output value ch5 bit 6: Output value ch6 bit 7: Output value ch7

Class 152 (0x98) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S1-4DIP-4DOP

Attribute no.		Designation	Get/ Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Manual reset after overcurr. ch4	G/S	USINT	0: no 1: yes
2	0x02	Manual reset after overcurr. ch5	G/S	USINT	0: no 1: yes
3	0x03	Manual reset after overcurr. ch6	G/S	USINT	0: no 1: yes
4	0x04	Manual reset after overcurr. ch7	G/S	USINT	0: no 1: yes
5	0x05	Overcurrent VAUX1 ch0…3	G	USINT	0: - 1: active
6	0x06	Overcurrent VAUX1 ch4…7	G	USINT	0: - 1: active
7	0x07	Diagnostics ch4 – overcurrent	G	USINT	0: - 1: active
8	0x08	Diagnostics ch5 – overcurrent	G	USINT	0: - 1: active
9	0x09	Diagnostics ch6 – overcurrent	G	USINT	0: - 1: active
10	0x0A	Diagnostics ch7 – overcurrent	G	USINT	0: - 1: active
11	0x0B	Input value ch0	G	USINT	0: off 1: on
12	0x0C	Input value ch1	G	USINT	0: off 1: on
13	0x0D	Input value ch2	G	USINT	0: off 1: on
14	0x0E	Input value ch3	G	USINT	0: off 1: on
15	0x0F	Output	G	BYTE	Bit 0: Output value ch4 bit 1: Output value ch5 bit 2: Output value ch6 bit 3: Output value ch7

Class 156 (0x9C) – Input Latch (Channel 0…3)

This class contains the in- and output data for the input latch function.

Applies to:

- TBEN-S1-4DIP-4DOP
- TBEN-S1-4DXP

Attribute no.		Designation	Get/set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Input value ch0 – Latch input	G	USINT	0: - 1: active
2	0x02	Input value ch1 – Latch input	G	USINT	0: - 1: active
3	0x03	Input value ch2 – Latch input	G	USINT	0: - 1: active
4	0x04	Input value ch3 – Latch input	G	USINT	0: - 1: active
5	0x05	Output value ch0 – Latch reset	G	USINT	0: off 1: on
6	0x06	Output value ch1 – Latch reset	G	USINT	0: off 1: on
7	0x07	Output value ch2 – Latch reset	G	USINT	0: off 1: on
8	0x08	Output value ch3 – Latch reset	G	USINT	0: off 1: on

Class 157 (0x9D) – Ext. Function Digital

This class data and parameters for the extended digital functions (counter).

Applies to:

- TBEN-S1-8DIP
- TBEN-S1-8DIP-D
- TBEN-S1-4DIP-4DOP
- TBEN-S1-4DXP
- TBEN-S1-8DXP
- TBEN-S2-8DIP
- TBEN-S2-8DXP

Attribute no.		Designation	Get/set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Extended digital function CNT	G/S	USINT	0: deactivated
					1: Input filter and pulse stretch
					2: reserved
					3: reserved
					4: Counter
2	0x02	Input filter	G/S	USINT	0: 0.2 ms
					1: 3 ms
3	0x03	Pulse stretching input (*10 ms)	G/S	USINT	
4	0x04	Counter value	G	UDINT	
5	0x05	Counter frequency (hz)	G	UINT	
6	0x06	Status	G	USINT	
7	0x07	Counter reset	G	USINT	0: inactive
					1: active

Class 158 (0x9E) – Ext. Function Digital

This class data and parameters for the extended digital functions.

Applies to:

- TBEN-S1-8DIP
- TBEN-S1-8DIP-D
- TBEN-S1-4DIP-4DOP
- TBEN-S1-4DXP
- TBEN-S1-8DXP
- TBEN-S2-8DIP
- TBEN-S2-8DXP

Attribute no.		Designation	Get/ set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Extended digital function CNT	G/S	USINT	0: deactivated
					1: Input filter and pulse stretch
2	0x02	Input filter	G/S	USINT	0: 0.2 ms
					1: 3 ms
3	0x03	Pulse stretching input (*10 ms)	G/S	USINT	

Class 159 (0x9F) – Ext. Function Digital

This class data and parameters for the extended digital functions.

Applies to:

- TBEN-S1-8DOP
- TBEN-S1-4DIP-4DOP

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Extended digital function PWM	G/S	USINT	0: deactivated
					1: reserved
					2: PWM output
2	0x02	Overcurrent PWM output	G	USINT	0: -
					1: active
3	0x03	Overcurrent PWM output	G	USINT	0: -
					1: active
4	0x04	Duty Cycle	G	USINT	

Class 160 (0xA0) – Ext. Function Digital

This class data and parameters for the extended digital functions (PWM).

Applies to:

- TBEN-S1-8DXP
- TBEN-S2-8DXP

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Extended digital function PWM	G/S	USINT	0: deactivated
					1: reserved
2	0x02	Input filter	G/S	USINT	0: 0.2 ms
					1: 3 ms
3	0x03	Pulse stretching input (*10 ms)	G/S	USINT	
4	0x04	Overcurrent PWM output	G	USINT	0: -
					1: active
5	0x05	Overcurrent PWM output	G	USINT	0: -
					1: active
6	0x06	Duty Cycle	G	USINT	

Class 162 (0xA2) – Input Latch (Channel 0…7)

This class contains the in- and output data for the input latch function.

Applies to:

- TBEN-S1-8DIP
- TBEN-S1-8DIP-D
- TBEN-S1-8DXP
- TBEN-S2-8DIP
- TBEN-S2-8DXP

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Input value ch0 – Latch input	G	USINT	0: - 1: active
2	0x02	Input value ch1 – Latch input	G	USINT	0: - 1: active
3	0x03	Input value ch2 –Latch input	G	USINT	0: - 1: active
4	0x04	Input value ch3 – Latch input	G	USINT	0: - 1: active
5	0x05	Input value ch4 – Latch input	G	USINT	0: - 1: active
6	0x06	Input value ch5 – Latch input	G	USINT	0: - 1: active
7	0x07	Input value ch6 – Latch input	G	USINT	0: - 1: active
8	0x08	Input value ch7 – Latch input	G	USINT	0: - 1: active
9	0x09	Output value ch0 – Latch reset	G	USINT	0: off 1: on
10	0x0A	Output value ch1 – Latch reset	G	USINT	0: off 1: on
11	0x0B	Output value ch2 – Latch reset	G	USINT	0: off 1: on
12	0x0C	Output value ch3 – Latch reset	G	USINT	0: off 1: on
13	0x0D	Output value ch4 – Latch reset	G	USINT	0: off 1: on
14	0x0E	Output value ch5 – Latch reset	G	USINT	0: off 1: on
15	0x0F	Output value ch6 – Latch reset	G	USINT	0: off 1: on
16	0x10	Output value ch7 – Latch reset	G	USINT	0: off 1: on

Class 165 (0xA5) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S2-8DIP

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Diagnostics ch0/1 – overcurrent VAUX1 pin1 C0	G	USINT	0: - 1: active
2	0x02	Diagnostics ch2/3 – overcurrent VAUX1 pin1 C1	G	USINT	0: - 1: active
3	0x03	Diagnostics ch4/5 – overcurrent VAUX1 pin1 C2	G	USINT	0: - 1: active
4	0x04	Diagnostics ch6/7 – overcurrent VAUX1 pin1 C2	G	USINT	0: - 1: active
5	0x05	Input value ch0	G	USINT	0: off 1: on
6	0x06	Input value ch1	G	USINT	0: off 1: on
7	0x07	Input value ch2	G	USINT	0: off 1: on
8	0x08	Input value ch3	G	USINT	0: off 1: on
9	0x09	Input value ch4	G	USINT	0: off 1: on
10	0x0A	Input value ch5	G	USINT	0: off 1: on
11	0x0B	Input value ch6	G	USINT	0: off 1: on
12	0x0C	Input value ch7	G	USINT	0: off 1: on

Class 168 (0xA8) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S2-8DXP

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	Activate output ch0	G	USINT	0: - 1: active
2	0x02	Activate output ch1	G	USINT	0: - 1: active
3	0x03	Activate output ch2	G	USINT	0: - 1: active
4	0x04	Activate output ch3	G	USINT	0: - 1: active
5	0x05	Activate output ch4	G	USINT	0: - 1: active
6	0x06	Activate output ch5	G	USINT	0: - 1: active
7	0x07	Activate output ch6	G	USINT	0: - 1: active
8	0x08	Activate output ch7	G	USINT	0: - 1: active
9	0x09	Manual reset after overcurr. ch0	G/S	USINT	0 = no 1 = yes
10	0x0A	Manual reset after overcurr. ch1	G/S	USINT	0 = no 1 = yes
11	0x0B	Manual reset after overcurr. ch2	G/S	USINT	0 = no 1 = yes
12	0x0C	Manual reset after overcurr. ch3	G/S	USINT	0 = no 1 = yes
13	0x0D	Manual reset after overcurr. ch4	G/S	USINT	0 = no 1 = yes
14	0x0E	Manual reset after overcurr. ch5	G/S	USINT	0 = no 1 = yes
15	0x0F	Manual reset after overcurr. ch6	G/S	USINT	0 = no 1 = yes
16	0x10	Manual reset after overcurr. ch7	G/S	USINT	0 = no 1 = yes
17	0x11	Diagnostics ch0/1 – overcurrent VAUX1 pin1 C0	G	USINT	0: - 1: active
18	0x12	Diagnostics ch2/3 – overcurrent VAUX1 pin1 C1	G	USINT	0: - 1: active

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
19	0x13	Diagnostics ch4/5 – overcurrent VAUX1 pin1 C2	G	USINT	0: - 1: active
20	0x14	Diagnostics ch6/7 – overcurrent VAUX1 pin1 C2	G	USINT	0: - 1: active
21	0x15	Diagnostics ch0 – overcurrent	G	USINT	0: - 1: active
22	0x16	Diagnostics ch1 – overcurrent	G	USINT	0: - 1: active
23	0x17	Diagnostics ch2 - overcurrent	G	USINT	0: - 1: active
24	0x18	Diagnostics ch3 – overcurrent	G	USINT	0: - 1: active
25	0x19	Diagnostics ch4 – overcurrent	G	USINT	0: - 1: active
26	0x1A	Diagnostics ch5 – overcurrent	G	USINT	0: - 1: active
27	0x1B	Diagnostics ch6 – overcurrent	G	USINT	0: - 1: active
28	0x1C	Diagnostics ch7 – overcurrent	G	USINT	0: - 1: active
29	0x1D	Input value ch0	G	USINT	0: off 1: on
30	0x1E	Input value ch1	G	USINT	0: off 1: on
31	0x1F	Input value ch2	G	USINT	0: off 1: on
32	0x20	Input value ch3	G	USINT	0: off 1: on
33	0x21	Input value ch4	G	USINT	0: off 1: on
34	0x22	Input value ch5	G	USINT	0: off 1: on
35	0x23	Input value ch6	G	USINT	0: off 1: on
36	0x24	Input value ch7	G	USINT	0: off 1: on

Attribute no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
37	0x25	Output	G	BYTE	Bit 0: Output value ch0 bit 1: Output value ch1 bit 2: Output value ch2 bit 3: Output value ch3 bit 4: Output value ch4 bit 5: Output value ch5 bit 6: Output value ch6 bit 7: Output value ch7

Class 170 (0xAA) – VAUX Control

This class contains parameters for of the 24 VDC sensor/ actuator supply.

Applies to:

- TBEN-S2-8DXP

Attr. no.		Designation	Get/Set	Type	Meaning
Dec.	Hex.				
Parameters					
1	0x01	VAUX1 pin1 C0 (Ch0/1)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
2	0x02	VAUX1 pin1 C1 (Ch2/3)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
3	0x03	VAUX1 pin1 C2 (Ch4/5)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
4	0x04	VAUX1 pin1 C3 (Ch6/7)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
5	0x05	VAUX1 pin1 C0 (Ch0/1)	G	USINT	0: on
					1: off
6	0x06	VAUX1 Pin1 C1 (Ch2/3)	G	USINT	0: on
					1: off
7	0x07	VAUX1 pin1 C2 (Ch4/5)	G	USINT	0: on
					1: off
8	0x08	VAUX2 Pin1 C0 (ch0/1)	G	USINT	0: on
					1: off

Class 171 (0xAB) – VAUX Control

This class contains parameters for of the 24 VDC sensor/ actuator supply.

Applies to:

- TBEN-S2-8DIP

Attribute no. Dec.	Hex.	Designation	Get/Set	Type	Meaning
Parameters					
1	0x01	VAUX1 pin1 C0 (Ch0/1)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
2	0x02	VAUX1 Pin1 C1 (Ch2/3)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
3	0x03	VAUX1 pin1 C2 (Ch4/5)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
4	0x04	VAUX1 Pin1 C3 (Ch6/7)	G/S	USINT	0: 24 VDC
					1: switchable
					2: off
5	0x05	VAUX1 pin1 C0 (Ch0/1)	G	USINT	0: on
					1: off
6	0x06	VAUX1 Pin1 C1 (Ch2/3)	G	USINT	0: on
					1: off
7	0x07	VAUX1 pin1 C2 (Ch4/5)	G	USINT	0: on
					1: off
8	0x08	VAUX1 Pin1 C0 (Ch0/1)	G	USINT	0: on
					1: off

Class 188 (0xBC) – Basic

This class data and parameters for the device's basic functions.

Applies to:

- TBEN-S1-4DXP

Attr. no. Dec.	Hex.	Designation	Get/ set	Type	Meaning
Parameters					
1	0x01	Activate output Ch0	G/S	USINT	0: no
					1: yes
2	0x02	Activate output Ch1	G/S	USINT	0: no
					1: yes
3	0x03	Activate output Ch2	G/S	USINT	0: no
					1: yes

Attr. no.		Designation	Get/ set	Type	Meaning
Dec.	Hex.				
4	0x04	Activate output Ch3	G/S	USINT	0: no 1: yes
5	0x05	Manual reset after overcurr. Ch0	G/S	USINT	0: no 1: yes
6	0x06	Manual reset after overcurr. Ch1	G/S	USINT	0: no 1: yes
7	0x07	Manual reset after overcurr. Ch2	G/S	USINT	0: no 1: yes
8	0x08	Manual reset after overcurr. Ch3	G/S	USINT	0: no 1: yes
9	0x09	Overcurrent VAUX1 ch0…1	G	USINT	0: - 1: active
10	0x0A	Overcurrent VAUX1 ch2…3	G	USINT	0: - 1: active
11	0x0B	Diagnostics ch0 – overcurrent	G	USINT	0: - 1: active
12	0x0C	Diagnostics ch1 – overcurrent	G	USINT	0: - 1: active
13	0x0D	Diagnostics ch2 - overcurrent	G	USINT	0: - 1: active
14	0x0E	Diagnostics ch3 – overcurrent	G	USINT	0: - 1: active
15	0x0F	Input value ch0	G	USINT	0: off 1: on
16	0x10	Input value ch1	G	USINT	0: off 1: on
17	0x11	Input value ch2	G	USINT	0: off 1: on
18	0x12	Input value ch3	G	USINT	0: off 1: on
19	0x13	Output value	G	BYTE	Bit 0: Output value ch0 bit 1: Output value ch1 bit 2: Output value ch2 bit 3: Output value ch3

7.7 Connecting the devices to an EtherNet/IP scanner with Studio 5000

Used hardware

The following hardware components are used in this example:

- Rockwell Contoller ControlLogix 1756-L72, Logix 5572
- Rockwell Scanner 1756-EN2TR
- Block module TBEN-S1-8DXP

Used software

The following software tools are used in this example:

- Rockwell Studio 5000
- Catalog file for Turck compact devices "TURCK_BLOCK_STATIONS_V….L5K" as part of the ZIP file "TBEN-…_ETHERNETIP.zip" (can be downloaded for free at **www.turck.com**)

Prerequisites

- An instance of the software with the catalog files is opened.
- A new project has been created in a second instance of Studio 5000.
- The PLC and the scanner mentioned above have been added to the project in the second instance of Studio 5000.

7.7.1 Adding the devices from the Catalog files to the new project

- Right-click the device entry and use **Copy**.

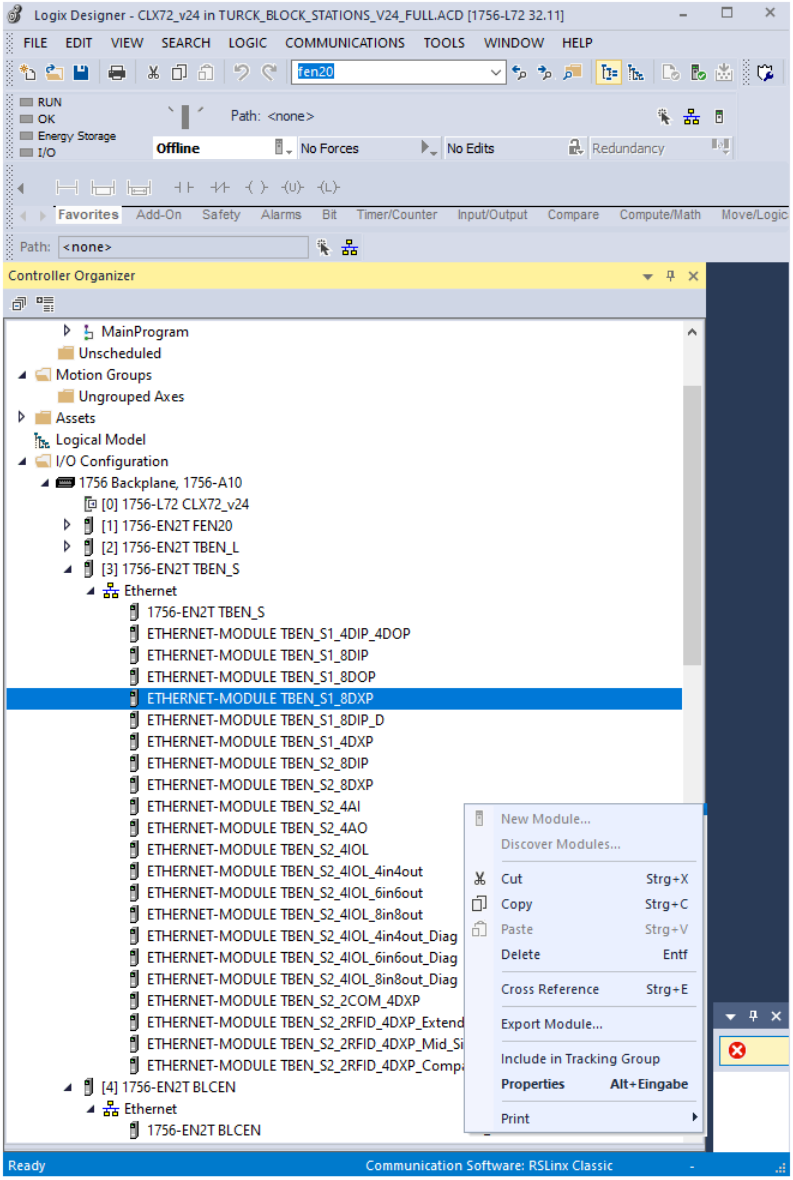

Fig. 74: Logix Designer: copying the device entry from catalog file

▶ Right-click the EtherNet/IP Scanner in the 2nd instance of Logix Designer and add the device to the project via **Paste**.

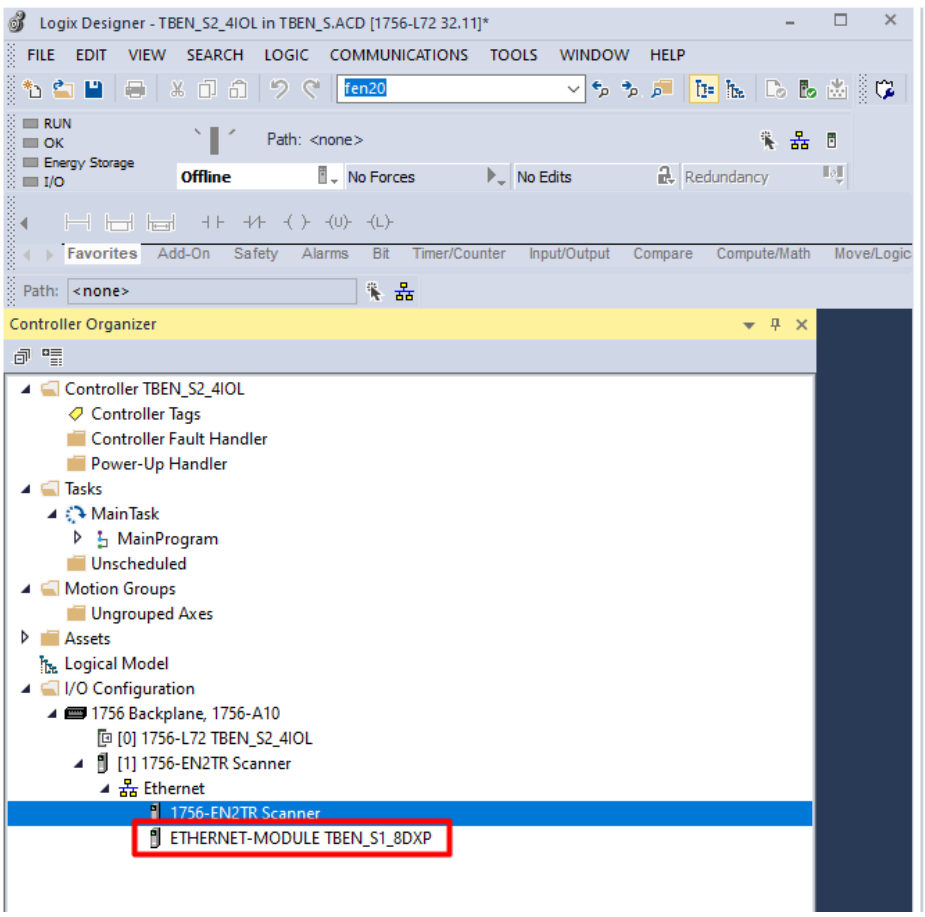

Fig. 75: Logix Designer: Adding the device to the project

7.7.2 Configuring the device in Logix Designer

- Open the device entry by double-clicking.
- Assign a module name.
- Set the IP address of the device (example: 192.168.145.181).

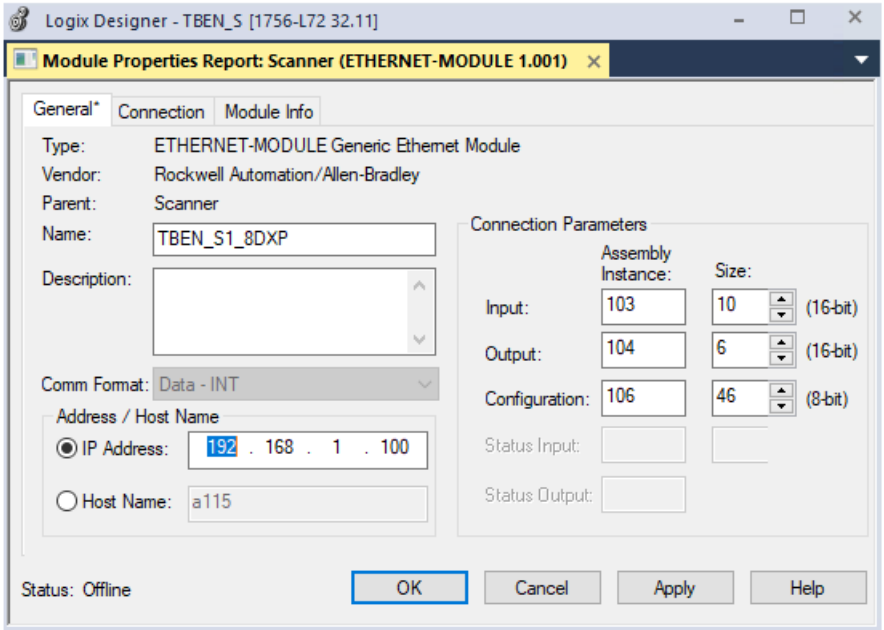

Fig. 76: Setting module name and IP address

- Optional: Set the connection parameters.

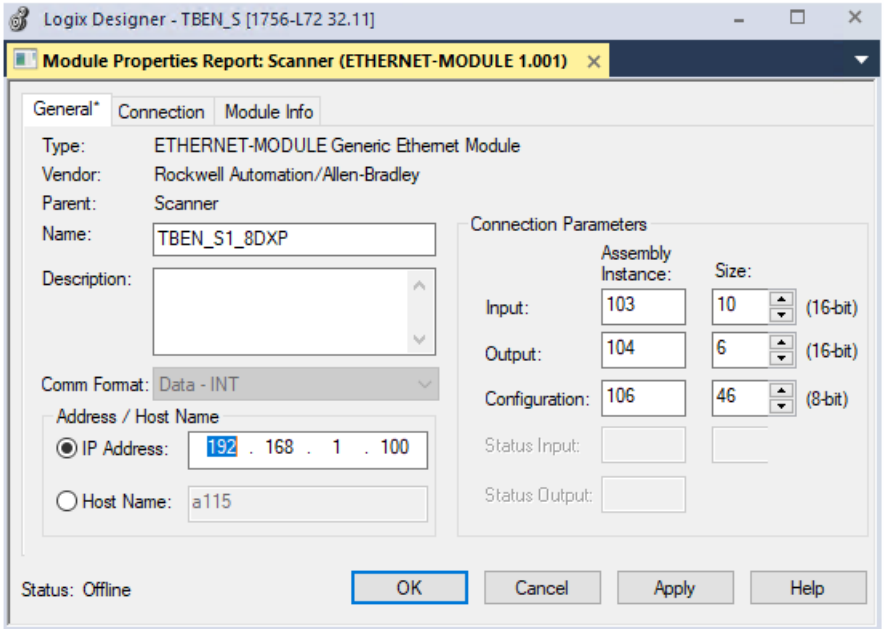

Fig. 77: Setting the connection parameters

7.7.3 Parameterizing the device

- Open the "Controller Tags" of the device.
- Parameterize the device by using the **TBEN_S1_8DXP:C** Controller Tags.

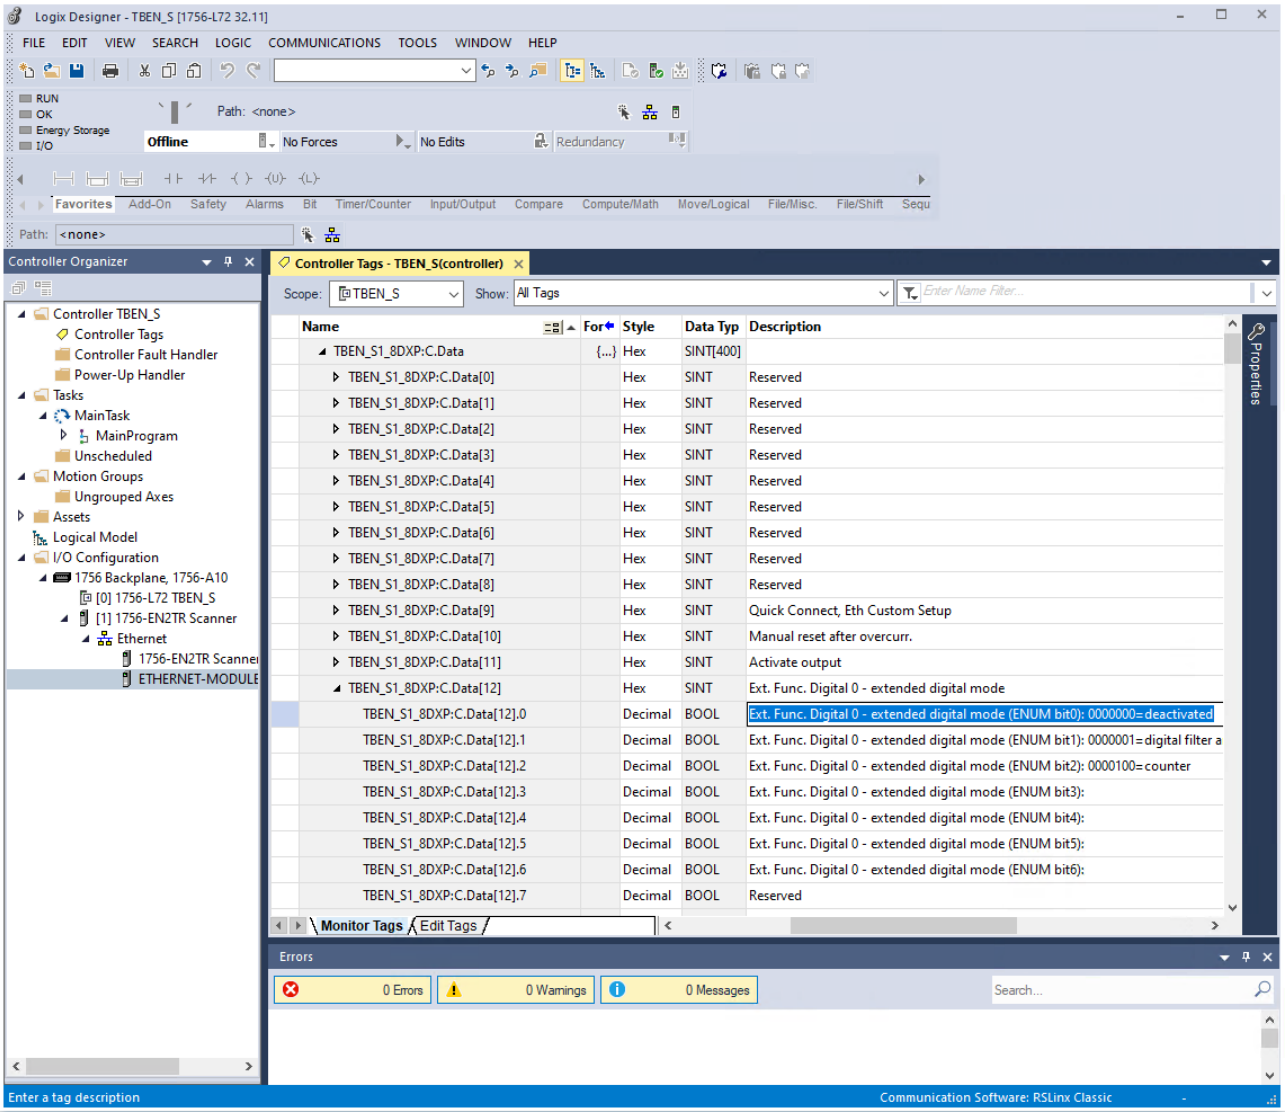

Fig. 78: Parameterizing the Device

7.7.4 Going online with the PLC

- Search the network via the **Who Active** button.
- Select the PLC.
- Set the communication path via **Set Project Path**.
- ⇨ The communication path is set.

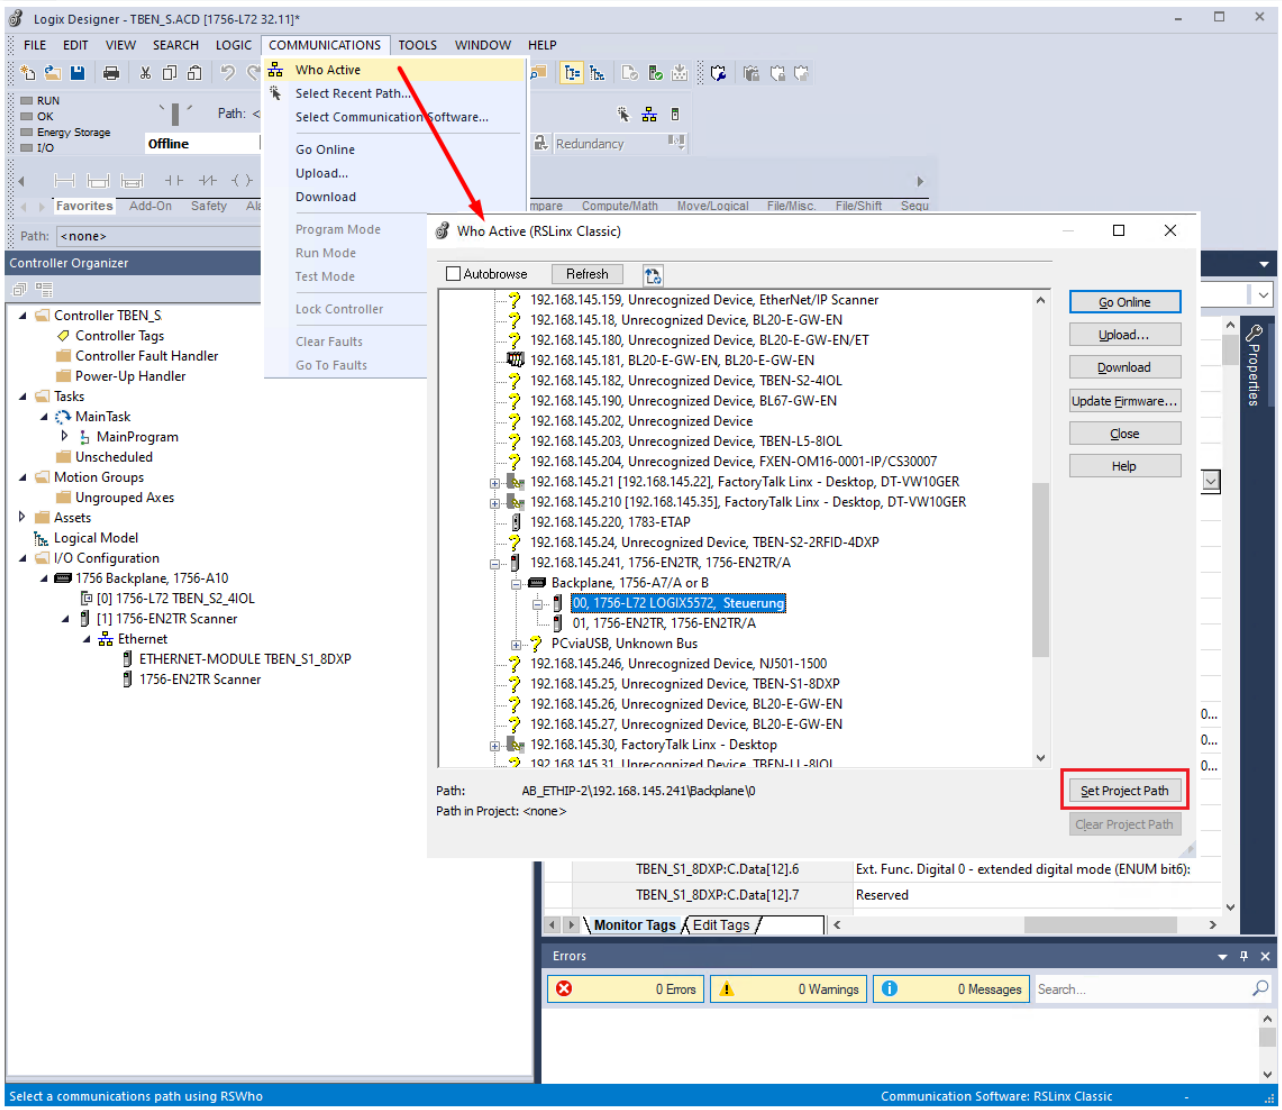

Fig. 79: Setting the communication path

- Select the PLC.
- Click **Go online**.

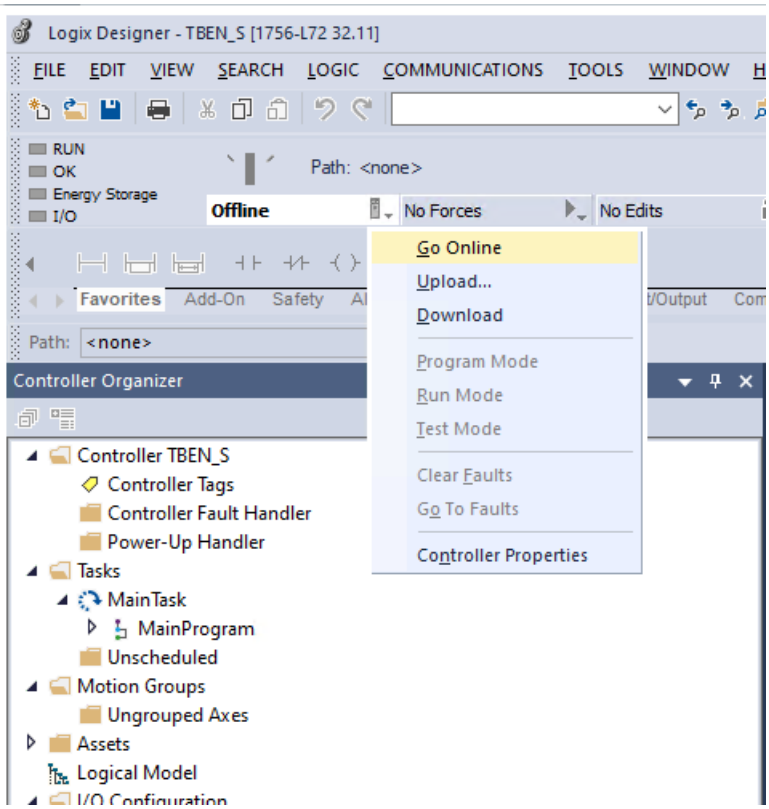

Fig. 80: Going online with the device

- Click **Download** in the following dialog (Connect To Go Online).
- Confirm all following messages.
- ⇨ The program is downloaded to the PLC. The online connection is established.

7.7.5 Reading process data

- ▶ Open the Controller Tags in the project tree by double-clicking.
- ⇨ The access to the parameter data (TBEN_S…:C), input data (TBEN_S…:I) and output data (TBEN_S…:O) is possible.

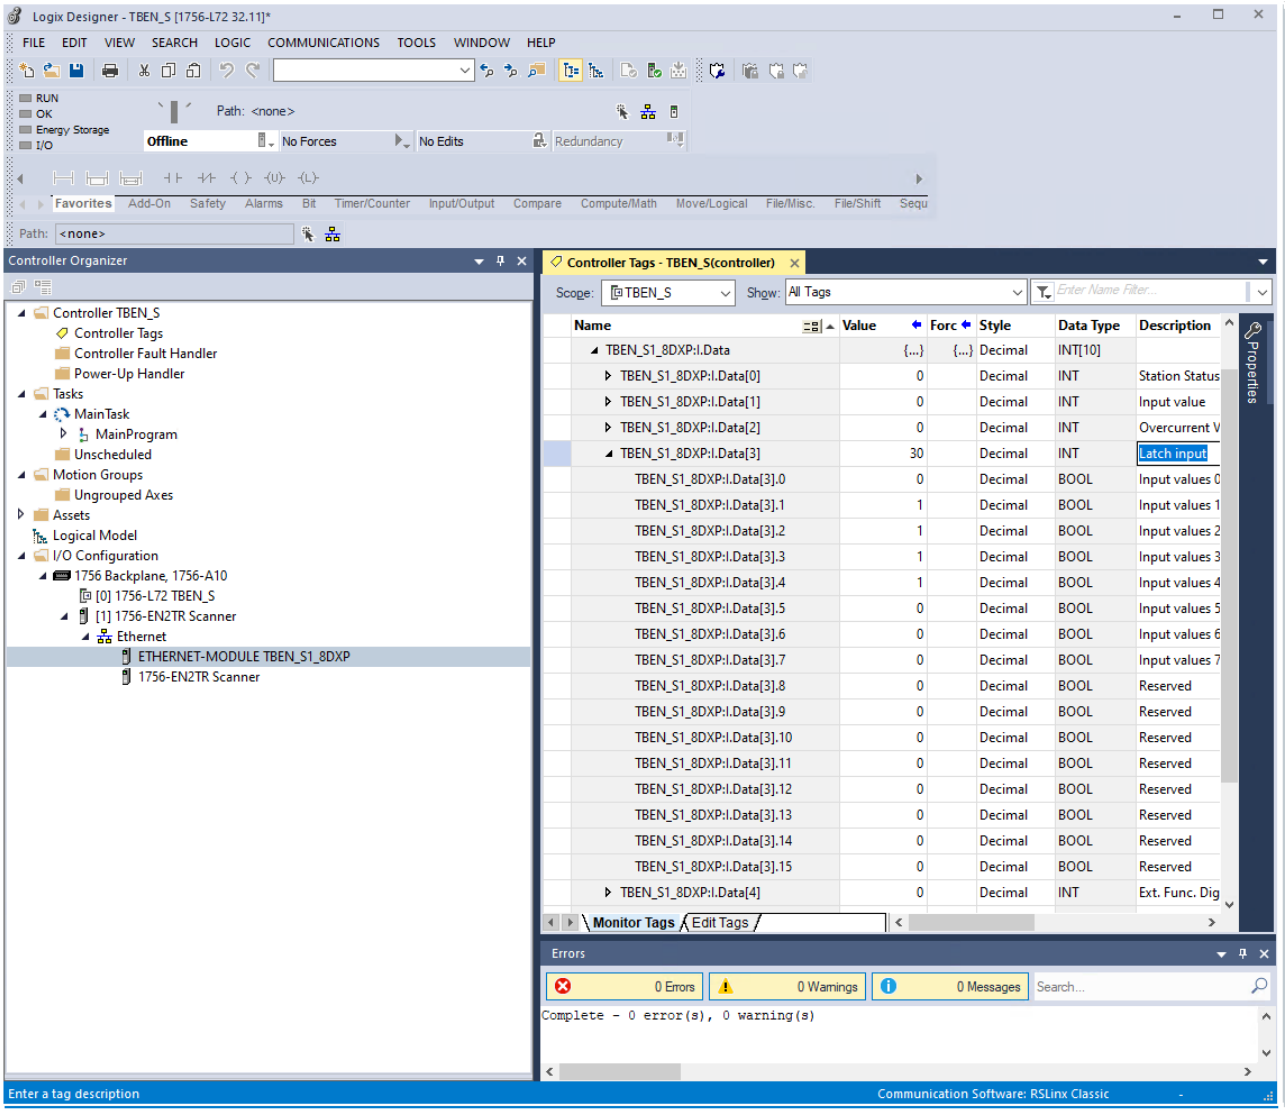

Fig. 81: Controller Tags in the project tree

7.8 Commissioning the devices in CC-Link IE Field Basic

7.8.1 General features CC-Link IE Field Basic

CC-Link IE Field Basic works with a client/server communication model. A maximum data width of 64 × 64 bits is available for communication between a client station and several server stations, whereby a unit of 64 bits is referred to as an occupied station. A CC-Link Field Basic network can consist of a maximum of 64 occupied stations. I/O modules can occupy one or more of the 64 occupied stations, depending on their complexity and data width.

CC-Link IE Field Basic		
Maximum number of stations in a network	max. 64 occupied stations	An I/O module can occupy several occupied stations.
Group	max. 16 occupied stations	To optimize process data traffic, devices can be combined into groups according to their function. A group can consist of a maximum of 16 occupied stations.
Cyclic data		Cyclical data is mapped bit by bit or word by word in registers.
	RX	Register for bit-by-bit access to digital inputs (DI)
	RY	Register for bit-by-bit access to digital outputs (DO)
	RWr	Register for word-by-word, read access to process data (e.g. IO-Link)
	RWw	Register for word-by-word, write access to process data (e.g. IO-Link)
Port numbers	61450 (cyclic data)	
	61451 (port number of server station for NodeSearch and IPAddressSet)	

7.8.2 CSP+ files

The CSP+ files can be downloaded free of charge at **www.turck.com**.

7.8.3 Cyclic data transmission

The cyclic process image of the devices is divided into a bit area and a word area. The bit area contains, for example, digital process data, channel diagnostics and the module status (status word) [▶ 204]. In the digital modules, the word area contains, for example, the counter value and the frequency of the extended digital function. With the analog modules, the process data is in the word area.

7.8.4 Occupied Stations

Device	Occupied Stations
TBEN-S2-4AI	1
TBEN-S2-4AO	1
TBEN-S1-8DIP	1
TBEN-S1-8DIP-D	1
TBEN-S1-8DOP	1
TBEN-S1-4DIP-4DOP	1
TBEN-S1-4DXP	1
TBEN-S1-8DXP	1
TBEN-S2-8DIP	1
TBEN-S2-8DXP	1

7.8.5 Bit area

For analog TBEN-S devices, the bit area contains the diagnostic messages of the analog channels [▸ 210] and the module status (status word) Status- and control word.

TBEN-S1-8DIP

RX	Signal
RX0	Input value DI0
…	…
RX7	Input value DI7
RX10	Overcurrent VAUX1 Ch0…3
RX11	Overcurrent VAUX1 Ch4…7
RX20	Latch input DI0
…	…
RX27	Latch input DI7
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY0	Latch reset DI0
…	…
RY7	Latch reset DI7

TBEN-S1-8DIP-D

RX	Signal
RX0	Input value DI0
…	…
RX7	Input value DI7
RX10	Overcurrent VAUX1 channel 0
…	…
RX17	Overcurrent VAUX1 channel 7
RX20	Latch input DI0
…	…
RX27	Latch input DI7
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY0	Latch reset DI0
…	…
RY7	Latch reset DI7

TBEN-S2-8DIP

RX	Signal
RX0	Input value DI0
…	…
RX7	Input value DI7
RX10	Overcurrent VAUX1 Pin 1 C0 (Ch0/1)
RX11	Overcurrent VAUX1 Pin 1 C1 (Ch2/3)
RX12	Overcurrent VAUX1 Pin 1 C2 (K4/5)
RX13	Overcurrent VAUX1 Pin 1 C4 (Ch6/7)
RX20	Latch input DI0
…	…
RX27	Latch input DI7
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY10	Latch reset DI0
…	…
RY17	Latch reset DI7
RY10	VAUX1 Pin1 C0 (Ch0/1)
RY11	VAUX1 Pin1 C1 (Ch2/3)
RY12	VAUX1 pin1 C2 (Ch4/5)
RY13	VAUX1 Pin1 C3 (Ch6/7)

TBEN-S1-8DOP

RX	Signal
RX0	Overcurrent VAUX2 Ch0…3
RX1	Overcurrent VAUX2 Ch4…7
RX8	Overcurrent Output channel 0
…	…
RXF	Overcurrent Output channel 7
Module status (status word)	
RX10	DIAG
RX11	ARGEE
RX12	-
RX13	
RX14	
RX15	
RX16	
RX17	V2
RX18	-
RX19	V1
RX1A	Internal error
RX1B	-
RX1C	
RX1D	
RX1E	FCE
RX1F	-

RY	Signal
RY0	Output value DO0
…	…
RY7	Output value DO7

TBEN-S1-4DXP

RX	Signal
RX0	Input value DI0
…	…
RX3	Input value DI3
RX10	Overcurrent VAUX1 Ch0/1
RX11	Overcurrent Ch2/3
RX18	Overcurrent output channel 0
…	…
RX1B	Overcurrent output channel 3
RX20	Latch input DI0
…	…
RX23	Latch input DI3
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY0	Output value DO0
…	…
RY3	Output value DO3
RY10	Latch reset DI0
…	…
RY13	Latch reset DI3

TBEN-S1-8DXP

RX	Signal
RX0	Input value DI0
…	…
RX7	Input value DI8
RX10	Overcurrent VAUX1 Ch0…3
RX11	Overcurrent VAUX2 Ch4…7
RX18	Overcurrent output channel 0
…	…
RX1F	Overcurrent output channel 7
RX20	Latch input DI0
…	…
RX27	Latch input DI7
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY0	Output value DO0
…	…
RY7	Output value DO7
RY10	Latch reset DI0
…	…
RY17	Latch reset DI3

TBEN-S2-8DXP

RX	Signal
RX0	Input value DI0
…	…
RX7	Input value DI7
RX10	Overcurrent VAUX1 Pin 1 C0 (Ch0/1)
RX11	Overcurrent VAUX1 Pin 1 C1 (Ch2/3)
RX12	Overcurrent VAUX2 Pin 1 C2 (Ch4/5)
RX13	Overcurrent VAUX2 Pin 1 C3 (Ch6/7)
RX18	Overcurrent output channel 0
…	…
RX1F	Overcurrent output channel 7
RX20	Latch input DI0
…	…
RX27	Latch input DI7
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY0	Output value DO0
…	…
RY7	Output value DO7
RY10	Latch reset DI0
…	…
RY17	Latch reset DI7
RY20	VAUX1 Pin1 C0 (Ch0/1)
RY21	VAUX1 Pin1 C1 (Ch2/3)
RY22	VAUX1 pin1 C2 (Ch4/5)
RY2 3	VAUX1 Pin1 C3 (Ch6/7)

TBEN-S1-4DIP-4DOP

RX	Signal
RX0	Input value DI0
…	…
RX3	Input value DI3
RX10	Overcurrent VAUX1 Ch0…3
RX11	Overcurrent VAUX2 Ch0…7
RX18	Overcurrent output channel 4
…	…
RX1B	Overcurrent output channel 7
RX20	Latch input DI0
…	…
RX27	Latch input DI7
Module status (status word)	
RX30	DIAG
RX31	ARGEE
RX32	-
RX33	
RX34	
RX35	
RX36	
RX37	V2
RX38	-
RX39	V1
RX3A	Internal error
RX3B	-
RX3C	
RX3D	
RX3E	FCE
RX3F	-

RY	Signal
RY0	Output value DO4
…	…
RY3	Output value DO7
RY10	Latch reset DI0
…	…
RY17	Latch reset DI3

TBEN-S2-4AI

RX	Signal
Diagnostics analog channel Ch0	
RX0	Cold junction error
RX1	Short-circuit
RX2	Upper limit value exceeded
RX3	Overcurrent VAUX1
RX4	Wire break
RX5	Overflow
RX6	Underflow
RX7	Lower limit value underrun
Dlagnostics analog channel Ch1	
RX8	Cold junction error
RX9	Short-circuit
RXA	Upper limit value exceeded
RXB	Overcurrent VAUX1
RXC	Wire break
RXD	Overflow
RXE	Underflow
RXF	Lower limit value underrun
Diagnostics analog channel Ch2	
RX10	Cold junction error
RX11	Short-circuit
RX12	Upper limit value exceeded
RX13	Overcurrent VAUX1
RX14	Wire break
RX15	Overflow
RX16	Underflow
RX17	Lower limit value underrun
Diagnostics analog channel Ch3	
RX18	Cold junction error
RX19	Short-circuit
RX1A	Upper limit value exceeded
RX1B	Overcurrent VAUX1
RX1C	Wire break
RX1D	Overflow
RX1E	Underflow
RX1F	Lower limit value underrun
Module status (status word)	
RX20	DIAG
RX21	ARGEE

RX	Signal
RX22	-
RX23	
RX24	
RX25	
RX26	
RX27	V2
RX28	-
RX29	V1
RX2A	Internal error
RX2B	-
RX2C	
RX2D	
RX2E	FCE
RX2F	-

TBEN-S2-4AO

RX	Signal
Diagnostics	
RX0	Overload channel 0
RX1	Overload channel 1
RX2	Overload channel 2
RX3	Overload channel 3
RX4	Wire break channel 0
RX5	Wire break channel 1
RX6	Wire break channel 2
RX7	Wire break channel 3
Module status (status word)	
RX20	DIAG
RX21	ARGEE
RX22	-
RX23	
RX24	
RX25	
RX26	
RX27	V2
RX28	-
RX29	V1
RX2A	Internal error
RX2B	-
RX2C	
RX2D	
RX2E	FCE
RX2F	-

7.8.6 Word area

TBEN-S1-8DIP, TBEN-S2-8DIP and TBEN-S1-8DIP-D

RWr		**Process input data**
Word (hex)	**Bit**	
Counter		
RWr00		Counter value channel 0
RWr01		
RWr02		Frequency channel 0
RWr03		Status (reserved)

RWw		**Process output data**
Word (hex)	**Bit**	
Counter		
RWw00	0	Counter reset
	…	Reserved

TBEN-S1-8DOP

RWr		**Process input data**
Word (hex)	**Bit**	
PWM (channel 3)		
RWr00	0	Overcurrent at PWM output (channel 3)
	…	Reserved
PWM (channel 7)		
RWr01	0	Overcurrent at PWM output (channel 7)
	…	Reserved

RWw		**Process output data**
Word (hex)	**Bit**	
PWM (channel 3)		
RWw00	0…7	Duty cycle (channel 3)
	…	Reserved
PWM (channel 7)		
RWw01	0…7	Duty cycle (channel 7)
	…	Reserved

TBEN-S1-4DXP

RWr		Process input data
Word (hex)	**Bit**	
Counter		
RWr00		Counter value channel 0
RWr01		
RWr02		Frequency channel 0
RWr03		Status (reserved)
PWM (channel 3)		
RWr06	0	Overcurrent at PWM output (channel 3)
	…	Reserved

RWw		Process output data
Word (hex)	**Bit**	
Counter		
RWw00	0	Counter reset
	…	Reserved
…		
PWM (channel 3)		
RWw03	0…7	Duty cycle (channel 3)
	…	Reserved

TBEN-S1-8DXP and TBEN-S2-8DXP

RWr		**Process input data**
Word (hex)	**Bit**	
Counter		
RWr00		Counter value channel 0
RWr01		
RWr02		Frequency channel 0
RWr03		Status (reserved)
PWM (channel 3)		
RWr06	0	Overcurrent at PWM output (channel 3)
	…	Reserved
PWM (channel 7)		
RWr0A	0	Overcurrent at PWM output (channel 7)
	…	Reserved

RWw		**Process output data**
Word (hex)	**Bit**	
Counter		
RWw00	0	Counter reset
	…	Reserved
…		
PWM (channel 3)		
RWw03	0…7	Duty cycle (channel 3)
	…	Reserved
PWM (channel 7)		
RWw07	0…7	Duty cycle (channel 7)
	…	Reserved

TBEN-S1-4DIP-4DOP

RWr		Process input data
Word (hex)	**Bit**	
Counter		
RWr00		Counter value channel 0
RWr01		
RWr02		Frequency channel 0
RWr03		Status (reserved)
PWM (channel 7)		
RWr07	0	Overcurrent at PWM output (channel 7)
	…	Reserved

RWw		Process output data
Word (hex)	**Bit**	
Counter		
RWw00	0	Counter reset
	…	Reserved
…		
PWM (channel 7)		
RWw03	0…7	Duty cycle (channel 7)
	…	Reserved

TBEN-S2-4AI

RWr		Process input data	RWw		Process output data
Word (hex)	**Bit**		**Word (hex)**	**Bit**	
Analog data					
RWr00		Analog value channel 0			
RWr01		Analog value channel 1			
RWr02		Analog value channel 2			
RWr03		Analog value channel 3			

TBEN-S2-4AO

RWr		Process input data	RWw		Process output data
Word (hex)	**Bit**		**Word (hex)**	**Bit**	
-			**Analog channels**		
			RWw00		Analog value channel 0
			RWw01		Analog value channel 1
			RWw02		Analog value channel 2
			RWw03		Analog value channel 3

7.8.7 Parameter mapping

The chapter "Parameterizing and configuring" [▶ 199] contains a detailed parameter description.

TBEN-S1-8DIP and TBEN-S1-8DIP-D

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Extended digital function CNT	0	**0**	**Deactivated**
				1	Input filter and pulse stretch
				4	Counter in Hz
	0.7	Input filter	0	**0**	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	0	**0**…254	
B001	Assignment s. B000 (channel 0)		1	Assignment s. B000 (channel 0)	
B002			2		
B003			3		
B004			4		
B005			5		
B006			6		
B007			7		

TBEN-S2-8DIP

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Extended digital function CNT	0	0	**Deactivated**
				1	Input filter and pulse stretch
				4	Counter in Hz
	0.7	Input filter	0	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	0	0…254	
B001	Assignment s. channel 0		1	Assignment s. channel 0	
B002			2		
B003			3		
B004			4		
B005			5		
B006			6		
B007			7		
B008	0.0	VAUX1/VAUX2 Pin1 C0 (Ch0/1)	0/1	0	24 VDC
				1	switchable
				2	Off
	0.8	VAUX1/VAUX2 Pin1 C1 (Ch2/3)	2/3	s. channel 0/1	
	1.0	VAUX1/VAUX2 Pin1 C2 (Ch4/5)	4/5		
	1.8	VAUX1/VAUX2 Pin1 C3 (Ch6/7)	6/7		

TBEN-S1-8DOP

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Manual reset after overcurr. Ch0	0	0	**No**
				1	Yes
	…	…			
	0.8	Manual reset after overcurr. Ch7	7	0	**No**
				1	Yes
B001	0.0	Extended digital function PWM	3	0	Deactivated
				1	-
				2	PWM output
B002	0.0	Extended digital function PWM	7	0	Deactivated
				1	-
				2	PWM output

TBEN-S1-4DXP

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Manual reset after overcurr. Ch0	0	0	**No**
				1	Yes
	…				
	0.3	Manual reset after overcurr. Ch3	3	0	**No**
				1	Yes
	0.8	Activate output Ch0	0	0	**No**
				1	Yes
	…				
	0.B	Activate output Ch3	3	0	**No**
				1	Yes
B001	0.0	Extended digital function CNT	0	0	**Deactivated**
				1	Input filter and pulse stretch
				4	Counter in Hz
	0.7	Input filter	0	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	0	0…254	
B002	Assignment s. B001 (channel 0)		1	Assignment s. B001 (channel 0)	
B003			2		
B004	0.0	Extended digital function PWM	3	0	**Deactivated**
				1	Input filter and pulse stretch
				4	PWM output
	0.7	Input filter	3	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	3	0…254	

TBEN-S1-8DXP

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Manual reset after overcurr. Ch0	0	0	**No**
				1	Yes
	…				
	0.7	Manual reset after overcurr. Ch3	7	0	**No**
				1	Yes
	0.8	Activate output Ch0	0	0	**No**
				1	Yes
	…				
	0.F	Activate output Ch3	7	0	**No**
				1	Yes
B001	0.0	Extended digital function CNT	0	0	**Deactivated**
				1	Input filter and pulse stretch
				4	Counter in Hz
	0.7	Input filter		0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)		0…254	
B002	Assignment s. B001 (channel 0)		1	Assignment s. B001 (channel 0)	
B003			2		
B004	0.0	Extended digital function PWM	3	0	**Deactivated**
				1	Input filter and pulse stretch
				4	PWM output
	0.7	Input filter	3	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	3	0…254	
B005	Assignment s. B001 (channel 0)		4	Assignment s. B001 (channel 0)	
B006			5		
B007			6		
B008	Assignment s. B004 (channel 3)		7	Assignment s. B004 (channel 3)	

TBEN-S2-8DXP

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Manual reset after overcurr. Ch0	0	0	**No**
				1	Yes
	…				
	0.7	Manual reset after overcurr. Ch3	7	0	**No**
				1	Yes
	0.8	Activate output Ch0	0	0	**No**
				1	Yes
	…				
	0.F	Activate output Ch3	7	0	**No**
				1	Yes
B001	0.0	Extended digital function CNT	0	0	**Deactivated**
				1	Input filter and pulse stretch
				4	Counter in Hz
	0.7	Input filter	0	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	0	0…254	
B002	Assignment s. B001 (channel 0)		1	Assignment s. B001 (channel 0)	
B003			2		
B004	0.0	Extended digital function PWM	3	0	**Deactivated**
				1	Input filter and pulse stretch
				4	PWM output
	0.7	Input filter	Channel 3	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	3	0…254	
B005	Assignment s. B001 (channel 0)		4	Assignment s. B001 (channel 0)	
B006			5		
B007			6		
B008	Assignment s. B004 (channel 3)		7	Assignment s. B004 (channel 3)	
B009	0.0	VAUX1 Pin1 C0 (Ch0/1)	0/1	0	24 VDC
				1	switchable
				2	Off
	0.8	VAUX1 Pin1 C1 (Ch2/3)	2/3	Assignment s. channel 0/1	
	1.0	VAUX2 Pin1 C2 (Ch4/5)	4/5		
	1.8	VAUX2 Pin1 C3 (Ch6/7)	6/7		

TBEN-S1-4DIP-4DOP

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Manual reset after overcurr. Ch0	0	0	**No**
				1	Yes
	…				
	0.3	Manual reset after overcurr. Ch3	3	0	**No**
				1	Yes
B001	0.0	Extended digital function CNT	0	0	**Deactivated**
				1	Input filter and pulse stretch
				4	Counter in Hz
	0.7	Input filter	0	0	0.2 ms
				1	3 ms
	0.8	Impulse stretch (*10 ms)	0	0…254	
B002	Assignment s. B001 (channel 0)		1	Assignment s. B001 (channel 0)	
B003			2		
B004			3		
B005	0.0	Extended digital function PWM	7	0	Deactivated
				1	-
				2	PWM output

TBEN-S2-4AI

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Mains suppression	0	0	Off
				1	50 Hz
				2	60 Hz
	0.2	Temperature unit		0	Celsius
				1	Fahrenheit
	0.4	Operation mode		0	Thermocouple
				1	Voltage
				2	Current
				3	Resistance
				4	RTD
	0.8	Deactivate diagnostics		0	No
				1	Yes
	0.9	Deactivate channel		0	No
				1	Yes
	0.A	Data representation		0	Standard
				1	NE43
				2	Extended range
	0.C	Average value		0	Standard
				1	smooth
				2	fast
				3	Off
	1.0	Voltage range		0	-10…10 V
				1	0…10 V
				2	2…10 V
				3	0…5 V
				4	1…5 V
				5	-1…1 V
				6	-500…500 mV
				7	-100…100 mV
				8	-50…50 mV
	1.4	Voltage wiring type		0	Differential
				1	Single ended
				2	Differential without ground
	1.6	Current range		0	4…20 mA
				1	0…20 mA
				2	20…20 mA
	1.8	Current wiring type		0	Differential
				1	Single ended
				2	Differential without ground
	1.A	Resistance wiring type		0	2-wire
				1	3-wire
				2	4-wire

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
	1.C	Resistance range		0	0…100 Ohm
				1	0…400 Ohm
				2	0…2000 Ohm
				3	0…4000 Ohm
	1.E	RTD wiring type		0	2-wire
				1	3-wire
				2	4-wire
	2.0	RTD type		0	Pt100, -200…850 °C, -328…1562 °F
				1	Pt100, -200…150 °C, -328…302 °F
				2	Ni100, -60…250 °C, -76…482 °F
				3	Ni100, -60…150 °C, -76…302 °F
				4	Pt200, -200…850 °C, -328…1562 °F
				5	Pt200, -200…150 °C, -328…302 °F
				6	Pt500, -200…850 °C, -328…1562 °F
				7	Pt500, -200…150 °C, -328…302 °F
				8	Pt1000, -200…850 °C, -328…1562 °F
				9	Pt1000, -200…150 °C, -328…302 °F
				10	Ni1000, -60…250 °C, -76…482 °F
				11	Ni1000, -60…150 °C, -76…302 °F
	2.8	Thermocouple cold junction compensation		0	Pt1000
				1	Pt100
				2	Cold junction of channel 0
				3	None
	2.C	Thermocouple type		0	Type K, -270…1370 °C, -454…2498 °F
				1	Type B, 100…1820 °C, 212…3308 °F
				2	Type E, -270…1000 °C, -454…1832 °F
				3	Type J, -210…1200 °C, -346…2192 °F
				4	Type N, -270…1300 °C, -454…2372 °F
				5	Type R, -50…1768 °C, -58…3214 °F
				6	Type S, -50…1768 °C, -58…3214 °F
				7	Type T, -270…400 °C, -454…752 °F
				8	Type C, 0…2315 °C, 32…4199 °F
				9	Type G, 0…2315 °C, 32…4199 °F
B001	Assignment s. B001 (channel 0)		1	Assignment s. B001 (channel 0)	
B002			2		
B003			3		

TBEN-S2-4AO

Parameter ID	Offset	Parameter name	Channel	Value	Meaning
B000	0.0	Output on fieldbus error	0	0	Default value
				1	Substitute value
				2	Current value
	0.4	Operation mode		0	Voltage
				1	Current
	0.8	Deactivate diagnostics		0	No
				1	Yes
	0.9	Deactivate channel		0	No
				1	Yes
	0.A	Data representation		0	Standard
				1	NE43
				2	Extended range
	0.C	Output recovery mode		0	Automatic
				1	Manual
	1.0	Current range		0	0…20 mA
				1	4…20 mA
	1.4	Voltage range		0	**-10…10 V**
				1	0…10 V
				2	2…10 V
				3	0…5 V
				4	1…5 V
	2.0	Substitute value			
B001	Assignment s. B001 (channel 0)		1	Assignment s. B001 (channel 0)	
B002			2		
B003			3		

7.8.8 Acyclic communication via SLMP – supported functions

The devices support acyclical access via SLMP command Device Read (0x0401) and Device Write (0x1401).

Supported Device Codes

Device Code	Description
0x0011	Device information (vendor ID, device code, device name, etc.)
0x00AC	Acyclic communication
0x00D8	Input data
0x00D9	Output data
0x00DD	Diagnostic data

Supported End Codes

End Code	Description
0x0000	Command successfully executed
0xC059	Command/subcommand: not supported command or subcommand
0xC05C	Wrong data: data content does not fit to the command data content does not fit to the command
0xC061	Data length: data length does not fit to the command

Read device information (Device Code 0x0011)

Address (Add)	Content	Access type	Data length in word (Len)	Description
0x0001	Vendor code	ro	1	Vendor ID Turck: 0x3355
0x0002	Model code	ro	2	ID of the device
0x0003	Model name	ro	2	Device name
0x0004	FW version	ro	2	Firmware version of the device
0x0005	Stack version	ro	2	Version of the CC-Link component

Acyclic I/O communication (Device Code 0x00AC)

Address (Add)	Read access	Write access	Data length in word (Len)	Content	Description
0xACAC	Open Connection		1	0xAD00… 0xADFF, 0x0000	A read access to this address opens an acyclic connection or returns an error. A valid connection handle is 0xAD00…0xADFF, or 0 in case of failure.

Address (Add)	Read access	Write access	Data length in word (Len)	Content	Description
0xACAC		Close Connection	1	0xAD00… 0xADFF, 0xFFFF	Write access to this address closes an acyclic connection. Writing a previously opened connection address (0xAD00…0xADFF) closes this connection. If the value -1 (0xFFFF) is written, all acyclic connections opened for CC-Link are closed.
0xAD00 … 0xADFF			1…240	Acyclic data	

Example access:

1. **Open Connection**:
   Device Read (0x0401)
   Device Code = 0xAC
   Add = 0xACAC
   Len =1
   Result: 0xAD00 = Connection address: must be used for the following connection accesses, like read, write and close.

2. **Read Connection:**Device Read (0x0401)
   Device Code = 0xAC
   Add = 0xAD00
   Len =1
   Result: n words of received frame. The requested length is the maximum buffer size. If the available acyclic data does not fit in the buffer, the exceeding data is truncated.

3. **Write Connection**:
   Device Read (0x1401)
   Device Code = 0xAC
   Add = 0xAD00
   Len =1
   Result: n words of data to be sent.

4. **Close Connection**:
   Device Write (0x1401)
   Device Code = 0xAC
   Add=0xACAC,
   Len=1
   Data: 0xADxx (address of the previously used Open Connection)

Read input data (Device Code 0x00D8)

Address (Add)	Access type	Data length in word (Len)	Description
0x0000	ro	1…n	Access to all input data of the device regardless of profiles and restrictions due to the number of occupied stations, order: 1. Data from RWr area 2. Data from RX area
0x0001 … 0x00…	ro	1…n	Accesses the input data of one (sub)module. Data is structured in the native order of that (sub)module.

Write output data (Device Code 0x00D9)

Address (Add)	Access type	Data length in word (Len)	Description
0x0000	rw	1…n	Access to all output data of the device regardless of profiles and restrictions due to the number of occupied stations, order: 1. Data from RWw area 2. Data from RY area
0x0001 … 0x00…	rw	1…n	Accesses the output data of one (sub)module. Data is structured in the native order of that (sub)module.

Read Diagnostic data data (Device Code 0x00DD)

Address (Add)	Access type	Data length in word (Len)	Description
0x0000	ro	1…n	Access to all diagnostic data of the device regardless of profiles and restrictions due to the number of occupied stations
0x0001 … 0x00…	ro	1…n	Accesses the diagnostic data data of one (sub)module. Data is structured in the native order of that (sub)module.

7.9 Connecting devices to a CC-Link IE Field Basic client with GX Works3

Naming convention

Turck uses the terms "client" and "server". The following description uses the terms "Master Station" (client) and "Slave Station" (server) only because of the naming in Melsoft GX Works.

Used hardware

The following hardware components are used in this example:

- Mitsubishi MELSEC iQ-R controller
- Mitsubishi CPU 04ENCPU with local CC-Link IOs
- TBEN modules (as example)
  - TBEN-LL-8DIP-8DOP (IP address: 192.168.3.10)
  - TBEN-S2-4IOL (IP address: 192.168.3.12)

Used software

The following software tools are used in this example:

- Melsoft GX Works3

Prerequisites

- The GX Works3 software is open and a new project has been created.
- The controller including CPU and local IOs is configured in GX Works3.

7.9.1 Register the CSP+ files in GXWorks3

▶ Select and register CSP+ files via **Tools** → **Profile Management** → **Register**.
Note: CSP+ files can only be registered in GX Works3 if no project is open.

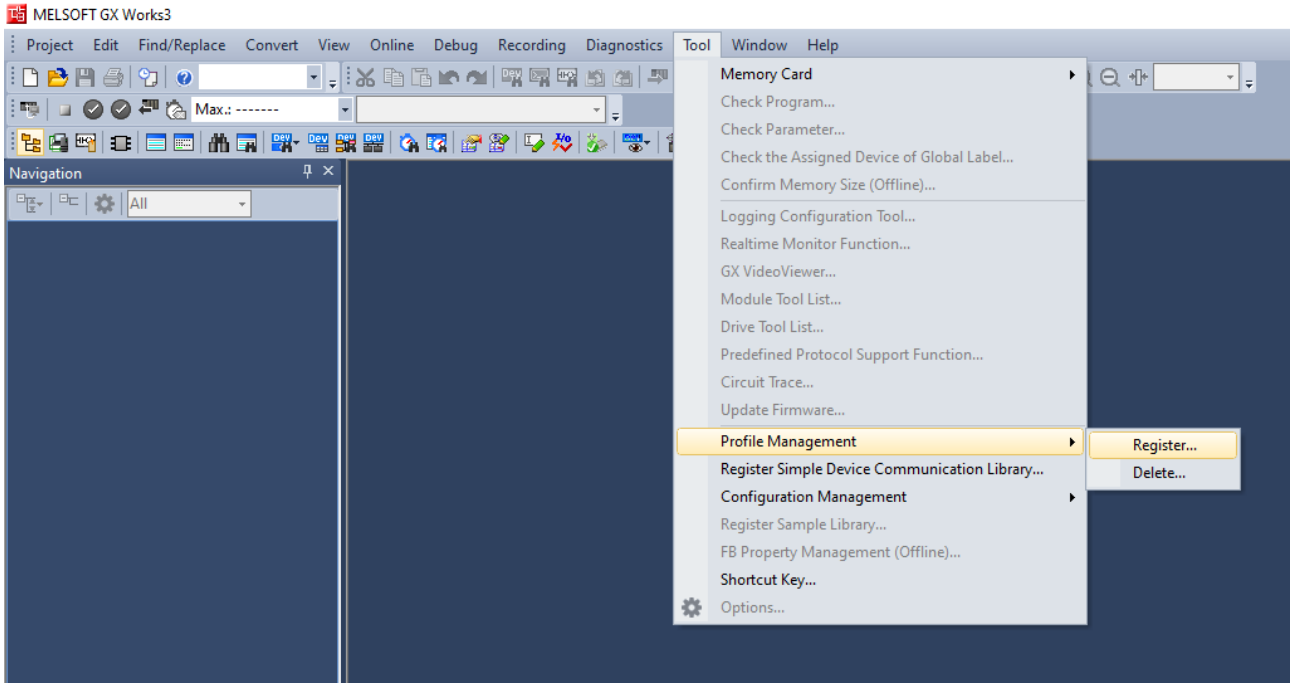

Fig. 82: Profile Management, Register Profile

7.9.2 Configuring the network settings

The network settings are configured at the CPU used under **Parameter** → **used CPU** (here: R04ENCPU) → **Module Parameters**.

Setting the IP address of the CPU

- Set the IP address of the CPU under **Own Node Settings** → **IP Address**.

Activate CC-Link Field Basic

The CC-Link IEF Basic protocol must be activated in the CPU.

- Under **CC-Link IEF Baisc Settings**, set the option **To Use or Not to Use CC-Link IEF Basic Setting** to **Use** in order to activate

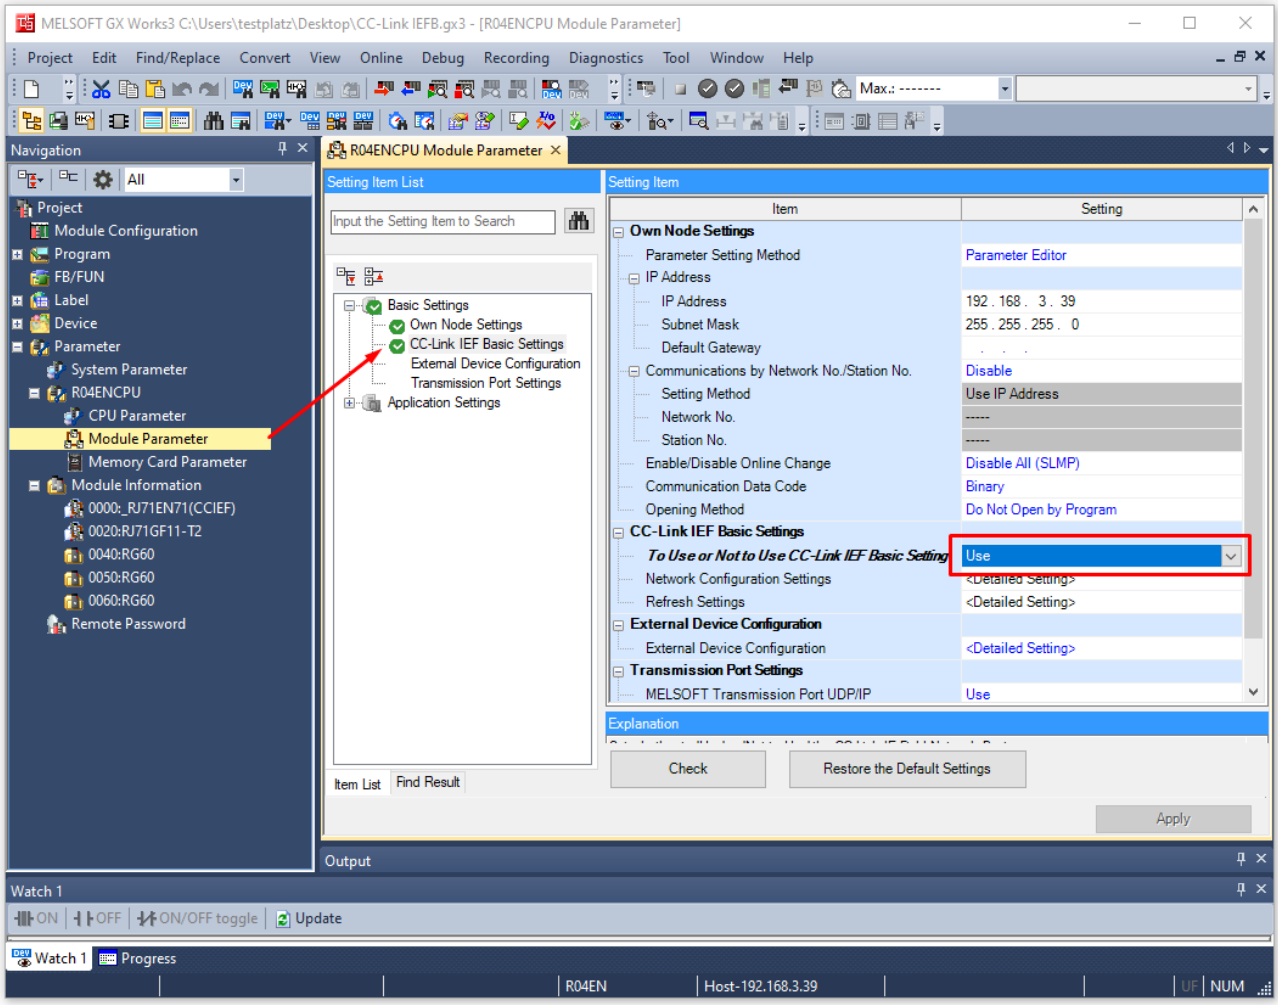

Fig. 83: GX Works3: Activate CC-Link IEF Basic on CPU

7.9.3 Configuring the CC-Link IE Field Basic network

Scanning the network

- Under **Module Parameters → CC-Link IEF Basic Settings** open the function **Network Configuration Settings.**

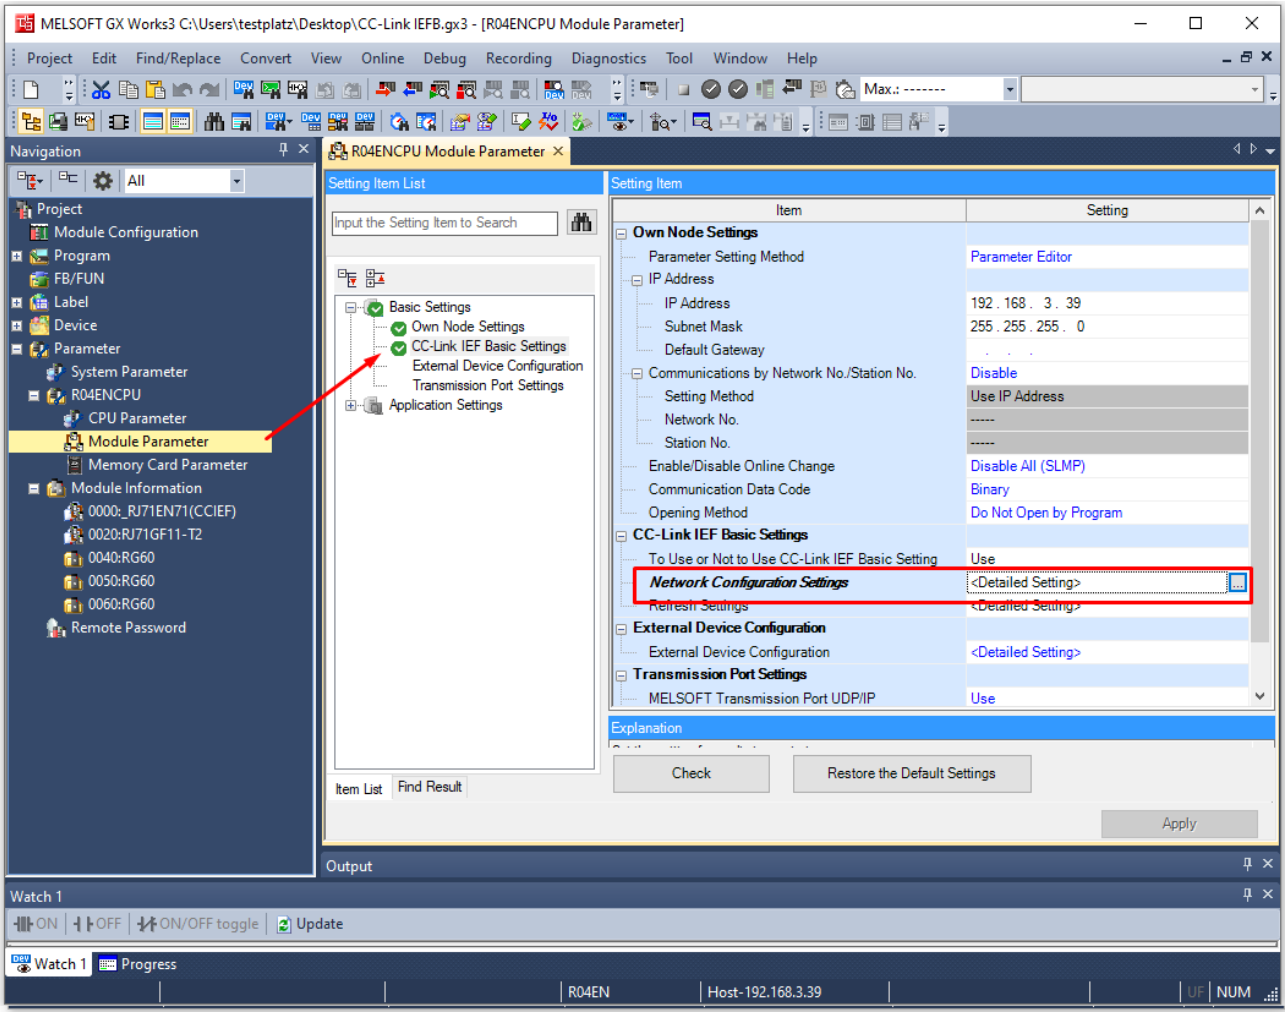

Fig. 84: GX Works3: Network Configuration Settings

▶ Scan the CC-Link IEF Basic network under **CC-Link IEF Basic Configuration** via **Detect Now**.

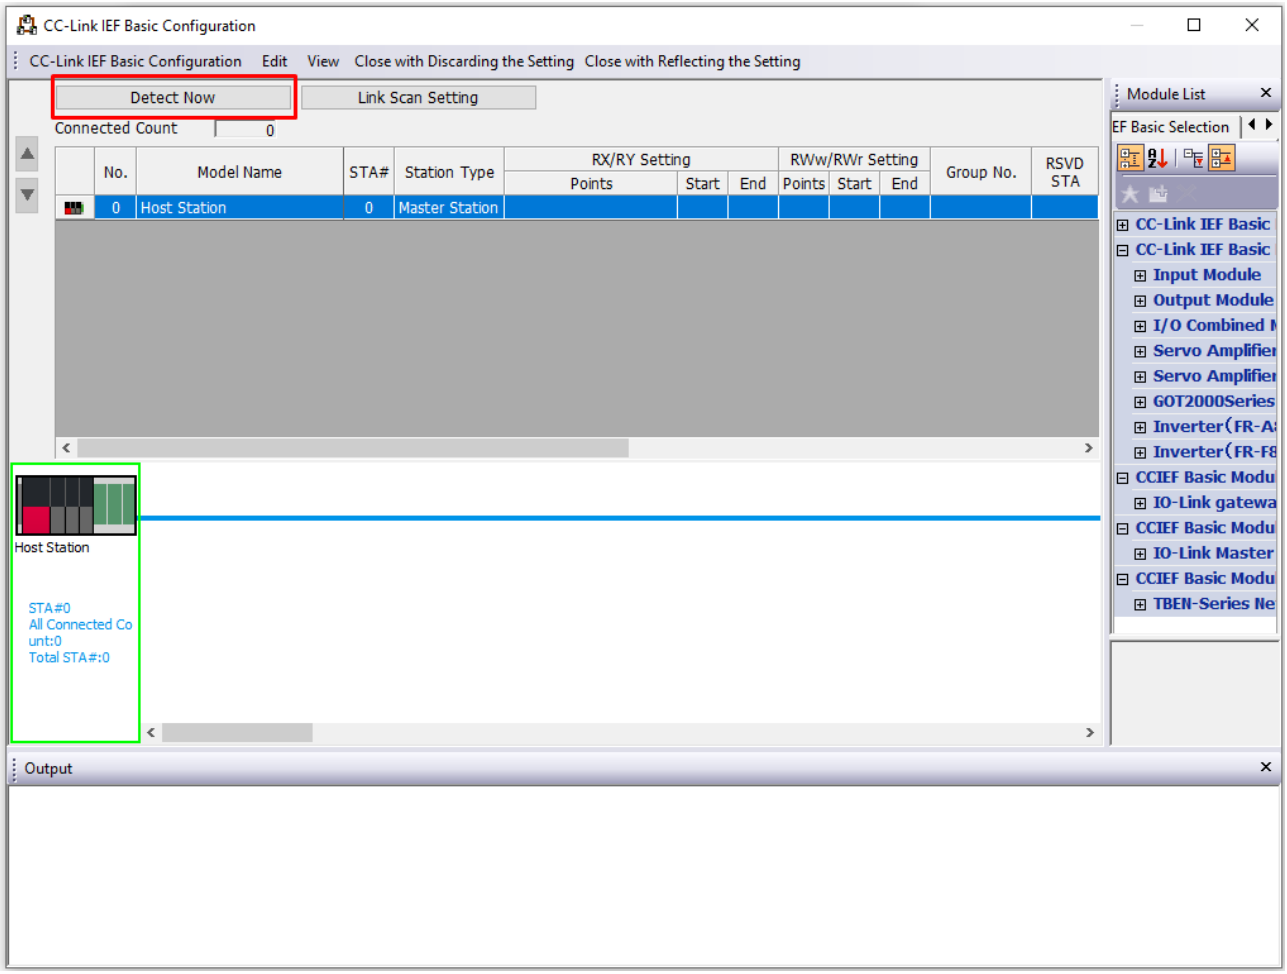

Fig. 85: GX Works3: scanning the CC-Link IEF Basic network

⇨ All CC-Link devices found in the Ethernet network are displayed in the order in which they are integrated in the network.

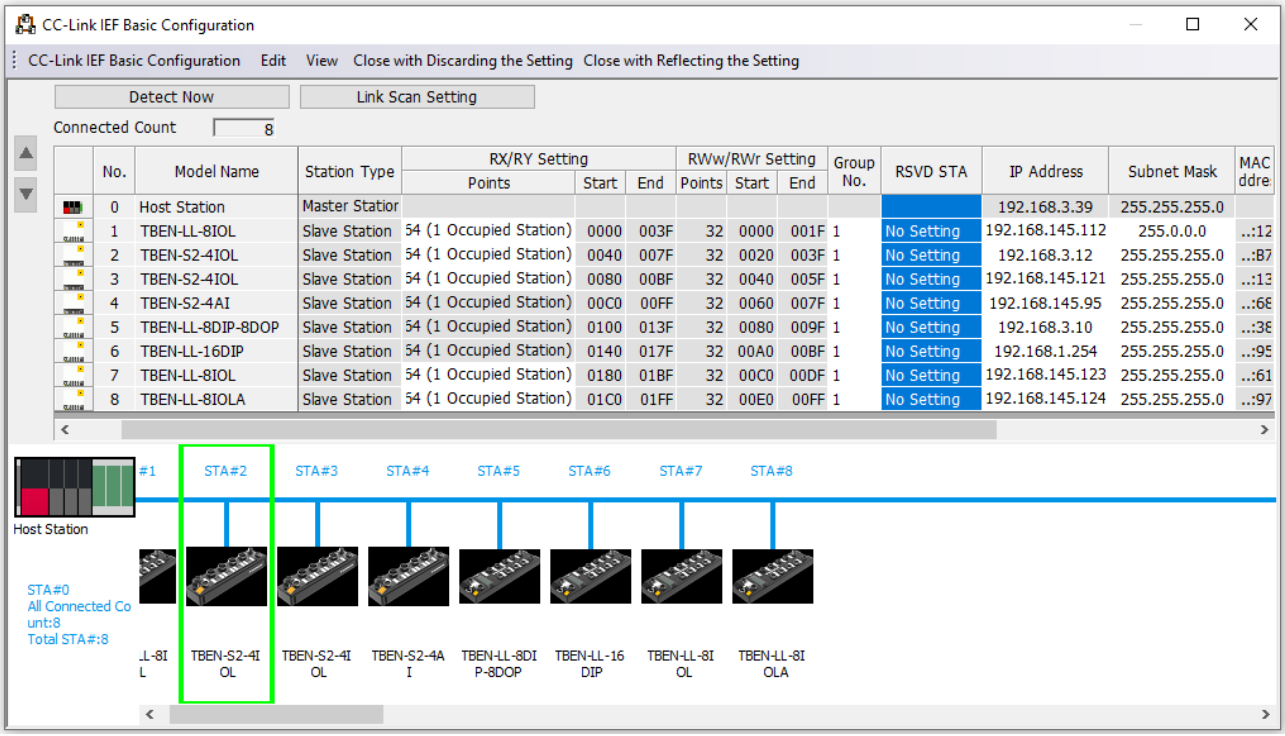

Fig. 86: GX Works3: Devices in the CC-Link IEF Basic network

Devices that do not match the IP address range of the controller cannot be added to the project.

- ▶ Delete the devices with an IP address outside the IP address range of the control unit by right-clicking on the device → **Delete** from the list of network nodes or change the devices' IP address in the **IP address column.**
- ▶ For devices that can be integrated with different process data variables (profiles) (here: TBEN-S2-4IOL): select the requested profile under **Station Type**.

Parameterizing CC-Link nodes

- Right-click on the device to be parameterized and select the device parameters via **Online → Parameter Processing of Slave Station**.

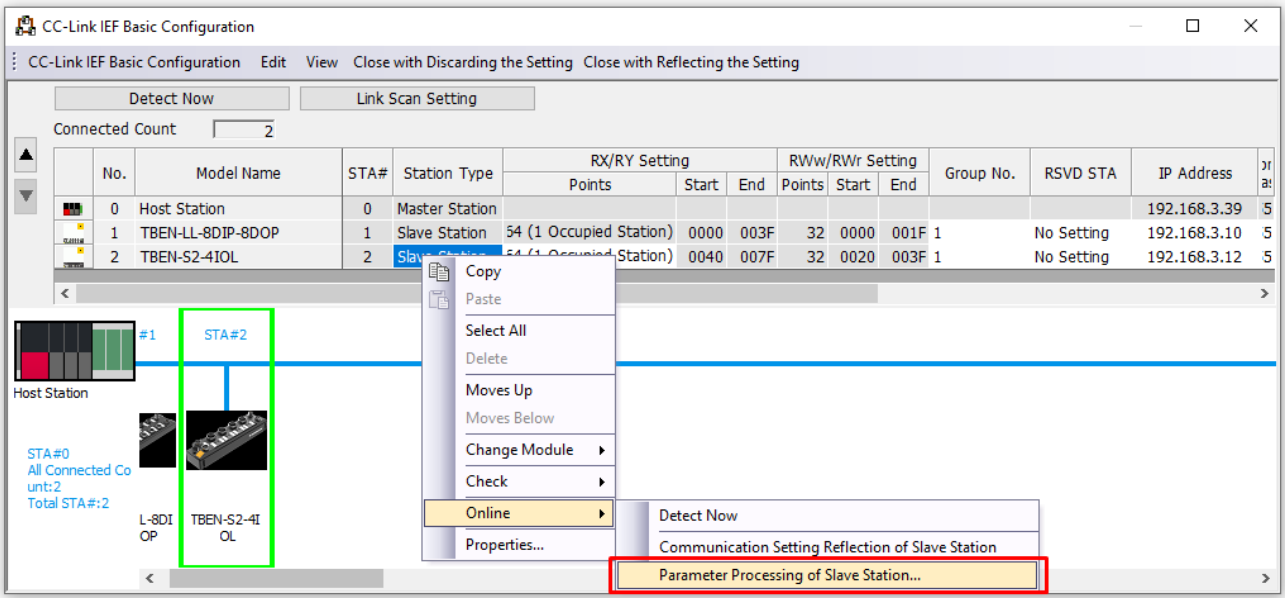

Fig. 87: GX Works3: Opening parameterization

- Activate the writing of parameters via **Method selection → Parameter write**.

NOTE
All parameters for one slot (in the example below: Slot 1) must be set. It is not possible to set individual parameters for a slot.

▶ Set the parameters and store the settings via **Execute**.

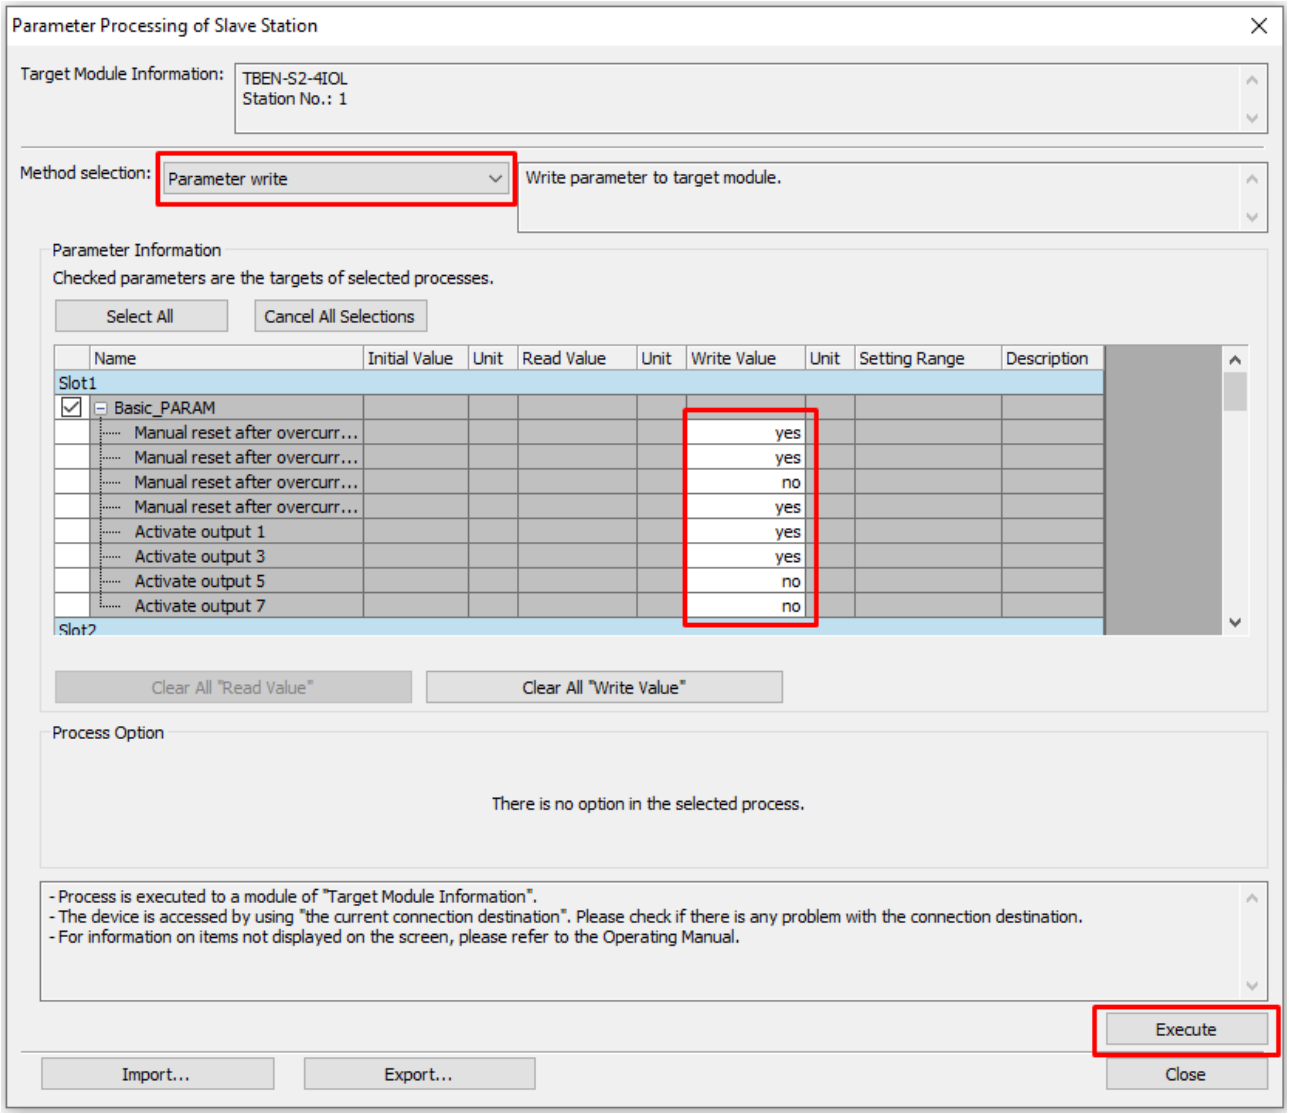

Fig. 88: GX Works3: Parameterizing the device

- Optional: Export the parameter settings under **Method selection** → **Parameter read** as CSV file and re-import the file under **Method selection** → **Parameter write** in order to fill the column **Write Values** with the actual parameter settings and then to be able to change sinlge parameters.
- Close the window **CC-Link IEF Basic Configuration** via **Close with Reflecting the Setting** and store the network structure.

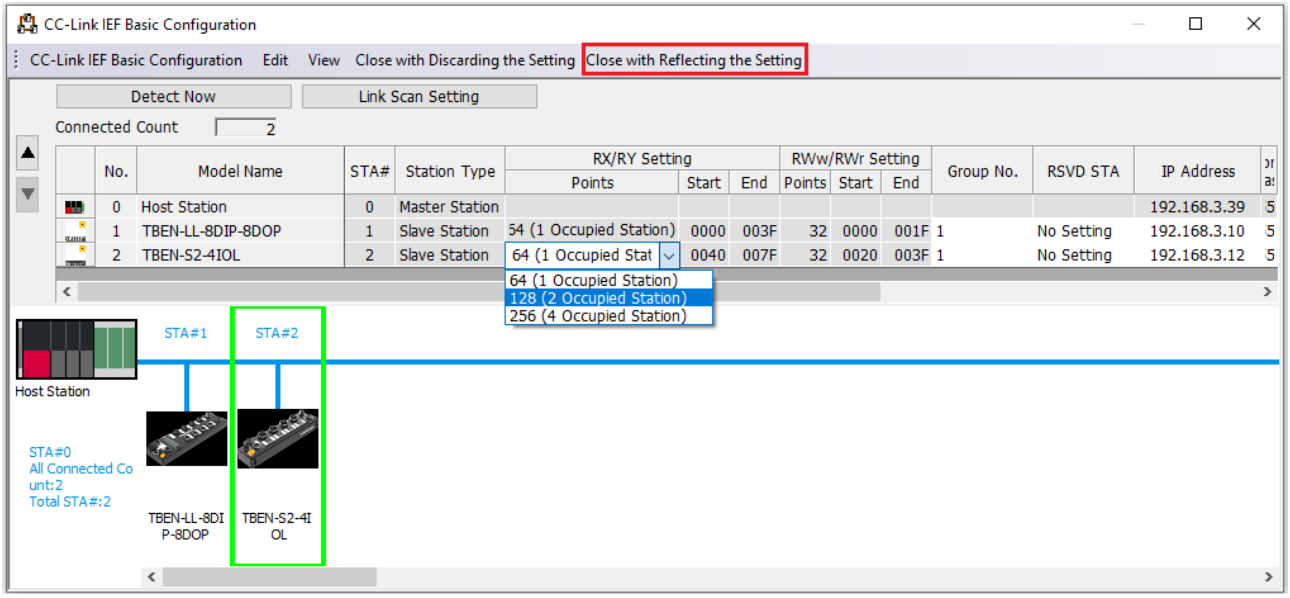

Fig. 89: GX Works3: Storing the network structure

- Accept the changes in the network structure under **Module Parameters** with **Apply**.

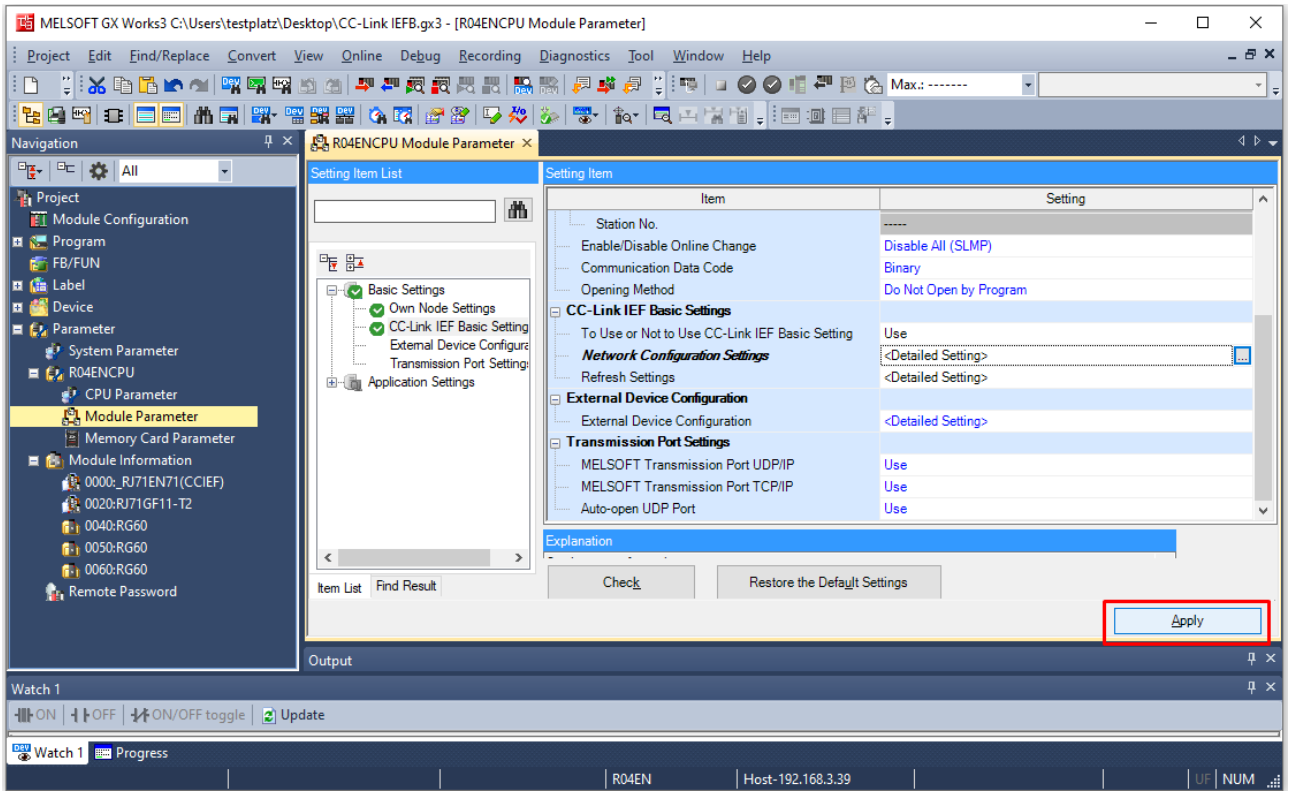

Fig. 90: GX Works3: Module Parameters, accept changes

7.9.4 Defining the process data mapping for CC-Link devices in the network

The start addresses of the process data for the devices that follow the **Master Station (Client)** (controller + local IOs) in the network are defined under **Module Parameters → CC-Link IEF Basic Settings** using the **Refresh Settings** function.

- Open the **Refresh Settings** function under **Module Parameters → CC-Link IEF Basic Settings**.
- Define the start addresses for the process data of the CC-Link devices in **CPU side**. **Check** can be used to verify whether the addresses are valid or overlap with the memory area occupied by the control unit.
- Accept the mapping settings with **Apply**.

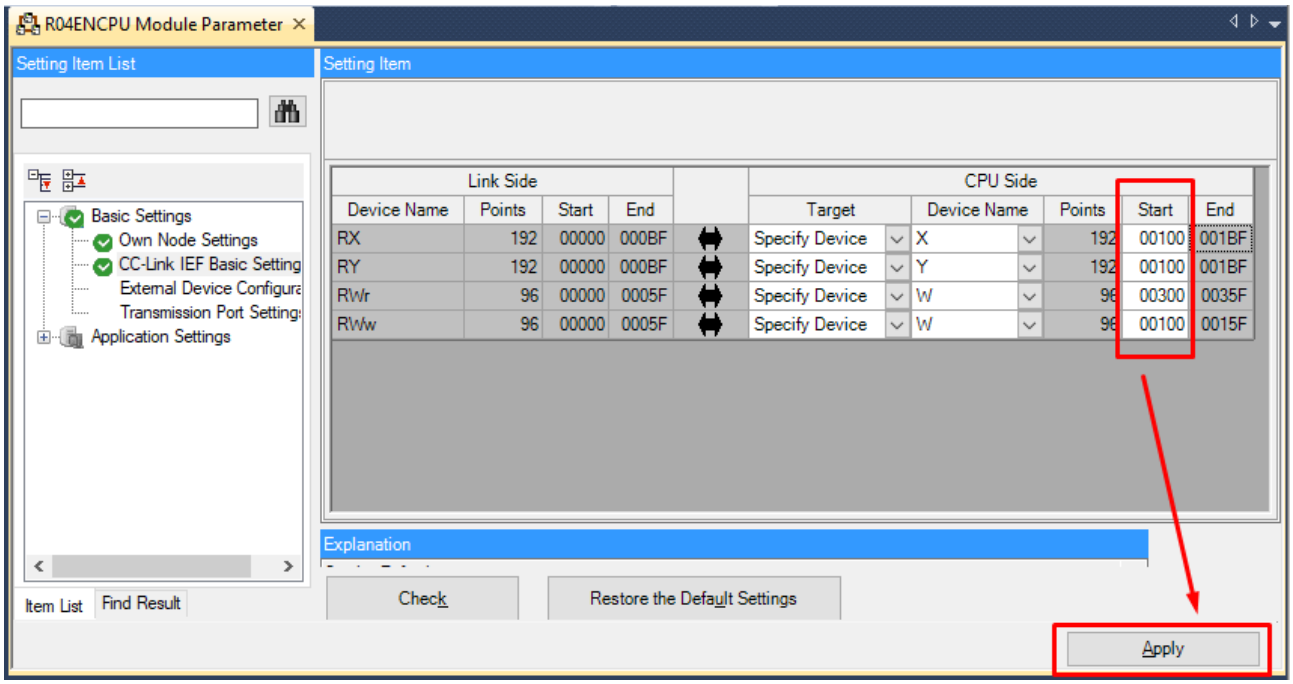

Fig. 91: GX Works3: Process data mapping in Refresh Settings

NOTE
Adjusting the mapping may require a voltage reset of the control unit.

7.9.5 Going online with the PLC

- Write the configuration to the PLC via **Online** → **Write to PLC**.

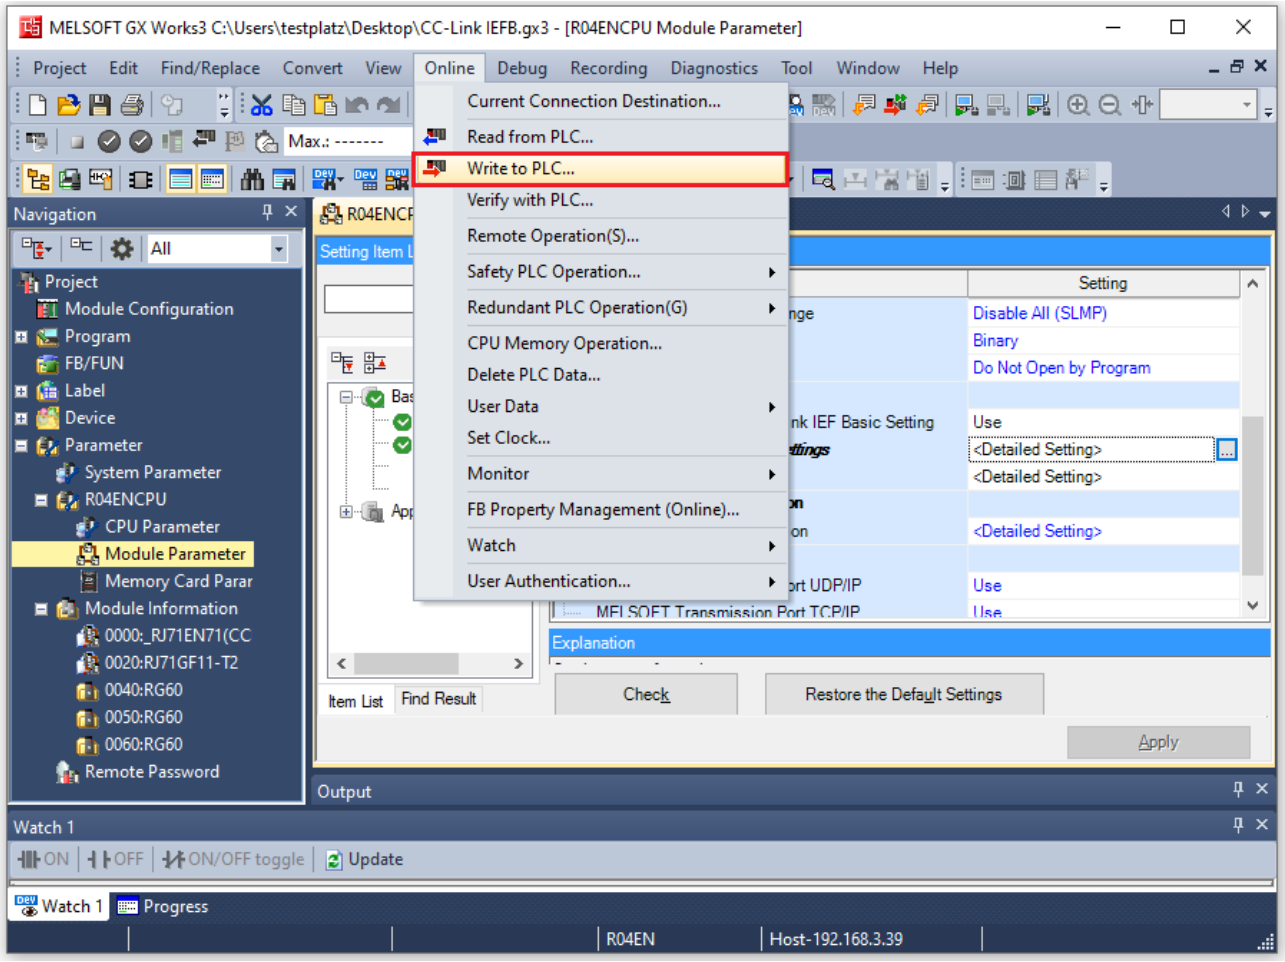

Fig. 92: GX Works3: Writing the configuration to the PLC

▶ If necessary, define which data have to be written and press **Execute**.

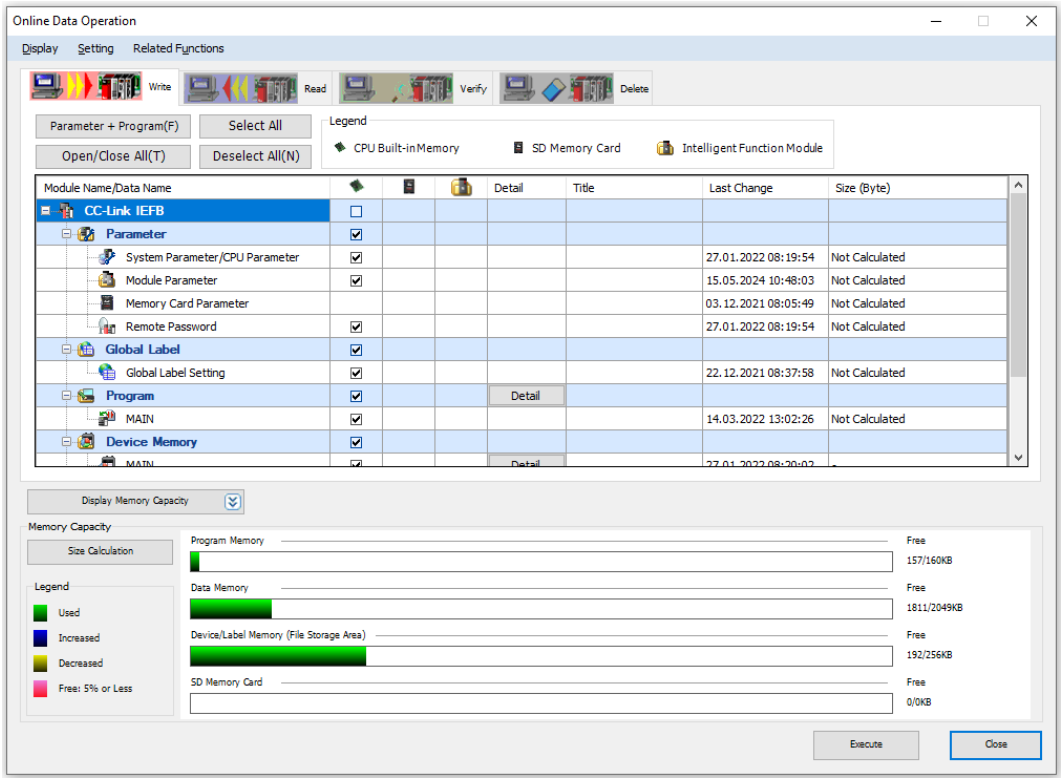

Fig. 93: GX Works3: Selecting data to be written

7.9.6 Reading process data

The monitoring of process data is done in the **Device/Buffer Memory Batch Monitor**.

▶ Open the monitoring via **Online** → **Monitor** → **Device/Buffer Memory Batch Monitor**.

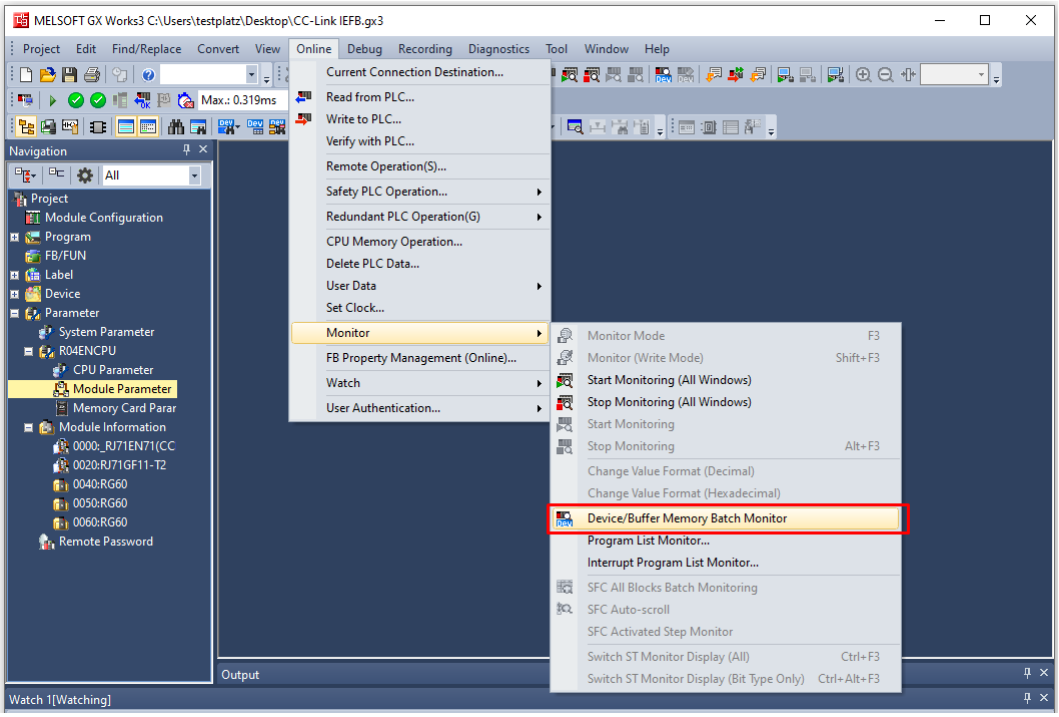

Fig. 94: GX Works3: Starting the monitoring of process data

▶ Enter the address of the process data to be read under **Device Name**. According to the defined process data mapping [▶ 195] **X100** is selected as start address.

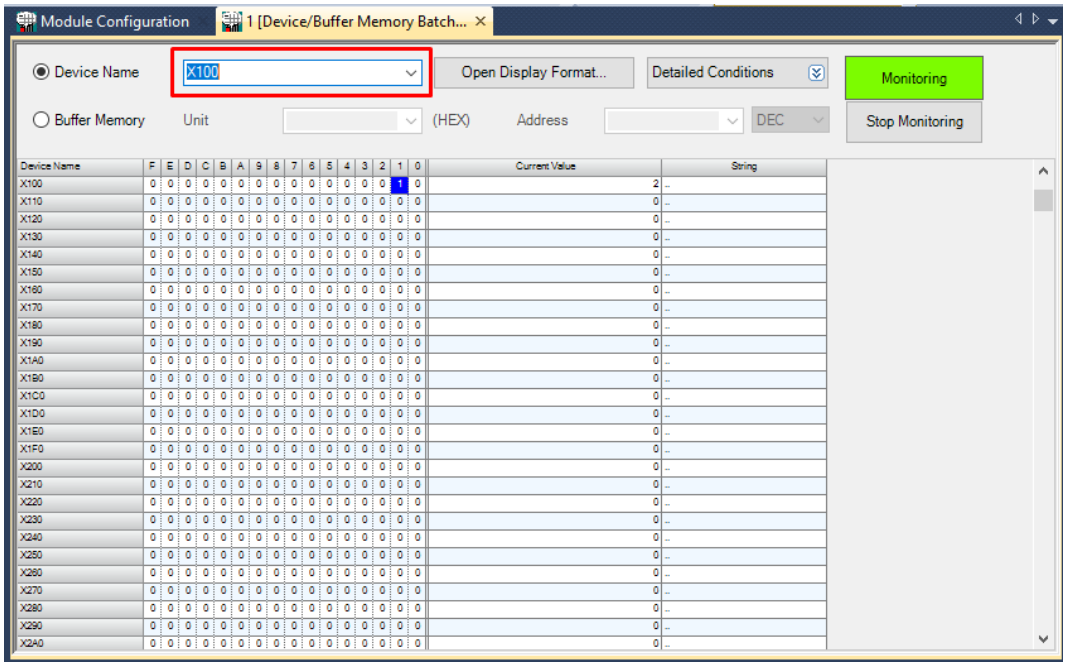

Fig. 95: GX Works3: Monitoring of process data

⇨ The mapping shows a signal at the 2nd Digital input of the 1st CC-Link device (station address 2, TBEN-LL-8DIP-8DOP) [▶ 189].

8 Parameterizing and configuring

8.1 I/O channel parameters

Parameters – digital modules

Default values are **shown in bold.**

Parameter name		Value		Meaning	Description
		Dec.	Hex.		
DIFT	Input filter	0	**0x00**	**0.2 ms**	Filter time 0.2 ms
		1	0x01	3 ms	The filter time of digital inputs is extended to 3 ms. Digital input signals can thus be reliably detected even when short-term interfering signals in rough environments occur.
DMOD	Extended digital function	**0**	**0x00**	**Deactivated**	Activates or deactivates the extended functions (input filter, impulse stretch, counter or PWM output function) for the respective digital channel [▶ 16].
		1	0x01	Input filter and pulse stretch	
DMOD_CNT	Extended digital function CNT	**0**	**0x00**	**Deactivated**	
		1	0x01	Input filter and pulse stretch	
		4	0x04	Counter in Hz	
DMOD_PWM	Extended digital function PWM	**0**	**0x00**	**Deactivated**	
		1	0x01	Input filter and pulse stretch	
		2	0x02	PWM output	
EN_DO	Activate output K…	**0**	**0x00**	**Yes**	Activates or deactivates the output function of the digital channel.
		1	0x01	No	
IST	Impulse stretch (*10 ms)	**0**…254	**0x00**… 0xFF		Configures the duration of pulse stretching of digital input edges from 10 to 2550 ms in multiples of 10 ms. 10 = pulse of 100 ms 0 = pulse stretching deactivated
SRO	Manual reset after overcurr. K…	**0**	**0x00**	**No**	Defines if a manual reset is necessary after an overcurrent occurred at the digital channel.
		1	0x01	Yes	
VAUX1/VAUX2 pin1 (C…)		**0**	**0x00**	**24 VDC**	The 24 VDC sensor/actuator supply at pin 1 of the connector is switched on.
		1	0x01	switchable	The 24 VDC sensor/actuator supply at pin1 of the connector is switchable via the process data.
		2	0x02	Off	The 24 VDC sensor/actuator supply at pin 1 of the connector is switched off.

Parameters – TBEN-S2-4AI

Parameter name		Value		Meaning	Description	
		Dec.	Hex.			
CWT	Current wiring type	**0**	**0x00**	**differential**	Differential input	
		1	0x01	Single ended	Connection of sensors with common ground [▶ 37]	
		2	0x02	Differential without ground	Differential input	
DCH	Deactivate channel	**0**	**0x00**	**No**	Channel active	
		1	0x01	Yes	Channel inactive	
DDI	Deactivate diagnostics	**0**	**0x00**	**No**	diagnostics active	
		1	0x01	Yes	diagnostics inactive	
DRE	Data representation	**0**	**0x00**	**standard**		
		1	0x01	NE43		
		2	0x02	extended range		
INFIL	Input averaging filter				Limit frequency (at -3 dB)	Limit frequency (at -3 dB)
		0	**0x00**	**standard**	5 Hz	2 Hz
		1	0x01	smooth	1 Hz	0.25 Hz
		2	0x02	fast	30 Hz	15 Hz
		3	0x03	Off	250 Hz	125 Hz
IMR	Current range	**0**	**0x00**	**4…20 mA**		
		1	0x01	0…20 mA		
		2	0x02	20…20 mA		
OPM	Operation mode	**0**	**0x00**	**thermocouple**	Selection of the operation mode for the respective channel. If a channel is parameterized as voltage or current input, the sensor supply is provided at pin 1 and 3. Thermocouples, RTDs and resistances must not be connected if the channel is set to this operation mode.	
		1	0x01	Voltage		
		2	0x02	Current		
		3	0x03	Resistance		
		4	0x04	RTD		
RRA	Resistance range	**0**	**0x00**	**0…100 Ohm**		
		1	0x01	0…400 Ohm		
		2	0x02	0…2000 Ohm		
		3	0x03	0…4000 Ohm		
RTDT	RTD type	**0**	**0x00**	**Pt100, -200…850 °C, -328…1562 °F**		
		1	0x01	Pt100, -200…150 °C, -328…302 °F		
		2	0x02	Ni100, -60…250 °C, -76…482 °F		
		3	0x03	Ni100, -60…150 °C, -76…302 °F		
		4	0x04	Pt200, -200…850 °C, -328…1562 °F		
		5	0x05	Pt200, -200…150 °C, -328…302 °F		
		6	0x06	Pt500, -200…850 °C, -328…1562 °F		
		7	0x07	Pt500, -200…150 °C, -328…302 °F		
		8	0x08	Pt1000, -200…850 °C, -328…1562 °F		
		9	0x09	Pt1000, -200…150 °C, -328…302 °F		
		10	0x0A	Ni1000, -60…250 °C, -76…482 °F		
		11	0x0B	Ni1000, -60…150 °C, -76…302 °F		

Parameter name		Value Dec.	Value Hex.	Meaning	Description
RTDWT	RTD wiring type	**0**	**0x00**	**2-wire**	
		1	0x01	3-wire	
		2	0x02	4-wire	
RWT	Resistance wiring type	**0**	**0x00**	**2-wire**	
		1	0x01	3-wire	
		2	0x02	4-wire	
SUP	Mains suppression	**0**	**0x00**	**Off**	
		1	0x01	**50 Hz**	
		2	0x02	60 Hz	
TCCCJ	Thermocouple cold junction configuration	**0**	**0x00**	**Pt1000**	External Pt100 at the respective channel serves as cold junction.
		1	0x01	Pt100	External Pt100 at the respective channel serves as cold junction.
		2	0x02	Cold junction of channel 0	External cold junction of channel 0 serves as could junction for all channels.
		3	0x03	none	No cold junction compensation, compensation is done against 23 °C.
TCT	Thermocouple type	**0**	**0x00**	**Type K, -270…1370 °C, -454…2498 °F**	
		1	0x01	Type B, 100…1820 °C, 212…3308 °F	
		2	0x02	Type E, -270…1000 °C, -454…1832 °F	
		3	0x03	Type J, -210…1200 °C, -346…2192 °F	
		4	0x04	Type N, -270…1300 °C, -454…2372 °F	
		5	0x05	Type R, -50…1768 °C, -58…3214 °F	
		6	0x06	Type S, -50…1768 °C, -58…3214 °F	
		7	0x07	Type T, -270…400 °C, -454…752 °F	
		8	0x08	Type C, 0…2315 °C, 32…4199 °F	
		9	0x09	Type G, 0…2315 °C, 32…4199 °F	
TMU	Temperature unit	**0**	**0x00**	**Celsius**	
		1	0x01	Fahrenheit	
UMR	Voltage range	**0**	**0x00**	**-10…10 V**	
		1	0x01	0…10 V	
		2	0x02	2…10 V	
		3	0x03	0…5 V	
		4	0x04	1…5 V	
		5	0x05	-1…1 V	
		6	0x06	-500…500 mV	
		7	0x07	-100…100 mV	
		8	0x08	-50…50 mV	
VWT	Voltage operation mode	**0**	**0x00**	**Differential**	Differential input
		1	0x01	Single ended	Connection of sensors with common ground [▸ 37]
		2	0x02	differential without ground	Differential input

Parameters – TBEN-S2-4AO

Parameter name		Value		Meaning	Description
		Dec.	Hex.		
DCH	Deactivate channel	**0**	**0x00**	**No**	Channel active
		1	0x01	Yes	Channel inactve
DDI	Deactivate diagnostics	**0**	**0x00**	**No**	Diagnostics active
		1	0x01	Yes	Diagnostics inactive
DRE	Data representation	**0**	**0x00**	**Standard**	
		1	0x01	NE43	
		2	0x02	Extended range	
FFB	Output on fieldbus error	**0**	**0x00**	**default value**	The outputs are set to this defined value in case of a fieldbus error.
		1	0x01	Substitute value	
		2	0x02	Current value	
IRA	Current range	**0**	**0x00**	**0…20 mA**	Set the measurement range of the current output.
		1	0x01	4…20 mA	
OPM	Operation mode	**0**	**0x00**	**Voltage**	The output is defined as a voltage output.
		1	0x01	Current	The output is defined as a current output.
ORM	Output recovery mode	**0**	**0x00**	**Automatic**	The output switches-on autmatically as soon as the overload has been eliminated.
		1	0x01	Manual	The output has to be switched-on manually as soon as the overload has been eliminated.
SVAL	Substitute value				Defining the substitute value for the analog output.
URA	Voltage range	**0**	**0x00**	**-10…10 V**	Set the measurement range of the voltage output.
		1	0x01	0…10 V	
		2	0x02	2…10 V	
		3	0x03	0…5 V	
		4	0x04	1…5 V	

8.2 PROFINET parameters

For PROFINET, a distinction must be made in the parameters between the PROFINET device parameters and the parameters of the I/O channels Parameters .

PROFINET device parameters

Default values are shown in **bold**.

Parameter name	Value	Meaning	Description
Output behavior at communication loss	**0**	**set to 0**	The device switches the outputs to "0". No error information sent.
	1	Hold current value	The device maintains the actual output data.
Deactivate all diagnostics	**0**	**No**	Diagnostic and alarm messages are generated.
	1	yes	Diagnostic and alarm messages are suppressed.
Deactivate load voltage diagnostics	**0**	**No**	The monitoring of voltage V2 is activated.
	1	yes	The sending of the diagnosis is deactivated.
Deactivate I/O-ASSISTANT Force Mode	**0**	**No**	Explicit deactivation of the Ethernet protocols or web server
	1	yes	
Deactivate EtherNet/IP	**0**	**No**	
	1	yes	
Deactivate Modbus TCP	**0**	**No**	
	1	yes	
Deactivate WEB server	**0**	**No**	
	1	yes	

8.3 Parameters – overview

9 Operating

9.1 Process input data – overview

9.1.1 Process input data – digital modules

TBEN-S1-8DIP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagnostics																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	-	-	VERR V1 Ch4-7	VERR V1 Ch0-3
Latch input																
0x0002	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
Module status																
0x0007	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DIP-D

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagnostics																
0x0001	-	-	-	-	-	-	-	-	VERR V1 C7	VERR V1 C6	VERR V1 C5	VERR V1 C4	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
Latch input																
0x0002	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
Module status																
0x0007	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S2-8DIP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	DI7 C7P4	DI6 C6P4	DI5 C5P4	DI4 C4P4	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagnostics																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
Latch input																
0x0002	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
Module status																
0x0007	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DOP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Diagnostics																
0x0000	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch4-7	VERR V2 Ch0-3
PWM Diagnostics Ch3																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM Diagnostics Ch7																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	
Module status																
0x0003	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-4DIP-4DOP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	DI3 C3P4	DI2 C2P4	DI1 C1P4	DI0 C0P4
Diagnostics																
0x0001	-	-	-	-	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V1 Ch4-7	VERR V1 Ch0-3
Latch input																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DI3	DI2	DI1	DI0
Counter Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
PWM Diagnostics Ch7																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	
Module status																
0x0008	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-4DXP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Diagnostics																
0x0001	-	-	-	-	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch2-3	VERR V1 Ch0-1
Latch input																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
Counter Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
PWM Diagnostics Ch3																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
Module status																
0x0008	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S1-8DXP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	DX7 C7P4	DX6 C6P4	DX5 C5P4	DX4 C4P4	DX3 C3P4	DX2 C2P4	DX1 C1P4	DX0 C0P4
Diagnostics																
0x0001	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	-	-	VERR V2 Ch4-7	VERR V1 Ch0-3
Latch input																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
Counter Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-															
PWM Diagnostics Ch3																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM Diagnostics Ch7																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	
Module status																
0x0009	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S2-8DXP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inputs																
0x0000	-	-	-	-	-	-	-	-	DX7 C3P2	DX6 C3P4	DX5 C2P2	DX4 C2P4	DX3 C1P2	DX2 C1P4	DX1 C0P2	DX0 C0P4
Diagnostics																
0x0001	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0	-	-	-	-	VERR V2 P1 C3	VERR V2 P1 C2	VERR V1 P1 C1	VERR V1 P1 C0
Latch input																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
Counter Ch0																
0x0003	Counter value LSB															
0x0004	Counter value MSB															
Frequency Ch0																
0x0005	Frequency MSB								Frequency LSB							
Status																
0x0006	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
PWM Diagnostics Ch3																
0x0007	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO3	
PWM Diagnostics Ch7																
0x0008	-	-	-	-	-	-	-	-	-	-	-	-	-	-	PWM OUT ERR DO7	
Module status																
0x0009	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

Meaning of the process data bits

Name	Meaning	
I/O data		
C…	Connector	
DI…	Digital input	
DO…	Digital input	
DX…	DXP channel	
DX…	Latch input	The input values ind the input bits are hold as long as they are acknowledged by the PLC.
Kx	Channel	
Px	Pin	
Counter value	Counter value of the 32 bit counter	
Frequency	Frequency for the 32-bit counter	Example: Value 50 (dec.) = 50 Hz
Diagnostics		

Name	Meaning
VERR V1 Ch…	Overcurrent VAUX1 at the channel/channels
VERR V1 C…	Overcurrent VAUX1 at connector
VERR V2 Ch…	Overcurrent VAUX2 at the channel/channels
ERRx	Overcurrent at output
PWM Diagnostics	
PWM OUT ERR DO…	Overcurrent at the PWM output
Module status	
COM	Device-internal communication disturbed
DiagWarn	Diagnostic message at the device
FCE	Force Mode activated
V1	System power supply too low (< 18 VDC).
V2	System power supply too low (< 18 VDC).

9.1.2 Process input data – analog modules

TBEN-S2-4AI

Word no.	**Bit no.**															
	15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**
Inputs																
	MSB															**LSB**
0x0000	Analog value channel 0															
0x0001	Analog value channel 1															
0x0002	Analog value channel 2															
0x0003	Analog value channel 3															
Diagnostics																
0x0004	Channel 1								Channel 0							
	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTDSC	CJE	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTDSC	CJE
0x0005	Channel 3								Channel 2							
	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTDSC	CJE	LLVU	UFL	OFL	WBR	V1 AOL	ULVE	RTDSC	CJE
Module status																
0x0006	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

TBEN-S2-4AO

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Diagnostics																
0x0000	Channel 1								Channel 0							
	-	-	-	-	-	-	WBR	OVL	-	-	-	-	-	-	WBR	OVL
0x0001	Channel 3								Channel 2							
	-	-	-	-	-	-	WBR	OVL	-	-	-	-	-	-	WBR	OVL
Module status																
0x0002	-	FCE	-	-	-	COM	V1	-	-	-	-	-	-	-	ARGEE	DIAG

Meaning of the process data bits

Name	Meaning	
CJE	Cold junction error	The measured temperature exceeds the nominal range for more than 1 % or wrong configuration of the cold junction compensation. In case of an error, a cold junction temperature of 25 °C is assumed.
LLVU	Lower limit value underrun	Current/voltage/resistance: The measured value lies below the Nominal range (thresholds, see [▶ 229]). Thermocouple/RTD: The measured temperature lies more than 1 % below the nominal range.
OFL	Overflow	Current/voltage: The measured value lies far above the nominal range. Resistance/thermocouple/RTD: Not valid
OVL	Overload/overcurrent	Overload/short circuit at the output (voltage only), [▶ 229]
RTDSC	overcurrent	RTD-resistance < 5 Ω
UFL	Underflow	Current/voltage: The measured value lies far below the Nominal range (thresholds, see [▶ 229]). Resistance/thermocouple/RTD: Not valid
ULVE	Upper limit value exceeded	Current/voltage/resistance: The measured value lies above the Nominal range, thresholds, see [▶ 229]. Thermocouple/RTD: The measured temperature lies more than 1 % above the nominal range.
V1AOL	Overcurrent VAUX1	The sensor supply is not within the permissible range.

Name	Meaning	
WBR	Wire break	TBEN-S2-4AI: Only valid for the following measurement ranges in operation mode voltage or current ([▶ 229]): ■ Voltage: 1…5 V, 2…10 V ■ Current: 4…20 mA In the operation modes thermocouple/RTD, this diagnosis means: no thermocouple or Pt/Ni-sensor connected.
		TBEN-S2-4AO: Wire break at the output.
Module status		
COM	Device-internal communication disturbed	
DiagWarn	Diagnostic message at the device	
FCE	Force Mode activated	
V1	System power supply too low (< 18 VDC).	
V2	V2 too low (< 18 VDC).	

9.2 Process output data – overview

9.2.1 Process output data – digital modules

TBEN-S1-8DIP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Latch reset																
0x0001	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset

TBEN-S1-8DIP-D

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Latch reset																
0x0001	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset

TBEN-S2-8DIP-D

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Latch reset																
0x0001	-	-	-	-	-	-	-	-	DI7	DI6	DI5	DI4	DI3	DI2	DI1	DI0
Counter reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset

TBEN-S1-8DOP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Outputs																
0x0001	-	-	-	-	-	-	-	-	DO7	DO6	DO5	DO4	DO3	DO2	DO1	DO0
PWM ch3																
0x0002	-	-	-	-	-	-	-	-	Duty Cycle							
PWM ch7																
0x0003	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-4DIP-4DOP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Outputs																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	DO7	DO6	DO5	DO4
Latch reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DI3	DI2	DI1	DI0
Counter reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset
PWM ch7																
0x0004	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-4DXP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Outputs																
0x0001	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
Latch reset																
0x0002	-	-	-	-	-	-	-	-	-	-	-	-	DX3	DX2	DX1	DX0
Counter reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset
PWM Ch3																
0x0004	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S1-8DXP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Outputs																
0x0001	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
Latch reset																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
Counter reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset
PWM ch3																
0x0004	-	-	-	-	-	-	-	-	Duty Cycle							
PWM ch7																
0x0005	-	-	-	-	-	-	-	-	Duty Cycle							

TBEN-S2-8DXP

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Outputs																
0x0001	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
Latch reset																
0x0002	-	-	-	-	-	-	-	-	DX7	DX6	DX5	DX4	DX3	DX2	DX1	DX0
Counter reset																
0x0003	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	CNT_ Reset
PWM ch3																
0x0004	-	-	-	-	-	-	-	-	Duty Cycle							
PWM ch7																
0x0005	-	-	-	-	-	-	-	-	Duty Cycle							
VAUX Control																
0x0006	-	-	-	-	-	-	-	-	-	-	-	-	VAUX2 P1 C3	VAUX2 P1 C2	VAUX1 P1 C1	VAUX1 P1 C0

Meaning of the process data bits

Name	Meaning
I/O data	
DI…	Latch reset bit for input channels
DO…	Output bit
DX…	Output bit of DXP channel
DX…	Latch reset bit for DXP channels
CNT reset	Counter reset bit Sets the counter value back to 0 and starts a new count operation.
P1	Pin 1
Duty Cycle	Mark-to-space ratio: 10…90 %
VAUX1/VAUX2 P1 C…	Switches the sensor/actuator supply at pin 1 of the connector.

9.2.2 Process output data – analog modules

TBEN-S2-4AO

Word no.	Bit no.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Control																
0x0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Outputs																
0x0001	Analog value channel 0															
0x0002	Analog value channel 1															
0x0003	Analog value channel 2															
0x0004	Analog value channel 3															

9.3 LED displays

The device is provided with the following LEDs:

- Power supply voltage
- Group and bus error
- Status
- Diagnostics

9.3.1 Module LEDs TBEN-S

LED PWR	Meaning
Off	No voltage connected or under voltage at V1
Green	Voltage on V1 or respectively V1 and V2 OK
Red	No voltage connected or under voltage at V2 (only valid for devices with V2 power supply)

BUS LED	Meaning
Off	No voltage present
Green	Connection to a master active
Flashing 3 × green in 2 s	ARGEE active
Green flashing (1 Hz)	Device is operational
Red	IP address conflict, Restore mode active, F_Reset active or Modbus connection timeout
Red flashing	Wink command active
Red/green (1 Hz)	Autonegotiation and/or wait for IP address allocation in DHCP or BootIP mode

ERR LED	Meaning
Off	No voltage present
Green	No diagnostics
Red	Diagnostics present

ETH1 and ETH2 LEDs	Meaning
Off	No Ethernet connection
Green	Ethernet connection established, 100 Mbit/s
Green flashing	Data transfer, 100 Mbit/s
Yellow	Ethernet connection established, 10 Mbit/s
Yellow flashing	Data transfer, 10 Mbit/s

LED C7 or C4 (2nd LED)	Meaning
White flashing	Wink command active: helps to localize the module

9.3.2 Channel LEDs – digital modules

Channel-LEDs	Meaning (input)	Meaning (output)
Off	No input signal	Output inactive
Green	Input signal active	Output active
Red	–	Actuator overload
Red flashing (1 Hz)	Overload of the sensor supply In devices with group diagnostics, all connector LEDs of the supply group flash simultaneously in case of an error.	

9.3.3 Channel LEDs – analog modules

Channel LEDs	Meaning (input)	Meaning (output)
Off	No input signal	Output inactive
Green	Input signal present	Output active
Red	Voltage/current: Overcurrent VAUX1 RTD: overcurrent thermocouple: cold junction error	Actuator overload
Red flashing (4 Hz)	Measurement range: Overflow/underflow upper limit value exceeded/lower limit value underrun	Voltage: overflow wire break
Red flashing (0.5 Hz)	Wire break	-

9.4 Evaluating diagnostic data

The diagnostics of the TBEN-S devices are mapped into the process data Process Input Data – Overview.

9.4.1 PROFINET diagnostics

TBEN-S1-8DIP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	-	-	VERR V1 ch4-7	VERR V1 ch0-3
n + 1	-	-	-	-	-	-	-	-

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)		**PROFINET diagnostics**	
Diagnostics		**Error code**	**Channel**
Undervoltage			
V1		0x0002	0
V2		0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX1 at channel 0…3	
VERR V1 K 0-3	C0	0x0130	0
	C1		
	C2		
	C3		
Overcurrent supply group		Overcurrent supply VAUX1 at channel 4…7	
VERR V1 K 4-7	C4	0x0131	0
	C5		
	C6		
	C7		

TBEN-S2-8DIP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	VERR V1 C3	VERR V1 C2	VERR V1 C1	VERR V1 C0
n + 1	-	-	-	-	-	-	-	-

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	**PROFINET diagnostics**	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX1 at channel 0…3	
VERR V1 C0	C0P1	0x01D0	0
VERR V1 C1	C1P1	0x01D1	0
VERR V1 C2	C2P1	0x01D2	0
VERR V1 C3	C3P1	0x01D3	0

TBEN-S1-8DIP-D – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	VERR V1 ch7	VERR V1 ch6	VERR V1 ch5	VERR V1 ch4	VERR V1 ch3	VERR V1 ch2	VERR V1 ch1	VERR V1 ch0
n + 1	-	-	-	-	-	-	-	-

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	**PROFINET diagnostics**	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX1 at channel …	
VERR V1 ch0	C0	0x0100	0
VERR V1 ch1	C1	0x0101	0
VERR V1 ch2	C2	0x0102	0
VERR V1 ch3	C3	0x0103	0
VERR V1 ch4	C4	0x0104	0
VERR V1 ch5	C5	0x0105	0
VERR V1 ch6	C6	0x0106	0
VERR V1 ch7	C7	0x0107	0

TBEN-S1-8DOP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	-	-	VERR V2 ch4-7	VERR V2 ch0-3
n + 1	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	**PROFINET diagnostics**	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX2 at channel 0…3	
VERR V2 ch0-3	C0	0x0140	0
	C1		
	C2		
	C3		
Overcurrent supply group		Overcurrent supply VAUX2 at channel 4…7	
VERR V2 ch4-7	C4	0x0141	0
	C5		
	C6		
	C7		
Overcurrent at output		Overcurrent	
ERR0	C0	0x0001	0
ERR1	C1	0x0001	1
ERR2	C2	0x0001	2
ERR3	C3	0x0001	3
ERR4	C4	0x0001	4
ERR5	C5	0x0001	5
ERR6	C6	0x0001	6
ERR7	C7	0x0001	7

TBEN-S1-4DIP-4DOP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	-	-	VERR V2 ch4-7	VERR V1 ch0-3
n + 1	-	-	-	-	ERR7	ERR6	ERR5	ERR4

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	PROFINET diagnostics	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		PROFINET diagnostics	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX1 at channel 0…3	
VERR V1 ch0-3	C0	0x0120	0
	C1		
	C2		
	C3		
Overcurrent supply group		Overcurrent supply VAUX2 at channel 4…7	
VERR V2 ch4-7	C4	0x0121	0
	C5		
	C6		
	C7		
Overcurrent at output		Overcurrent	
ERR4	C4	0x0001	4
ERR5	C5	0x0001	5
ERR6	C6	0x0001	6
ERR7	C7	0x0001	7

TBEN-S1-4DXP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	-	-	VERR V2 Ch2-3	VERR V1 K0-1
n + 1	-	-	-	-	ERR3	ERR2	ERR1	ERR0

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	PROFINET diagnostics	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		PROFINET diagnostics	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX1 at Channel 0…1	
VERR V1 K0-1	C0	0x0120	0
	C1		
Overcurrent supply group		Overcurrent supply VAUX2 at Channel 2…3	
VERR V2 Ch2-3	C4	0x0161	0
	C5		
	C6		
	C7		
Overcurrent at output		Overcurrent	
ERR0	C0	0x0001	0
ERR1	C1	0x0001	1
ERR2	C2	0x0001	2
ERR3	C3	0x0001	3

TBEN-S1-8DXP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	-	-	VERR V2 ch4-7	VERR V1 ch0-3
n + 1	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)		**PROFINET diagnostics**	
Diagnostics		**Error code**	**Channel**
Undervoltage			
V1		0x0002	0
V2		0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply group		Overcurrent supply VAUX1 at channel 0…3	
VERR V1 Ch 0-3	C0	0x0120	0
	C1		
	C2		
	C3		
Overcurrent supply group		Overcurrent supply VAUX2 at channel 4…7	
VERR V2 Ch 4-7	C4	0x0121	0
	C5		
	C6		
	C7		
Short-circuit at output		Overcurrent	
ERR0	C0	0x0001	0
ERR1	C1	0x0001	1
ERR2	C2	0x0001	2
ERR3	C3	0x0001	3
ERR4	C4	0x0001	4
ERR5	C5	0x0001	5
ERR6	C6	0x0001	6
ERR7	C7	0x0001	7

TBEN-S2-8DXP – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	-	-	-	-	VERR V2 P1 ch6-7	VERR V2 P1 ch4-5	VERR V1 P1 ch2-3	VERR V1 P1 ch0-1
n + 1	ERR7	ERR6	ERR5	ERR4	ERR3	ERR2	ERR1	ERR0

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	PROFINET diagnostics	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		PROFINET diagnostics	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overcurrent supply VAUX1, pin 1		Overcurrent VAUX1 Pin1 C… (Chy/z)	
VERR V1 P1 C0 Ch 0-1	C0P1	0x01D0	0
VERR V1 P1 C1 Ch 2-3	C1P1	0x01D1	0
Overcurrent supply VAUX2, pin 1		Overcurrent VAUX2 Pin1 C… (Chy/z)	
VERR V2 P1 C2 Ch 4-5	C2P1	0x0422	0
VERR V2 P1 C3 Ch 6-7	C3P1	0x0423	
Short-circuit at output		Overcurrent	
ERR0	C0	0x0001	0
ERR1	C1	0x0001	1
ERR2	C2	0x0001	2
ERR3	C3	0x0001	3
ERR4	C4	0x0001	4
ERR5	C5	0x0001	5
ERR6	C6	0x0001	6
ERR7	C7	0x0001	7

TBEN-S2-4AI – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Channel 0								
n	LLVU	UFL	OFL	WBR	V1AOL	ULVE	RTDSC	CJE
Channel 1								
n + 1	LLVU	UFL	OFL	WBR	V1AOL	ULVE	RTDSC	CJE
Channel 2								
n + 2	LLVU	UFL	OFL	WBR	V1AOL	ULVE	RTDSC	CJE
Channel 3								
n + 3	LLVU	UFL	OFL	WBR	V1AOL	ULVE	RTDSC	CJE

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	**PROFINET diagnostics**	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Wire break (WBR)	C0…C3	0x0004	0…3
Overcurrent (RTD only), (RTDSC)		0x0004	
Overcurrent supply VAUX1 (V1AOL)		0x0004	
Upper limit value exceeded (ULVE)		0x0007	
Overflow (OFL)		0x0007	
Lower limit value underrun (LLVU)		0x0008	
Underflow (UFL)		0x0008	
Cold junction error (CJE)		0x0019	

TBEN-S2-4AO – diagnostic data mapping

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Channel 0								
n	-	-	-	WBR	-	-	WBR	OVL
Channel 1								
n + 1	-	-	-	WBR	-	-	WBR	OVL
Channel 2								
n + 2	-	-	-	WBR	-	-	WBR	OVL
Channel 3								
n + 3	-	-	-	WBR	-	-	WBR	OVL

PROFINET error codes

Station diagnostics (slot 0 according to configuration tool)	**PROFINET diagnostics**	
Diagnostics	**Error code**	**Channel**
Undervoltage		
V1	0x0002	0
V2	0x0002	1

I/O diagnostics (slot 1)		**PROFINET diagnostics**	
Diagnostics	**Connector/pin**	**Error code**	**Channel**
Overload (OVL)	C0…C3	0x0004	0…3
Wire break (WBR)		0x0006	

9.5 Measurement value representation of analog modules

9.5.1 Measurement value representation – TBEN-S2-4AI

Voltage – standard

-10…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.052 × 10^{-4}) V		
> 10.1000 V	"Upper limit value exceeded" ON	32767	7FFF
< 10.0500 V	"Upper limit value exceeded" OFF	32767	7FFF
10.0000 V	Nominal range	32767	7FFF
9.991 V		32736	7FE0
0.005 V		16	0010
0 V		0	0000
-0.0050 V		-16	FFF0
-9.996 V		-32752	8010
-10.0005 V		-32767	8001
-10.0008 V		-32768	8000
> -10.0500 V	"Lower limit value underrun" OFF	-32768	8000
> -10.1000 V	"Lower limit value underrun" ON	-32768	8000

0…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.052 × 10^{-4}) V		
> 10.1000 V	"Upper limit value exceeded" ON	32767	7FFF
< 10.0500 V	"Upper limit value exceeded" OFF	32767	7FFF
10.0000 V	Nominal range	32767	7FFF
9.991 V		32736	7FE0
0.005 V		16	0010
0 V		0	0000
> -0.0500 V	"Lower limit value underrun" OFF	0	0000
> -0.10000 V	"Lower limit value underrun" ON	0	0000

2…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
Voltage value U_M = (dec. value × 2.441 × 10^{-4}) V+ 2 V			
> 10.1000 V	"Upper limit value exceeded" ON	32767	7FFF
< 10.0500 V	"Upper limit value exceeded" OFF	32767	7FFF
10.0000 V	Nominal range	32767	7FFF
9.999 V		32766	7FFE
9.992 V		32736	7FE0
2.0004 V		16	0010
2.0 V		0	0000
> 1.95 V	"Lower limit value underrun" OFF	0	0000
< 1.90 V	"Lower limit value underrun" ON	0	0000
> 1.5 V	"Wire break" OFF	0	0000
< 1.45 V	"Wire break" ON	0	0000

0…5 V	Diagnostics	Decimal	Hexadecimal (two's complement)
Voltage value U_M = (dec. value × 1.526 × 10^{-4}) V			
> 5.1000 V	"Upper limit value exceeded" ON	32767	7FFF
< 5.0500 V	"Upper limit value exceeded" OFF	32767	7FFF
5.0000 V	Nominal range	32767	7FFF
4.999 V		32766	7FFE
4.995 V		32736	7FE0
0.002 V		16	0010
0 V		0	0000
> -0.05 V	"Lower limit value underrun" OFF	0	0000
< -0.10 V	"Lower limit value underrun" ON	0	0000

1…5 V	Diagnostics	Decimal	Hexadecimal (two's complement)
Voltage value U_M = (dec. value × 1.2207 × 10^{-4}) V+ 1 V			
> 5.1000 V	"Upper limit value exceeded" ON	32767	7FFF
< 5.0500 V	"Upper limit value exceeded" OFF	32767	7FFF
5.0000 V	Nominal range	32767	7FFF
4.999 V		32766	7FFE
4.996 V		32736	7FE0
1.002 V		16	0010
1.000 V		0	0000
> 0.95 V	"Lower limit value underrun" OFF	0	0000
< 0.90 V	"Lower limit value underrun" ON	0	0000
> 0.75 V	"Wire break" OFF	0	0000
< 0.70 V	"Wire break" EIN	0	0000

-1…1 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.05185 × 10^{-5}) V		
> 1.0100 V	"Upper limit value exceeded" ON	32767	7FFF
< 1.0050 V	"Upper limit value exceeded" OFF	32767	7FFF
1.0000 V	Nominal range	32767	7FFF
0.999 V		32766	7FFE
0.996 V		32736	7FE0
0 V		16	0010
0 V		1	0001
0 V		0	0000
0 V		-1	FFFF
0 V		-16	FFF0
-0.909 V		-32752	8010
-0.999 V		-32767	8001
-1.000 V		-32768	8000
> -1.0050 V	"Lower limit value underrun" OFF	-32768	8000
< -1.0100 V	"Lower limit value underrun" ON	-32768	8000

-500…500 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 1.5259 × 10^{-2}) mV		
> 505.0 mV	"Upper limit value exceeded" ON	32767	7FFF
< 502.5 mV	"Upper limit value exceeded" OFF	32767	7FFF
500.000 mV	Nominal range	32767	7FFF
499.95 mV		32766	7FFE
499.527 mV		32736	7FE0
244.244 mV		16	0010
0.015 mV		1	0001
0 mV		0	0000
-0.015 mV		-1	FFFF
-244.244 mV		-16	FFF0
-499.771 mV		-32752	8010
-499.999 mV		-32767	8001
-500.000 mV		-32768	8000
> -502.5 mV	"Lower limit value underrun" OFF	-32768	8000
< -505.0 mV	"Lower limit value underrun" ON	-32768	8000

-100…100 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.0519 × 10^{-3}) V		
> 101.000 mV	"Upper limit value exceeded" ON	32767	7FFF
< 100.500 mV	"Upper limit value exceeded" OFF	32767	7FFF
100.00 mV	Nominal range	32767	7FFF
99.999 mV		32766	7FFE
99.905 mV		32736	7FE0
0.049 mV		16	0010
0.003 mV		1	0001
0 mV		0	0000
-0.003 mV		-1	FFFF
-0.049 mV		-16	FFF0
-99.954 mV		-32752	8010
-99.999 mV		-32767	8001
-100.000 mV		-32768	8000
> -100.500 mV	"Lower limit value underrun" OFF	-32768	8000
< -101.000 mV	"Lower limit value underrun" ON	-32768	8000

-50…50 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 1.526 × 10^{-3}) V		
> 50.50 mV	"Upper limit value exceeded" ON	32767	7FFF
< 50.30 mV	"Upper limit value exceeded" OFF	32767	7FFF
50.00 mV	Nominal range	32767	7FFF
49.999 mV		32766	7FFE
49.953 mV		32736	7FE0
0.024 mV		16	0010
0.002 mV		1	0001
0 mV		0	0000
-0.002 mV		-1	FFFF
-0.024 mV		-16	FFF0
-49.977 mV		-32752	8010
-49.997 mV		-32767	8001
-50.000 mV		-32768	8000
> -50.30 mV	"Lower limit value underrun" OFF	-32768	8000
< -50.50 mV	"Lower limit value underrun" ON	-32768	8000

Voltage – extended range (Siemens format)

-10…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.617 × 10^{-4}) V		
> 11.76 V	"Upper limit value exceeded" ON	> 32513	> 7F01
< 11.60 V	"Upper limit value exceeded" OFF	< 32071	< 7D47
11.851 V	Nominal range	32767	7FFF
11.759 V		32512	7F00
10 V		27648	6C00
5.926 V		16384	4000
0 V		0	0000
-1.76 V		-4865	ECFF
-2.500 V		-6912	E500
-5.926 V		-16384	C000
-10 V		-27648	9400
-11.759 V		-32512	8100
-11.851 V		-32768	8000
> -11.60 V	"Lower limit value underrun" OFF	> -32071	> 82B9
> -11.76 V	"Lower limit value underrun" ON	< -32513	< 80FF

0…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.617 × 10^{-4}) V		
> 11.76 V	"Upper limit value exceeded" ON	> 32513	> 7F01
< 11.60 V	"Upper limit value exceeded" OFF	< 32071	< 7D47
11.851 V	Nominal range	32767	7FFF
11.759 V		32512	7F00
10 V		27648	6C00
5.926 V		16384	4000
0 V		0	0000
> -0.05 V	"Lower limit value underrun" OFF	> -138	> FF76
< -0.10 V	"Lower limit value underrun" ON	< -276	< FEEC

2…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
Voltage value U_M = (dec. value × 2.8934 × 10^{-4}) V+ 2 V			
> 11.41 V	"Upper limit value exceeded" ON	> 32527	> 7F0F
< 11.28 V	"Upper limit value exceeded" OFF	< 32077	< 7D4D
11.481 V	Nominal range	32767	7FFF
11.407 V		32512	7F00
10 V		27653	6C05
6.741 V		16384	4000
2.000 V		0	0000
> 0.676 V	"Lower limit value underrun" and "wire break" OFF	0	0000
< 0.592 V	"Lower limit value underrun" and "wire break" ON	0	0000

0…5 V	Diagnostics	Decimal	Hexadecimal (two's complement)
Voltage value U_M = (dec. value × 1.808 × 10^{-4}) V			
> 5.88 V	"Upper limit value exceeded" ON	> 32522	> 7F0A
< 5.80 V	"Upper limit value exceeded" OFF	< 32080	< 7D50
5.926 V	Nominal range	32767	7FFF
5.880 V		32512	7F00
5 V		27655	6C07
2.963 V		16384	4000
0 V		0	0000
> -0.05 V	"Lower limit value underrun" OFF	> -277	> FEEB
< -0.10 V	"Lower limit value underrun" ON	< 553	< FDD7

1…5 V	Diagnostics	Decimal	Hexadecimal (two's complement)
Voltage value U_M = (dec. value × 1.4468 × 10^{-4})+ 1 V			
> 5.70 V	"Upper limit value exceeded" ON	> 32485	> 7EE5
< 5.64 V	"Upper limit value exceeded" OFF	< 32071	< 7D47
5.741 V	Nominal range	32767	7FFF
5.704 V		32512	7F00
5 V		27647	6BFF
3.371 V		16384	4000
1.000 V		0	0000
0 V		-6912	E500
> -0.324 V	"Lower limit value underrun" and "wire break" OFF	> -4672	> EDC0
< -0.296 V	"Lower limit value underrun" and "wire break" ON	< -4865	< ECFF

-1…1 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.6164 × 10^{-5}) V		
> 1.176 V	"Upper limit value exceeded" ON	> 32519	7F07
< 1.160 V	"Upper limit value exceeded" OFF	< 32076	> 7DC4
1.185 V	Nominal range	32767	7FFF
1.175 V		32512	7F00
1 V		27651	6C03
0.593 V		16384	4000
0 V		0	0000
-0.5930 V		-16384	C000
-1 V		-27651	93FD
-1.175 V		-32512	8100
-1.185 V		-32768	8000
> -1.160 V	"Lower limit value underrun" OFF	> -32076	> 82B4
< -1.176 V	"Lower limit value underrun" ON	> -32519	> 80F9

-500…500 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 1.8085 × 10^{-2}) mV		
> 588 mV	"Upper limit value exceeded" ON	> 32513	> 7F01
< 580 mV	"Upper limit value exceeded" OFF	< 32071	> 7D47
592.6 mV	Nominal range	32767	7FFF
587.9 mV		32512	7F00
500.0 mV		27647	6BFF
296.3 mV		16384	4000
0 mV		0	0000
-296.3 mV		-16384	C000
-500.0 mV		-27647	9401
-587.9 mV		-32512	8100
-592.6 mV		-32768	8000
< -580 mV	"Lower limit value underrun" OFF	> -32071	> 82B9
> -588 mV	"Lower limit value underrun" ON	< -32513	> 80FF

-100…100 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 3.6164 × 10^{-3}) mV		
> 117.6 mV	"Upper limit value exceeded" ON	> 32519	> 7F07
< 116.0 mV	"Upper limit value exceeded" OFF	< 32076	> 7D47
118.5 mV	Nominal range	32767	7FFF
117.5 mV		32512	7F00
100.0 mV		27652	6C04
59.3 mV		16384	4000
0 mV		0	0000
-59.3 mV		-16384	C000
-100.0 mV		-27652	93FC
-117.5 mV		-32512	8100
-118.5 mV		-32768	8000
> -116.0 mV	"Lower limit value underrun" OFF	> -32076	> 82B4
< -117.6 mV	"Lower limit value underrun" ON	< 32519	> 80F9

-50…50 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 1.8097 × 10^{-3}) mV		
> 58.8 mV	"Upper limit value exceeded" ON	> 32492	> 7EEC
< 58.0 mV	"Upper limit value exceeded" OFF	< 32050	> 7D32
59.3 mV	Nominal range	32767	7FFF
58.8 mV		32512	7F00
50 mV		27629	6BED
29.6 mV		16384	4000
0 mV		0	0000
-29.6 mV		-16384	C000
-50.0 mV		-27629	9413
-58.8 mV		-32512	8100
-59.3 mV		-32768	8000
> -58.0 mV	"Lower limit value underrun" OFF	> -32050	> 82CE
< -58.8 mV	"Lower limit value underrun" ON	< -32492	< 8114

Voltage – NE 43

-10…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-3}) V		
> 11 V	"Overload/overcurrent" ON	> 11000	> 2AF8
11.00 V		11000	2AF8
< 10.95 V	"Overload/overcurrent" OFF	< 10950	> 2AC6
> 10.50 V	"Upper limit value exceeded" ON	> 10500	> 2904
< 10.25 V	"Upper limit value exceeded" OFF	< 10250	< 280 A
10.00 V	Nominal range	10000	2710
5.00 V		5000	1388
2.00 V		2000	07D0
0 V		0	0000
-2.00 V		-2000	F830
-5.00 V		-5000	EC78
-10.00 V		-10000	D8F0
> -10.25 V	"Lower limit value underrun" OFF	> -10250	> D7F6
< -10.50 V	"Lower limit value underrun" ON	< -10500	> D6FC
> -10.95 V	"Underflow" OFF	> -10950	> D53A
-11.00 V		-11000	D508
< -11.00 V	"Underflow" ON	< 11000	> D508

0…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-3}) V		
> 11 V	"Overload/overcurrent" ON	> 11000	> 2AF8
11.00 V		11000	2AF8
< 10.95 V	"Overload/overcurrent" OFF	< 10950	> 2AC6
> 10.50 V	"Upper limit value exceeded" ON	> 10500	> 2904
< 10.25 V	"Upper limit value exceeded" OFF	< 10250	< 280 A
10.00 V	Nominal range	10000	2710
5.00 V		5000	1388
2.00 V		2000	07D0
0 V		0	0000
> -0.03 V	"Lower limit value underrun" and "underflow" OFF	> -30	> FFE2
< -0.05 V	"Lower limit value underrun" and "underflow" ON	< -50	< FFCE

2…10 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-3}) V		
> 11 V	"Overload/overcurrent" ON	> 11000	> 2AF8
11.00 V		11000	2AF8
< 10.95 V	"Overload/overcurrent" OFF	< 10950	> 2AC6
> 10.50 V	"Upper limit value exceeded" ON	> 10500	> 2904
< 10.25 V	"Upper limit value exceeded" OFF	< 10250	< 280 A
10.00 V	Nominal range	10000	2710
5.00 V		5000	1388
2.00 V		2000	07D0
0 V		0	0000
> -0.03 V	"Lower limit value underrun" and "underflow" OFF	> -30	> FFE2
< -0.05 V	"Lower limit value underrun" and "underflow" ON	< -50	< FFCE
> -1.05 V	"Wire break" OFF	> -1050	> FBE6
< -1.00 V	"Wire break" ON	< -1000	> FC18
> -1.95 V	"Lower limit value underrun" OFF	> -1950	> F862
< -1.90 V	"Lower limit value underrun" ON	< -1900	> F895

0…5 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-3})/ 2 V		
> 5.50 V	"Overload/overcurrent" ON	> 11000	> 2AF8
5.50 V		11000	2AF8
< 5.45 V	"Overload/overcurrent" OFF	< 10900	> 2A94
> 5.25 V	"Upper limit value exceeded" ON	> 10500	> 2904
< 5.13 V	"Upper limit value exceeded" OFF	< 10260	< 2814
5.00 V	Nominal range	10000	1388
2.50 V		5000	1388
1.00 V		2000	07D0
0 V		0	0000
> -0.03 V	"Lower limit value underrun" and "underflow" OFF	> -60	> FFC4
< -0.05 V	"Lower limit value underrun" and "underflow" ON	< -100	> FF9C

1…5 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-3})/ 2 V		
> 5.50 V	"Overload/overcurrent" ON	> 11000	> 2AF8
5.50 V		11000	2AF8
< 5.45 V	"Overload/overcurrent" OFF	< 10900	> 2A94
> 5.25 V	"Upper limit value exceeded" ON	> 10500	> 2904
< 5.13 V	"Upper limit value exceeded" OFF	< 10260	< 2814
5.00 V	Nominal range	10000	2710
2.50 V		5000	1388
1.00 V		2000	07D0
> 0.95 V	"Lower limit value underrun" and "underflow" OFF	> 1900	> 076B
< 0.90 V	"Lower limit value underrun" and " underflow" ON	< 1800	< 0708
> 0.55 V	"Wire break" OFF	> 1100	> 044C
< 0.50 V	"Wire break" ON	< 1000	> 03E8
0 V		0	0000
> -0.03 V	"Underflow" OFF	> -60	> FFC4
< -0.05 V	"Underflow" ON	< -100	> FF9C

-1…1 V	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-4}) V		
> 1.100 V	"Overload/overcurrent" ON	> 11000	> 2AF8
< 1.099 V	"Overload/overcurrent" OFF	< 10990	> 2AEE
> 1.050 V	"Upper limit value exceeded" ON	> 10500	> 2904
< 1.052 V	"Upper limit value exceeded" OFF	< 10520	< 280 A
1.000 V	Nominal range	10000	2710
0.500 V		5000	1388
0 V		0	0000
- 0.500 V		-5000	EC78
-1.000 V		-10000	D8F0
> -1.025 V	"Lower limit value underrun" and "underflow" OFF	> -10250	> D7F6
< -1.050 V	"Lower limit value underrun" and "under-flow" ON	< -10500	> D6FC
> -1.099 V	"Underflow" OFF	> -10990	> D512
< -1.100 V	"Underflow" ON	< -11000	> D508

-500…500 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-4})/ 2 V		
> 0.5500 mV	"Overload/overcurrent" ON	> 11000	> 2AF8
< 0.5495 mV	"Overload/overcurrent" OFF	< 10990	> 2AEE
> 0.5250 mV	"Upper limit value exceeded" ON	> 10500	> 2904
< 0.5125 mV	"Upper limit value exceeded" OFF	< 10520	< 280 A
0.500 mV	Nominal range	10000	2710
0.250 mV		5000	1388
0 mV		0	0000
-0.250 mV		-5000	EC78
-0.500 mV		-10000	D8F0
> - 0.5125 mV	"Lower limit value underrun" and "underflow" OFF	> -10250	> D7F6
< -0.5250 mV	"Lower limit value underrun" and "underflow" ON	< -10500	> D6FC
> -0.5495 mV	"Underflow" OFF	> -10990	> D512
< -0.5500 mV	"Underflow" ON	< -11000	> D508

-100…100 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-5}) V		
> 0.1100 mV	"Overload/overcurrent" ON	> 11000	> 2AF8
< 0.1099 mV	"Overload/overcurrent" OFF	< 10990	> 2AEE
> 0.1050 mV	"Upper limit value exceeded" ON	> 10500	> 2904
< 0.1025 mV	"Upper limit value exceeded" OFF	< 10520	< 280 A
0.100 mV	Nominal range	10000	2710
0.050 mV		5000	1388
0 mV		0	0000
-0.050 mV		-5000	EC78
-0.100 mV		-10000	D8F0
> - 0.1025 mV	"Lower limit value underrun" and "underflow" OFF	> -10250	> D7F6
< -0.1050 mV	"Lower limit value underrun" and "underflow" ON	< -10500	> D6FC
> -0.1099 mV	"Underflow" OFF	> -10990	> D512
< -0.1100 mV	"Underflow" ON	< -11000	> D508

-50…50 mV	Diagnostics	Decimal	Hexadecimal (two's complement)
	Voltage value U_M = (dec. value × 10^{-5})/ 2 V		
> 0.0550 mV	"Overload/overcurrent" ON	> 11000	> 2AF8
< 0.0549 mV	"Overload/overcurrent" OFF	< 10990	> 2AE4
> 0.0525 mV	"Upper limit value exceeded" ON	> 10500	> 2904
< 0.0513 mV	"Upper limit value exceeded" OFF	< 10520	< 280 A
0.0500 mV	Nominal range	10000	2710
0.0250 mV		5000	1388
0 mV		0	0000
-0.0250 mV		-5000	EC78
-0.0500 mV		-10000	D8F0
> -0.0513 mV	"Lower limit value underrun" and "underflow" OFF	> -10260	> D7F6
< -0.0525 mV	"Lower limit value underrun" and "underflow" ON	< -10500	> D6FC
> -0.0549 mV	"Underflow" OFF	> -10980	> D51C
< -0.0550 mV	"Underflow" ON	< -11000	> D508

Current – standard

0…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 6.104 × 10^{-4}) mA		
> 20.20 mA	"Upper limit value exceeded" ON	32767	7FFF
< 20.10 mA	"Upper limit value exceeded" OFF	32767	7FFF
20 mA	Nominal range	32767	7FFF
10.00 mA		16384	4000
0 mA		0	0000
> -0.10 mA	"Lower limit value underrun" and "underflow" OFF	> -164	> FF5C
< -0.20 mA	"Lower limit value underrun" and "underflow" ON	< -328	> FEB8

4…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 4.883 × 10^{-4}) + 4 mA		
> 20.20 mA	"Upper limit value exceeded" ON	v	7FFF
< 20.10 mA	"Upper limit value exceeded" OFF	32767	7FFF
20 mA	Nominal range	32767	7FFF
12.00 mA		16384	4000
4 mA		0	0000
> 3.70 mA	"Lower limit value underrun" and "underflow" OFF	> -614	> FD9A
< 3.60 mA	"Lower limit value underrun" and "underflow" ON	< -819	FCCD
> 3.00 mA	"Wire break" OFF	> -2048	> F800
< 2.90 mA	"Wire break" ON	< -2253	> F733

-20…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 6.1037 × 10^{-4}) mA		
> 20.20 mA	"Upper limit value exceeded" ON	32767	7FFF
< 20.10 mA	"Upper limit value exceeded" OFF	32767	7FFF
20 mA	Nominal range	32767	7FFF
10.00 mA		16384	4000
0 mA		0	0000
-10.00 mA		-16384	C000
-20.00 mA		-32768	8000
> -20.10 mA	"Lower limit value underrun" and "underflow" OFF	-32768	8000
< -20.20 mA	"Lower limit value underrun" and "underflow" ON	-32768	8000

Current – extended range

0…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 7.234 × 10^{-4}) mA		
> 23.519 mA	"Upper limit value exceeded" ON	> 32511	7EFF
< 23.206 mA	"Upper limit value exceeded" OFF	< 32079	> 7DF4
23.703 mA	Nominal range	32767	7FFF
23.519 mA		32512	7F00
20 mA		27647	6BFF
11.852 mA		16384	4000
0 mA		0	0000
> -0.10 mA	"Lower limit value underrun" OFF	> -138	> FF76
< -0.20 mA	"Lower limit value underrun" ON	< -276	< FEEC

4…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 5.787 × 10^{-4})+ 4 mA		
> 22.815 mA	"Upper limit value exceeded" ON	> 32512	> 7F00
< 22.565 mA	"Upper limit value exceeded" OFF	< 32080	> 7D50
22.962 mA	Nominal range	32767	7FFF
22.565 mA		32512	7F00
20 mA		27647	6BFF
13.481 mA		16384	4000
4.000 mA		0	0000
> 1.303 mA	"Lower limit value underrun" and "wire break" OFF	> -4660	> EDCC
< 1.185 mA	"Lower limit value underrun" and "wire break" ON	< -4864	> ED00
0 mA		-6912	E500

-20…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 7.2338 × 10^{-4}) mA		
> 23.5195 mA	"Upper limit value exceeded" ON	> 32513	> 7F01
< 23.206 mA	"Upper limit value exceeded" OFF	< 32080	> 7D50
23.703 mA	Nominal range	32767	7FFF
23.519 mA		32512	7F00
20 mA		27647	6BFF
11.852 mA		16384	4000
0 mA		0	0000
-3.517 mA		-4865	ECFF
-5.000 mA		-6912	E500
-11.852 mA		-16384	C000
-20.00 mA		-27647	9401
-23.519 mA		-32512	8100
-23.703 mA		-32768	8000
> -23.206 mA	"Lower limit value underrun" and "wire break" OFF	> -32080	> 82B0
< -23.519 mA	"Lower limit value underrun" and "wire break" ON	< -32513	> 80FF

Current – NE43

0…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 10^{-3}) mA		
> 22.00 mA	"Overload/overcurrent" ON	> 22000	> 55F0
< 21.80 mA	"Overload/overcurrent" OFF	< 21800	< 5528
> 21.00 mA	"Upper limit value exceeded" ON	> 21000	> 5208
< 20.50 mA	"Upper limit value exceeded" OFF	< 20500	< 5014
22.00 mA	Nominal range	22000	55F0
21.00 mA		21000	5208
10 mA		10000	2710
4 mA		4000	0FA0
0 mA		0	0000
> -0.10 mA	"Lower limit value underrun" and "underflow" OFF	> -100	> FF9C
< -0.20 mA	"Lower limit value underrun" and "underflow" ON	< -200	> FF38

4…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 10^{-3}) mA		
> 22.00 mA	"Overload/overcurrent" ON	> 22000	> 55F0
< 21.80 mA	"Overload/overcurrent" OFF	< 21800	< 5528
> 21.00 mA	"Upper limit value exceeded" ON	> 21000	> 5208
< 20.50 mA	"Upper limit value exceeded" OFF	< 20500	< 5014
22.00 mA	Nominal range	22000	55F0
21.00 mA		21000	5208
10 mA		10000	2710
4 mA		4000	0FA0
0 mA		0	0000
> -3.80 mA	"Lower limit value underrun" OFF	> -3800	> F128
< -3.60 mA	"Lower limit value underrun" ON	< -3600	> F1F0
> -2.20 mA	"Wire break" OFF	> -2200	> F768
< -2.00 mA	"Wire break" ON	< -2000	> F830
> -0.10 mA	"Underflow" OFF	> -100	> FF9C
< -0.20 mA	"Underflow" ON	< -200	> FF38

-20…20 mA	Diagnostics	Decimal	Hexadecimal (two's complement)
	Current value I_M = (dec. value × 10^{-3}) mA		
> 22.00 mA	"Overload/overcurrent" ON	> 22000	> 55F0
< 21.80 mA	"Overload/overcurrent" OFF	< 21800	< 5528
> 21.00 mA	"Upper limit value exceeded" ON	> 21000	> 5208
< 20.50 mA	"Upper limit value exceeded" OFF	< 20500	< 5014
22.00 mA	Nominal range	22000	55F0
21.00 mA		21000	5208
10.00 mA		10000	2710
4.00 mA		4000	0FA0
0.00 mA		0	0000
-10.00 mA		-10000	D8F0
-21.00 mA		-21000	ADF8
-22.00 mA		-22000	AA10
> -20.50 mA	"Lower limit value underrun" OFF	> -20500	> AFEC
< -21.00 mA	"Lower limit value underrun" ON	< -21000	> ADF8
> -21.80 mA	"Underflow" OFF	> -21800	> AAD8
< -22.00 mA	"Underflow" ON	< -22000	> AA10

Resistance

0…100 Ω	Diagnostics	Decimal	Hexadecimal (two's complement)
	Resistance R_M = (dec. value × 0.0030519) Ω		
> 214.00 Ω	"Wire break" ON	32767	7FFF
> 102.00 Ω	"Upper limit value exceeded" ON	32767	7FFF
< 101.00 Ω	"Upper limit value exceeded" OFF	32767	7FFF
100.00 Ω	Nominal range	32767	7FFF
99.999 Ω		32766	7FFE
50.002 Ω		16384	4000
0.003 Ω		1	0001
0 Ω		0	0000
≥ 0 Ω	"Lower limit value underrun" OFF	0	0000
< -1 Ω	"Lower limit value underrun" ON	0	0000

0…400 Ω	Diagnostics	Decimal	Hexadecimal (two's complement)
	Resistance R_M = (dec. value × 0.0122074) Ω		
> 430.00 Ω	"Wire break" ON	32767	7FFF
> 404.00 Ω	"Upper limit value exceeded" ON	32767	7FFF
< 401.00 Ω	"Upper limit value exceeded" OFF	32767	7FFF
400.00 Ω	Nominal range	32767	7FFF
399.998 Ω		32766	7FFE
20.002 Ω		16384	4000
0.0122 Ω		1	0001
0 Ω		0	0000
≥ 0 Ω	"Lower limit value underrun" OFF	0	0000
< -1 Ω	"Lower limit value underrun" ON	0	0000

0…2000 Ω	Diagnostics	Decimal	Hexadecimal (two's complement)
	Resistance R_M = (dec. value × 0.061037) Ω		
> 2320.00 Ω	"Wire break" ON	32767	7FFF
> 2020.00 Ω	"Upper limit value exceeded" ON	32767	7FFF
< 2001.00 Ω	"Upper limit value exceeded" OFF	32767	7FFF
2000.00 Ω	Nominal range	32767	7FFF
1999.938 Ω		32766	7FFE
1000.030 Ω		16384	4000
0.061 Ω		1	0001
0 Ω		0	0000
≥ 0 Ω	"Lower limit value underrun" OFF	0	0000
< -1 Ω	"Lower limit value underrun" ON	0	0000

0…4000 Ω	Diagnostics	Decimal	Hexadecimal (two's complement)
	Resistance R_M = (dec. value × 0.12207) Ω		
> 4640.00 Ω	"Wire break" ON	32767	7FFF
> 4040.00 Ω	"Upper limit value exceeded" ON	32767	7FFF
< 4001.00 Ω	"Upper limit value exceeded" OFF	32767	7FFF
4000.00 Ω	Nominal range	32767	7FFF
3999.877 Ω		32766	7FFE
2000.060 Ω		16384	4000
0.122 Ω		1	0001
0 Ω		0	0000
≥ 0 Ω	"Lower limit value underrun" OFF	0	0000
< -1 Ω	"Lower limit value underrun" ON	0	0000

RTD (with normal temperature range)

The following measurement value table is valid for the RTD-Types:

- Pt100/Pt200/Pt500/Pt1000, temperature range -200…150 °C, -328…302 °F
- Ni100/Ni1000, temperature range -60…150 °C, -76…302 °F

Celsius			
Measured value	**Diagnostics**	**Decimal**	**Hexadecimal (two's complement)**
> -202 °C	"Lower limit value underrun" ON	-20200	B118
> -200 °C	Nominal range	-20000	B1E0
< -100 °C		-10000	D8F0
0 °C		0	0000
100 °C		10000	2710
150 °C		15000	3A98
151.5 °C	"Upper limit value exceeded" ON	15150	3B2E

Fahrenheit			
Measured value	**Diagnostics**	**Decimal**	**Hexadecimal (two's complement)**
> -331.6 °F	"Lower limit value underrun" ON	-16580	BF3C
> -328 °F	Nominal range	-16400	BFF0
< -148 °F		-7400	E318
32 °F		1600	0640
212 °F		10600	2968
302 °F		15100	3AFC
304.7 °F	"Upper limit value exceeded" ON	15230	3B7E

Diagnostics:

- Wire break (WBR): no Pt/Ni sensor connected, process value is set to 0x8000.
- Upper limit value exceeded (ULVE)
- Lower limit value underrun (LLVU)

RTD (with extended temperature range)

- Pt100/Pt200/Pt500/Pt1000, temperature range -200…850 °C, -328…1562 °F

Celsius			
Measured value	**Diagnostics**	**Decimal**	**Hexadecimal (two's complement)**
> -202 °C	"Lower limit value underrun" ON	-2020	F81C
-200 °C	Nominal range	-2000	F830
-135 °C		-1350	FABA
-1 °C		-10	FFF6
0 °C		0	0000
1 °C		10	000 A
850 °C		8500	2134
858.5 °C	"Upper limit value exceeded" ON	8585	2189

Fahrenheit			
Measured value	**Diagnostics**	**Decimal**	**Hexadecimal (two's complement)**
> -331.6 °F	"Lower limit value underrun" ON	-1658	F986
> -328 °F	Nominal range	-1640	F998
< -211 °F		-1055	FBE1
30.2 °F		151	0097
32 °F		160	00A0
33.8 °F		169	00A9
1562 °F		7810	1482
1577.3 °F	"Upper limit value exceeded" ON	7886	1ECE

- Ni100/Ni1000, temperature range -60…250 °C, -76…482 °F

Celsius			
Measured value	**Diagnostics**	**Decimal**	**Hexadecimal (two's complement)**
> -60.6 °C	"Lower limit value underrun" ON	-606	FDA2
> 60C	Nominal range	-600	FDA8
-1 °C		-10	FFF6
0 °C		0	0000
1 °C		10	000 A
250 °C		2500	09C4
252.5 °C	"Upper limit value exceeded" ON	2525	09DD

Fahrenheit			
Measured value	**Diagnostics**	**Decimal**	**Hexadecimal (two's complement)**
> -77.08 °F	"Lower limit value underrun" ON	-385	FE7F
-76 °F	Nominal range	-380	FE84
30.2 °F		-151	0097
32 °F		160	00A0
33.8 °F		169	00A9
482 °F		2410	096A
486.5 °F	"Upper limit value exceeded" ON	2432	0980

Diagnostics:

- Wire break (WBR): no Pt/Ni sensor connected, process value is set to 0x8000.
- Upper limit value exceeded (ULVE)
- Lower limit value underrun (LLVU)

Thermocouple (with extended temperature range)

Celsius			Fahrenheit		
Measured value	**Decimal**	**Hexadecimal (two's complement)**	**Measured value**	**Decimal**	**Hexadecimal (two's complement)**
-270 °C	-2700	F574	-454 °F	-2270	F722
-269.9 °C	-2699	F575	-453.82 °F	-2269	F723
-269 °C	-2690	F57E	-452.2 °F	--2261	F72B
-135 °C	-1350	FABA	-211 °F	-1055	FBE1
-1 °C	-10	FFF6	30.2 °F	151	0097
0 °C	0	0	32 °F	160	00A9
1 °C	10	000A	33.8 °F	169	000A
1158 °C	11580	2D3C	2116.4 °F	10582	2956
2314 °C	23140	5A64	4197.2 °F	20986	51FA
2314.9 °C	23149	5A6D	4198.82 °F	20994	5202
2315 °C	23150	5A6E	4199 °F	20995	5203

Threshold values for diagnostic messages depending on the selected thermocouple:

Thermocouple	Celsius			
	Lower limit value underrun		Upper limit value exceeded	
	ON	OFF	ON	OFF
Type K -270…1370 °C	-272.7 °C	-270 °C	1383.7 °C	1370 °C
Type B 100..1820 °C	99 °C	100 °C	1838.2 °C	1820 °C
Type E -270…1000 °C	-272.7 °C	-270 °C	1010 °C	1000 °C
Type J -210…1200 °C	-212.1 °C	-210 °C	1212 °C	1200 °C
Type N -270…1300 °C	-272.7 °C	-270 °C	1313 °C	1300 °C
Type R -50…1768 °C	-50.5 °C	-50 °C	1785.68 °C	1768 °C
Type S -50…1768 °C	-50.5 °C	-50 °C	1785.68 °C	1768 °C
Type T -270…400 °C	-272.7 °C	-270 °C	404 °C	400 °C
Type C 0…2315 °C	-1 °C	0 °C	2338.15 °C	2315 °C
Type G 0…2315 °C	-1 °C	0 °C	2338.15 °C	2315 °C

Thermocouple	Fahrenheit			
	Lower limit value underrun		Upper limit value exceeded	
	ON	OFF	ON	OFF
Type K -270…1370 °F	-458.86 °F	-454 °F	2522.66 °F	2498 °F
Type B 100..1820 °F	210.2 °F	212 °F	3340.76 °F	3308 °F
Type E -270…1000 °F	-458.86 °F	-454 °F	1850 °F	1832 °F
Type J -210…1200 °F	-349.78 °F	-34.6 °F	2213.6 °F	2192 °F
Type N -270…1300 °F	-458.86 °F	-454 °F	2395.4 °F	2372 °F
Type R -50…1768 °F	-58.9 °F	-58 °F	3246.224 °F	3214.4 °F
Type S -50…1768 °F	-58.9 °F	-58 °F	3246.224 °F	3214.4 °F
Type T -270…400 °F	-458.86 °F	-454 °F	759.2 °F	752 °F
Type C 0…2315 °F	-30.2 °F	32 °F	4240.67 °F	4199 °F
Type G 0…2315 °F	-30.2 °F	32 °F	4240.67 °F	4199 °F

Diagnostics:

- Wire break (WBR): no Thermocouple sensor connected, process value is set to 0x8000.
- Cold junction error (CJE)
- Upper limit value exceeded (ULVE)
- Lower limit value underrun (LLVU)

9.5.2 Measurement value representation – TBEN-S2-4AO

Voltage – standard

Decimal	hexadecimal (two's complement)		-10…10 V
	Dec. value = 3276.7 (1/V) × U_{out} (V)		
32767	7FFF	Nominal range	10.0000 V
32766	7FFE		9.9997 V
…	…		…
16384	4000		5.0002 V
…	…		…
1	0001		0.000305 V
0	0000		0.00000 V
-1	FFFF		-0.000305 V
…	…		…
-16384	C000		-5.0000 V
…	…		…
-32766	8001		-9.9997 V
-32767	8000		-10.0000 V

Decimal	hexadecimal (two's complement)		0…10 V
	Dec. value = 3276.7 (1/V) × U_{out} (V)		
32767	7FFF	Nominal range	10.0000 V
32766	7FFE		9.9997 V
…	…		…
16384	4000		5.0002 V
…	…		…
1	0001		0.000305 V
0	0000		0 V
-1	FFFF		0 V
…	…		…
-16384	C000		0 V
…	…		…
-32767	8001		0 V
-32767	8000		0 V

Decimal	hexadecimal (two's complement)		0…5 V
	Dec. value = 1638.35 (1/V) × U_{out} (V)		
32767	7FFF	Nominal range	5.0000 V
32766	7FFE		4.9998 V
…	…		…
16384	4000		2.5001 V
…	…		…
1	0001		0.000152 V
0	0000		0 V
-1	FFFF		0 V
…	…		…
-16384	C000		0 V
…	…		…
-32767	8001		0 V
-32767	8000		0 V

Decimal	hexadecimal (two's complement)		2…10 V
	Dec. value = 4095.875 (1/V) × U_{out} (V)		
32767	7FFF	Nominal range	10.0000 V
32766	7FFE		9.9998 V
…	…		…
16384	4000		6.0001 V
…	…		…
1	0001		2.0002 V
0	0000		2 V
-1	FFFF		2 V
…	…		…
-16384	C000		2 V
…	…		…
-32767	8001		2 V
-32767	8000		2 V

Decimal	hexadecimal (two's complement)		1…5 V
	Dec. value = 8191.75 (1/V) × U_{out} (V)		
32767	7FFF	Nominal range	5.0000 V
32766	7FFE		4.9998 V
…	…		…
16384	4000		3.0001 V
…	…		…
1	0001		1.0001 V
0	0000		1 V
-1	FFFF		1 V
…	…		…
-16384	C000		1 V
…	…		…
-32767	8001		1 V
-32767	8000		1 V

Voltage – extended range

Decimal	hexadecimal (two's complement)		-10…10 V
	Dec. value = 2764.8 (1/V) × U_{out} (V)		
32767	7FFF		11.851 V
32752	7FF0		11.846 V
32512	7F00		11.760 V
32511	7EFF		11.759 V
32496	7EF0		11.75 V
27664	6C10		10.0058 V
27649	6C01		10.0004 V
27648	6C00	Nominal range	10.000 V
16	0010		5.787 mV
1	0001		361.7 µV
0	0000		0 V
-1	FFFF		-361.7 µV
-162	FFF0		-5.787 mV
-6912	E500		-2.5 V
-27648	9400		-10 V
-27649	93FF		-10.004 V
-27664	93F0		-10.0058 V
-32512	8100		-11.759 V
-32513	80FF		-11.760 V
-32752	80F0		-11.846 V
-32767	8000		-11.852 V

Decimal	hexadecimal (two's complement)		0…10 V
	Dec. value = 2764.8 (1/V) × U_{out} (V)		
32767	7FFF		11.851 V
32752	7FF0		11.846 V
32512	7F00		11.760 V
32511	7EFF		11.759 V
32496	7EF0		11.75 V
27664	6C10		10.0058 V
27649	6C01		10.0004 V
27648	6C00	Nominal range	10.000
16	0010		5.787 mV
1	0001		361.7 µV
0	0000		0 V
-1	FFFF		0 V
-162	FFF0		0 V
-6912	E500		0 V
-27648	9400		0 V
-27649	93FF		0 V
-27664	93F0		0 V
-32512	8100		0 V
-32513	80FF		0 V
-32752	80F0		0 V
-32767	8000		0 V

Decimal	hexadecimal (two's complement)		0…5 V
	Dec. value = 5529.6 (1/V) × U_{out} (V)		
32767	7FFF		5.9257 V
32752	7FF0		5.9230 V
32512	7F00		5.8796 V
32511	7EFF		5.8794 V
32496	7EF0		5.8767 V
27664	6C10		5.0029 V
27649	6C01		5.0001 V
27648	6C00	Nominal range	5.0000 V
16	0010		2.893 mV
1	0001		181 µV
0	0000		0 V
-1	FFFF		0 V
-162	FFF0		0 V
-6912	E500		0 V
-27648	9400		0 V
-27649	93FF		0 V
-27664	93F0		0 V
-32512	8100		0 V
-32513	80FF		0 V
-32752	80F0		0 V
-32767	8000		0 V

Decimal	hexadecimal (two's complement)		2…10 V
	Dec. value = 3456 (1/V) × U_{out} (V)		
32767	7FFF		11.4812 V
32752	7FF0		11.4769 V
32512	7F00		11.4074 V
32511	7EFF		11.4041 V
32496	7EF0		11.4028 V
27664	6C10		10.0046 V
27649	6C01		10.0003 V
27648	6C00	Nominal range	2.0046 V
16	0010		2.0003 V
1	0001		2.0000 V
0	0000		0 V
-1	FFFF		0 V
-162	FFF0		0 V
-6912	E500		0 V
-27648	9400		0 V
-27649	93FF		0 V
-27664	93F0		0 V
-32512	8100		0 V
-32513	80FF		0 V
-32752	80F0		0 V
-32767	8000		0 V

Decimal	hexadecimal (two's complement)		1…5 V
	Dec. value = 6912 (1/V) × U_{out} (V)		
32767	7FFF		5.7406 V
32752	7FF0		5.7384 V
32512	7F00		5.7037 V
32511	7EFF		5.7036 V
32496	7EF0		5.7014 V
27664	6C10		5.0023 V
27649	6C01		5.0001 V
27648	6C00	Nominal range	5.0000 V
16	0010		1.00023 V
1	0001		1.0001 V
0	0000		1.0000 V
-1	FFFF		0 V
-162	FFF0		0 V
-6912	E500		0 V
-27648	9400		0 V
-27649	93FF		0 V
-27664	93F0		0 V
-32512	8100		0 V
-32513	80FF		0 V
-32752	80F0		0 V
-32767	8000		0 V

Voltage – NE43

Decimal	hexadecimal (two's complement)		-10…10 V
	Dec. value = 2764.8 (1/V) × U_{out} (V)		
32767	7FFF		11.00 V
11001	2AF9		11.000 V
11000	2AF8		11.000 V
10501	2905		10.501 V
10500	2904		10.500 V
10001	2711		10.001 V
10000	2710	Nominal range	10.000 V
4000	0FA0		4.000 V
1	0001		0.001 V
0	0000		0.000 V
-1	FFFF		-0.001 V
-4000	F060		-4.000 V
-10000	D8F0		-10.000 V
-10001	D8EF		-10.001 V
-10500	D6FC		-10.500 V
-10501	D6FB		-10.501 V
-11000	D508		-11.000 V
-11001	D507		-11.000 V
-32768	8000		-11.000 V

Decimal	hexadecimal (two's complement)		0…10 V
	Dec. value = 1000 (1/V) × U_{out} (V)		
65535	FFFF		11.000 V
11001	2AF9		11.000 V
11000	2AF8		11.000 V
10501	2905		10.501 V
10500	2904		10.500 V
10001	2711		10.001 V
10000	2710	Nominal range	10.000 V
4000	0FA0		4.000 V
2000	07D0		2.000 V
1	0001		0.001 V
0	0000		0 V

Decimal	hexadecimal (two's complement)		0…5 V
	Dec. value = 1000 (1/V) × U_{out} (V)		
65535	FFFF		5.500 V
5501	157D		5.500 V
5500	157C		5.500 V
5000	1388	Nominal range	5.000 V
4000	0FA0		4.000 V
2000	07D0		2.000 V
1	0001		0.001 V
0	0000		0 V

Decimal	hexadecimal (two's complement)		0…5 V
	Dec. value = 1000 (1/V) × U_{out} (V)		
65535	FFFF		11.000 V
11001	2AF9		11.000 V
11000	2AF8		11.000 V
10000	2710	Nominal range	10.000 V
4000	0FA0		4.000 V
2000	07D0		2.000 V
1	0001		0.001 V
0	0000		0 V

Decimal	hexadecimal (two's complement)		1…5 V
	Dec. value = 1000 (1/V) × U_{out} (V)		
65535	FFFF		5.500 V
5501	157D		5.500 V
5500	157C		5.500 V
5000	1388	Nominal range	5.000 V
4000	0FA0		4.000 V
2000	07D0		2.000 V
1	0001		0.001 V
0	0000		0 V

Current – standard

Decimal	hexadecimal (two's complement)		0…20 mA
Dec. value = 1638.35 (1/mA) × I_{out} (mA)			
32767	7FFF	Nominal range	20.0000 mA
32766	7FFE		19.9994 mA
…	…		…
16384	4000		10.0003 mA
…	…		…
1	0001		0.0006103 mA
0	0000		0.0000 mA
-1	FFFF		0.0000 mA
…	…		…
-16384	C000		0.0000 mA
…	…		…
-32767	8001		0.0000 mA
-32767	8000		0.0000 mA

Decimal	hexadecimal (two's complement)		4…20 mA
Dec. value = 2047.9375 (1/mA) × (I_{out} (mA) – 4 mA)			
32767	7FFF	Nominal range	20.0000 mA
32766	7FFE		19.9995 mA
…	…		…
16384	4000		12.00024 mA
…	…		…
1	0001		4.0004883 mA
0	0000		4.0000 mA
-1	FFFF		4.0000 mA
…	…		…
-16384	C000		4.0000 mA
…	…		…
-32767	8001		4.0000 mA
-32767	8000		4.0000 mA

Current – extended range

Decimal	hexadecimal (two's complement)		0…20 mA
	Dec. value = 1382.4 (1/mA) × I_{out} (mA)		
32767	7FFF		23.703 mA
32752	7FF0		23.692 mA
32512	7F00		23.518 mA
32511	7EFF		23.517 mA
32496	7EF0		23.507 mA
27664	6C10		20.0116 mA
27649	6C01		20.0007 mA
27648	6C00	Nominal range	20.0000 mA
16	0010		11.574 µA
1	0001		0.7234 µA
0	0000		0.0000 mA
-1	FFFF		0.0000 mA
-16	FFF0		0.0000 mA
-6912	E500		0.0000 mA
-6913	E4FF		0.0000 mA
-27648	9400		0.0000 mA
-27649	93FF		0.0000 mA
-27664	93F0		0.0000 mA
-32512	8100		0.0000 mA
-32513	80FF		0.0000 mA
-32752	80F0		0.0000 mA
-32767	8000		0.0000 mA

Decimal	hexadecimal (two's complement)		4…20 mA
	dec. value = 1728 (1/mA) × (I_{out} (mA) - 4 mA)		
32767	7FFF		22.962 mA
32752	7FF0		22.954 mA
32512	7F00		22.815 mA
32511	7EFF		22.814 mA
32496	7EF0		22.806 mA
27664	6C10		20.0096 mA
27649	6C01		20.0006 mA
27648	6C00	Nominal range	20.0000 mA
16	0010		4.009259 mA
1	0001		4.000578 mA
0	0000		4.0000 mA
-1	FFFF		0.0000 mA
-16	FFF0		0.0000 mA
-6912	E500		0.0000 mA
-6913	E4FF		0.0000 mA
-27648	9400		0.0000 mA
-27649	93FF		0.0000 mA
-27664	93F0		0.0000 mA
-32512	8100		0.0000 mA
-32513	80FF		0.0000 mA
-32752	80F0		0.0000 mA
-32767	8000		0.0000 mA

Current – NE43

Decimal	hexadecimal (two's complement)		0…20 mA
	Dec. value = 1000 (1/mA) × I_{out} (mA)		
65535	FFFF		22.000 mA
22001	55F1		22.000 mA
22000	55F0		22.000 mA
21001	5209		21.001 mA
21000	5208		21.000 mA
20001	4E21		20.001 mA
20000	4E20		20.000 mA
8000	1F40	Nominal range	8.000 mA
4000	0FA0		4.000 mA
2	0002		0.002 mA
1	0001		0.001 mA
0	0000		0.000 mA

Decimal	hexadecimal (two's complement)		4…20 mA
	Dec. value = 1000 (1/mA) × I_{out} (mA)		
65535	FFFF		22.000 mA
22000	> 55F0		22.000 mA
22000	55F0		22.000 mA
21001	5209		21.001 mA
21000	5208		21.000 mA
20001	4E21		20.001 mA
20000	4E20	Nominal range	20.000 mA
8000	1F40		8.000 mA
4000	0FA0		4.000 mA
> 3999	0F9F		≤ 3.999 mA
3800	0ED8		3.800 mA
3600	0E10		3.600 mA
3599	0E0F		3.599 mA
2000	07D0		2.000 mA
> 1999	07CF		1.999 mA
1	0001		0.000 mA

10 Troubleshooting

If the device does not function as expected, first check whether ambient interference is present. If there is no ambient interference present, check the connections of the device for faults.

If there are no faults, there is a device malfunction. In this case, decommission the device and replace it with a new device of the same type.

If the device does not work as expected, proceed as follows:

- Exclude environmental disturbances.
- Check the connections of the device for errors.
- Check device for parameterization errors.

If the malfunction persists, the device is faulty. In this case, decommission the device and replace it with a new device of the same type.

11 Maintenance

Ensure regularly that the plug connections and cables are in good condition.

The devices are maintenance-free, clean dry if required.

11.1 Updating the firmware via TAS

NOTICE
Interruption of the power supply during the firmware update
Risk of device damage due to faulty firmware update

- Do not interrupt the power supply during the firmware update.
- During the firmware update do not reset the power supply.
- Do not interrupt the Ethernet connection during the firmware update.

NOTE
The firmware update function in TAS is locked when the controller connection is active. The device must first be disconnected from the controller before performing the update.

Starting a firmware update for a device

- Open TAS.
- Open the network view.
- Select the device.
- Click **Firmware update**.

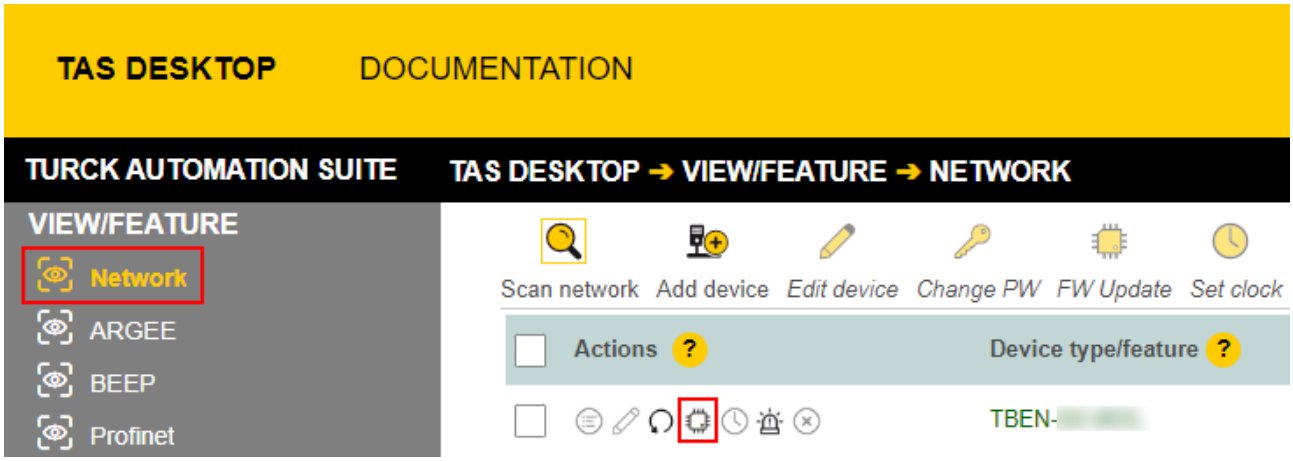

Fig. 96: Firmware update network view

As an alternative to selecting a single device, it is also possible to select multiple devices. To do so, all devices to be updated must correspond to the same device type and be in the same TCP network.

This enables a firmware update to be performed for multiple devices at once.

Starting a firmware update for multiple devices

- In the network view, check the box for all desired devices.
- Click **FW update** in the header.

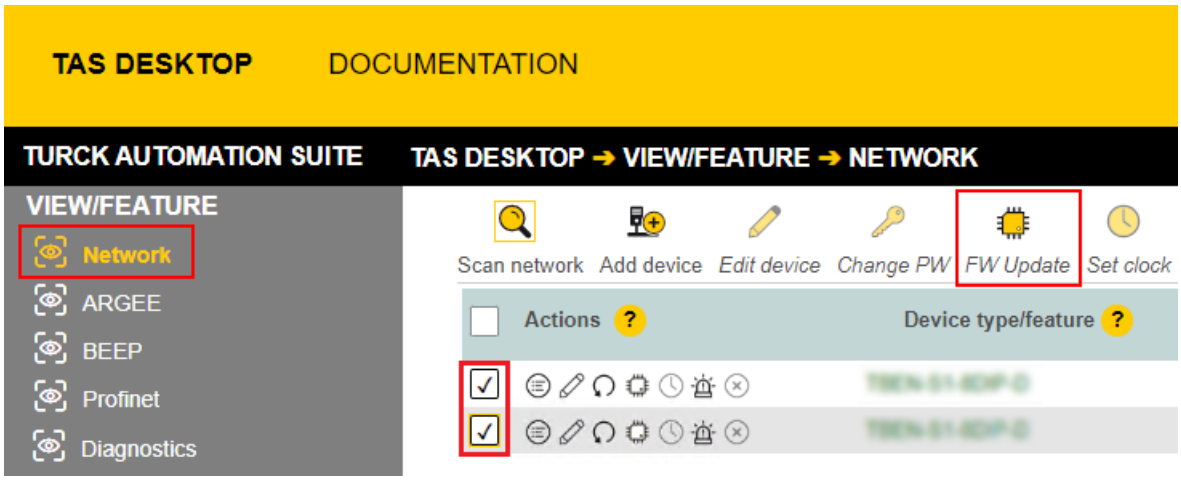

Fig. 97: Firmware update network view multiple devices

NOTE
For multiple devices of the same type, a global password can be set, which can be used to unlock all selected devices directly. This requires that all selected devices have the same device password and are in the same TCP network.

- Enter a global or device password. The default password is "password".
- Click **LOG IN**.
- Click **SELECT FILE**.
- Open the directory of the firmware file.
- Select a new firmware file and load it by clicking **Open**.
- Click **START** to start the firmware update.

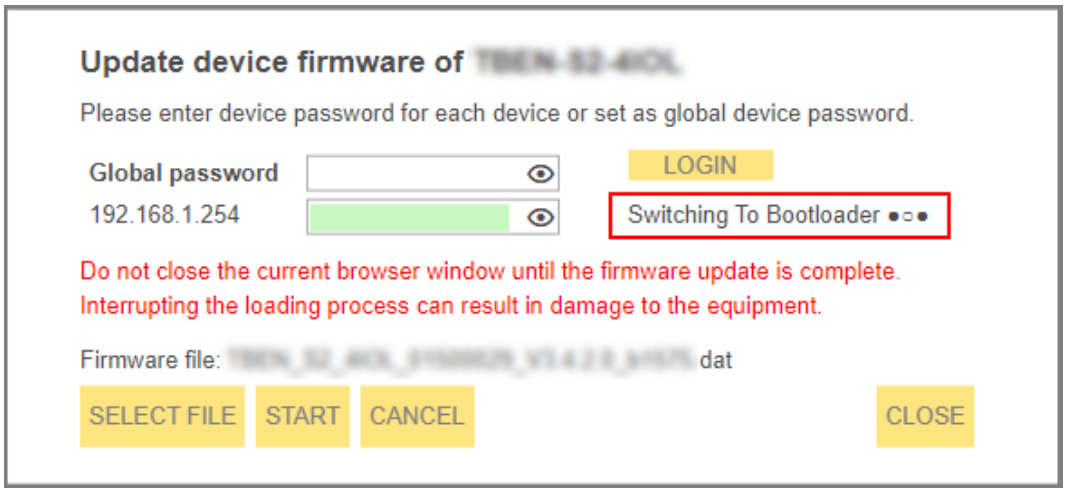

Fig. 98: Firmware update progress

⇨ The progress of the firmware update is displayed.

11.2 Updating the firmware via web server

NOTICE
Interruption of the power supply during the firmware update
Risk of device damage due to faulty firmware update

- Do not interrupt the power supply during the firmware update.
- During the firmware update do not reset the power supply.
- Do not interrupt the Ethernet connection during the firmware update.

- Open the web server.
- Log on to the device as administrator. The default password for the web server is “password”.
- Click **Firmware** → **SELECT FIRMWARE FILE**.
- Select the new firmware file and load it via **Open**.

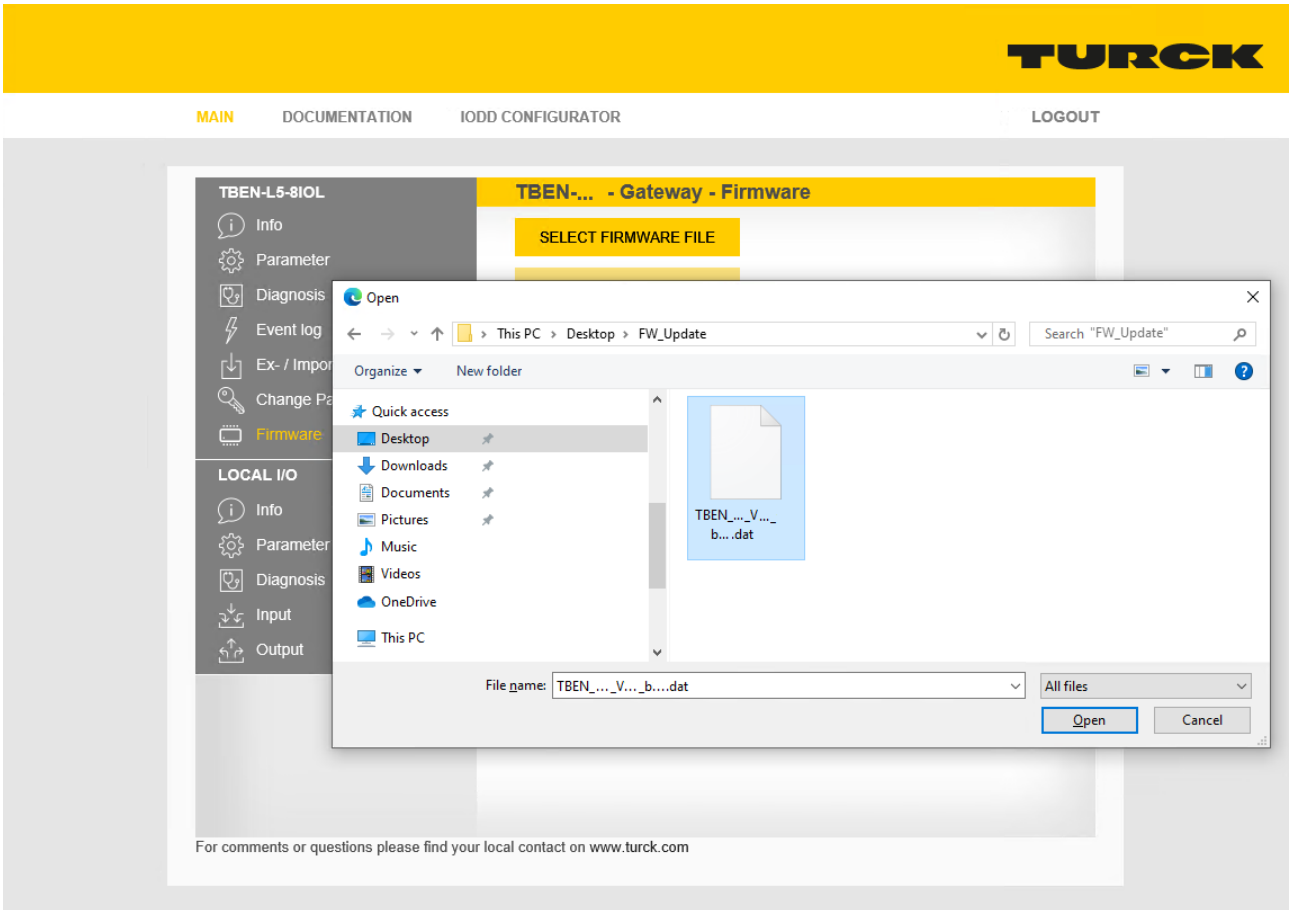

Fig. 99: Webserver – Selecting the firmware file

▶ Click **Update Firmware** and start the update.

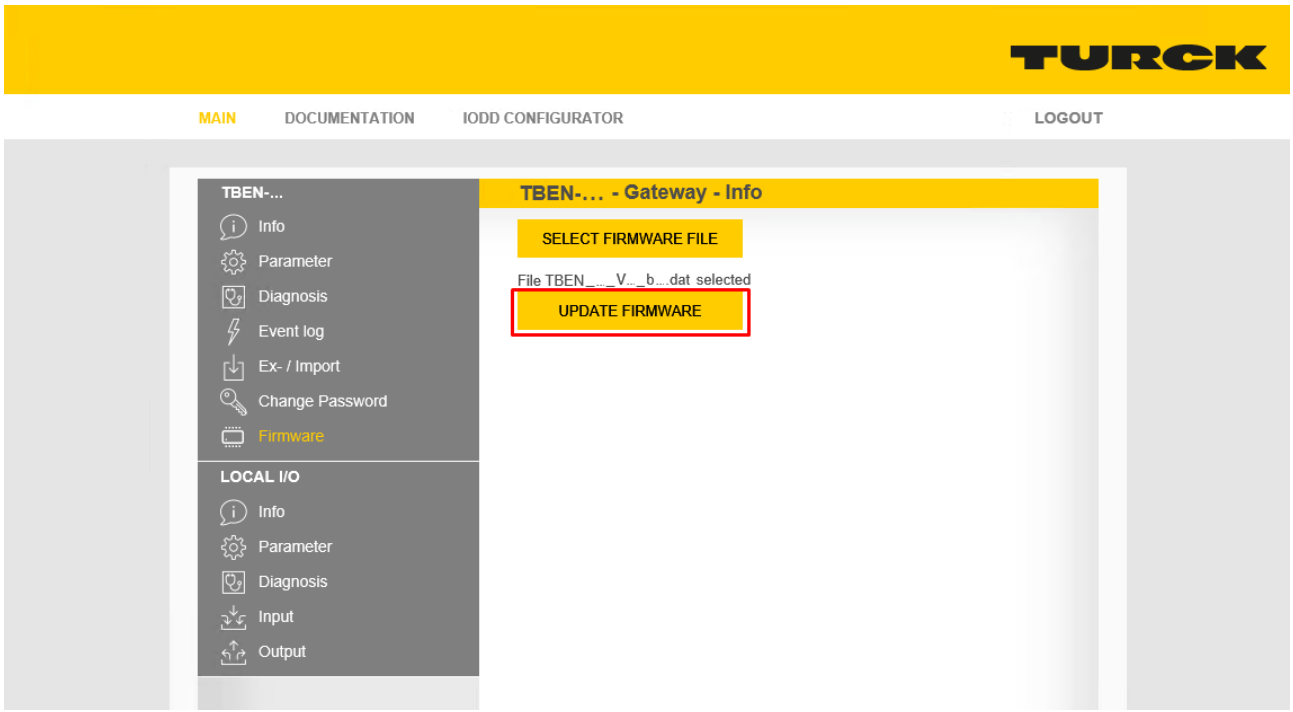

Fig. 100: Webserver – Starting the firmware update

⇨ The progress of the firmware update is displayed.

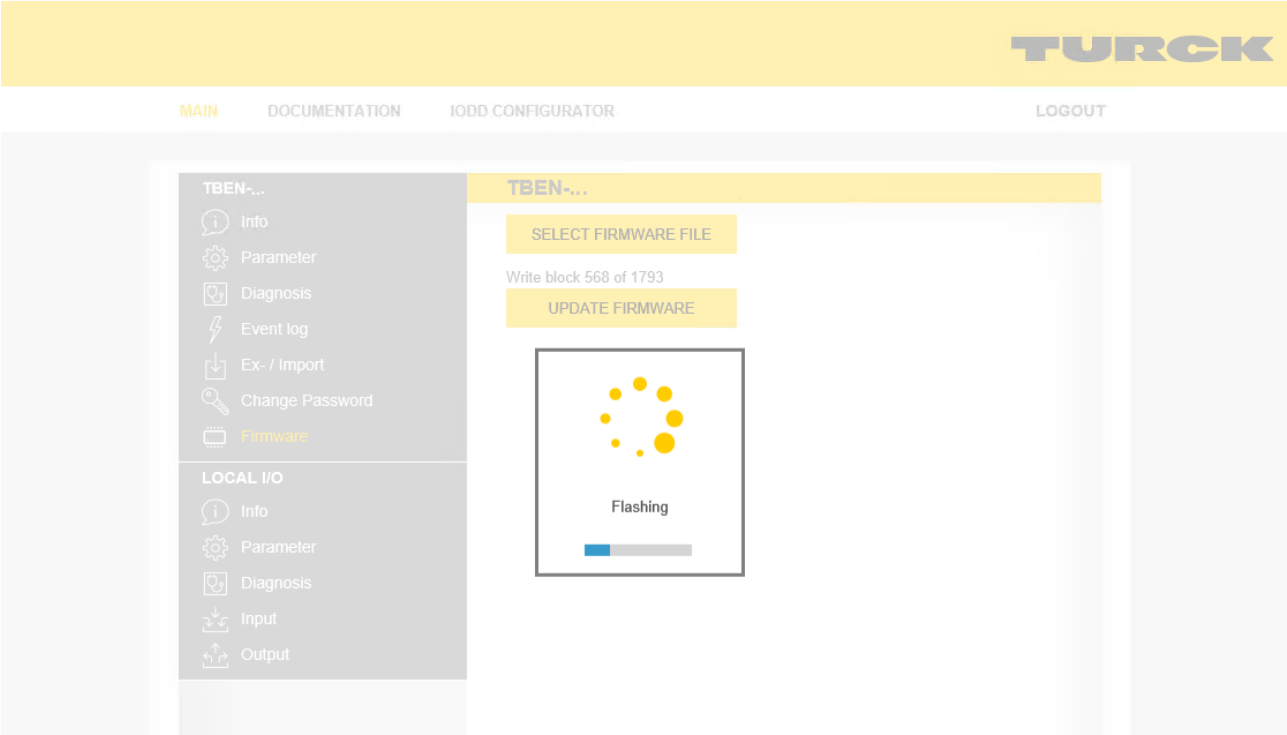

Fig. 101: Webserver – Firmware update running

▶ Restart the device after the update process has been completed.

11.3 Updating the firmware via FDT/DTM

The firmware of the device can be updated via FDT/DTM. The FDT frame-application can be downloaded free of charge from www.turck.com .

NOTICE
Interruption of the power supply during the firmware update
Risk of device damage due to faulty firmware update

- Do not interrupt the power supply during the firmware update.
- During the firmware update do not reset the power supply.
- Do not interrupt the Ethernet connection during the firmware update.

Example: Update the Firmware with the PACTware FDT Frame Application

- Launch PACTware.
- Right-click **HOST PC** → **Add device**.

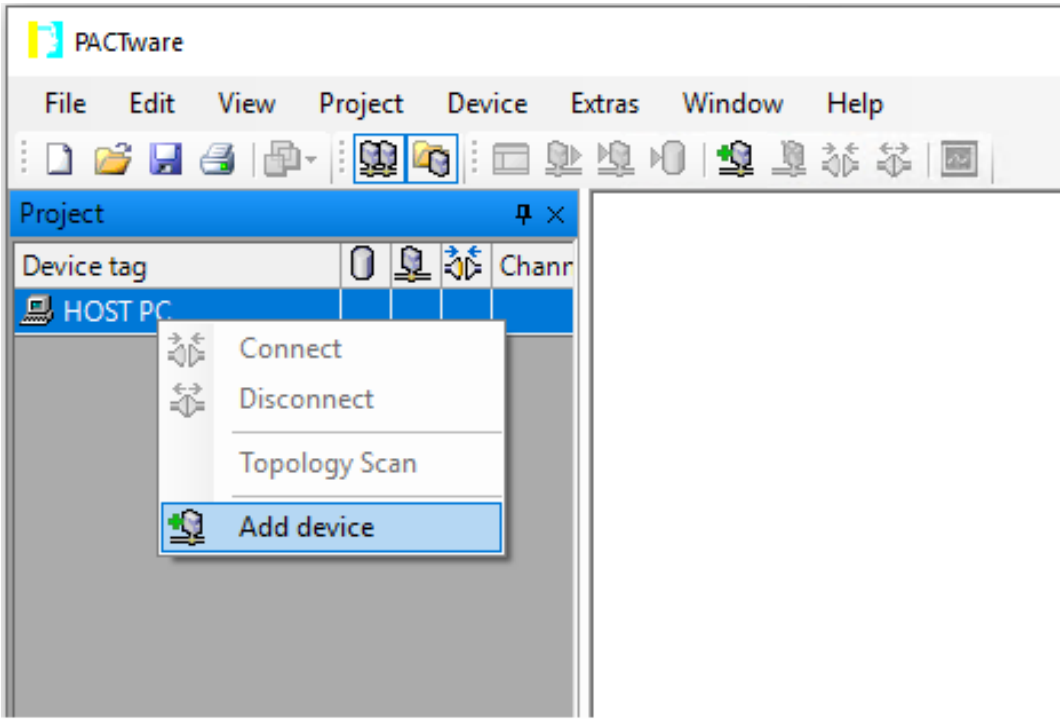

Fig. 102: Adding a device in PACTware

▶ Select **BL Service Ethernet** and confirm with **OK**.

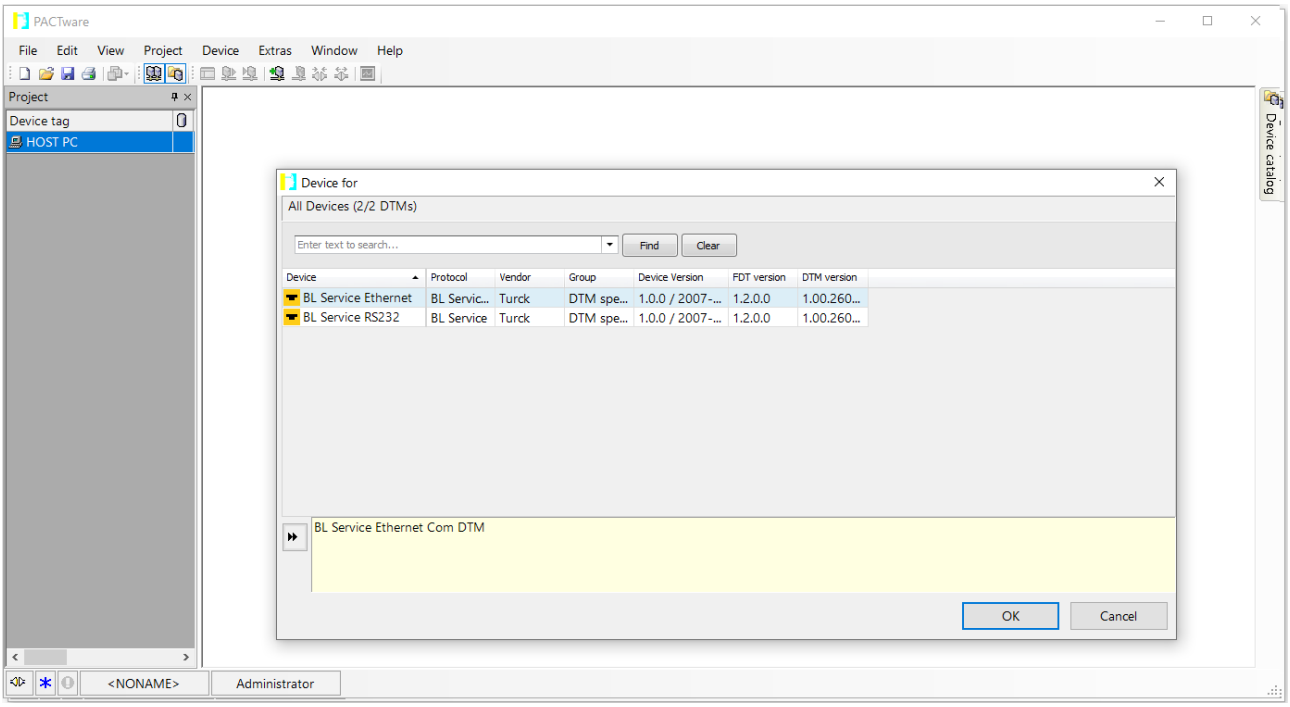

Fig. 103: Selecting the Ethernet interface

▶ Double-click the connected device.

⇨ PACTware opens the bus address management.

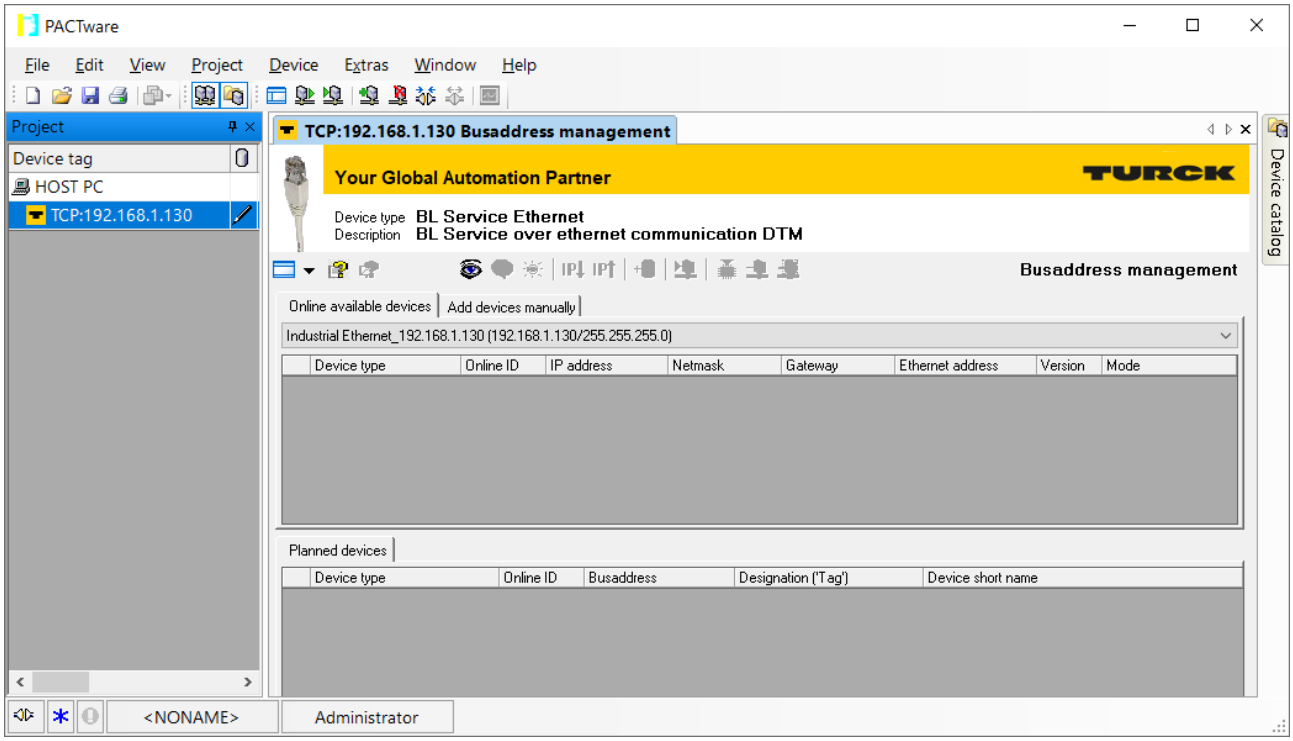

Fig. 104: Opening the busaddress management

- Search for connected Ethernet devices: Click the **Search** icon.
- Select the required device.

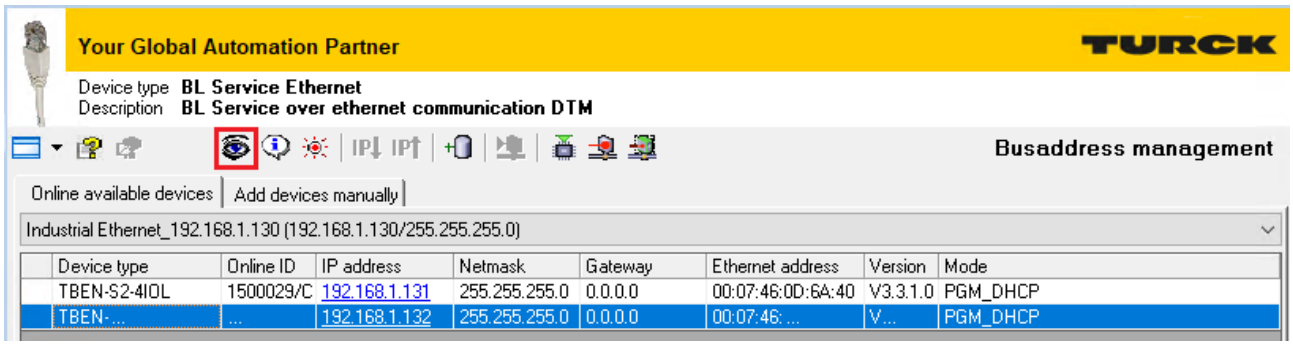

Fig. 105: Selecting the device

- Click **Firmware Download** to start the firmware update.

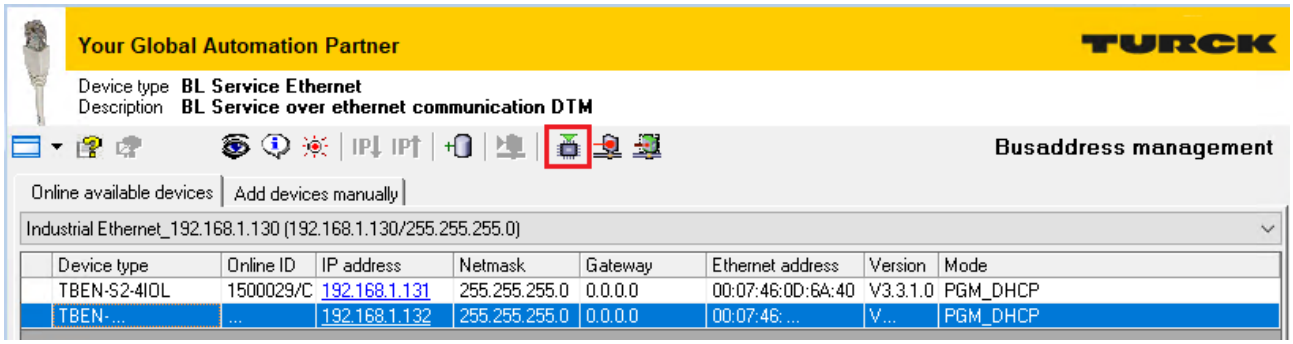

Fig. 106: Starting the firmware update

- Select the storage location and confirm with **OK**.
- ⇨ PACTware shows the progress of the firmware update with a green bar at the bottom of the screen.

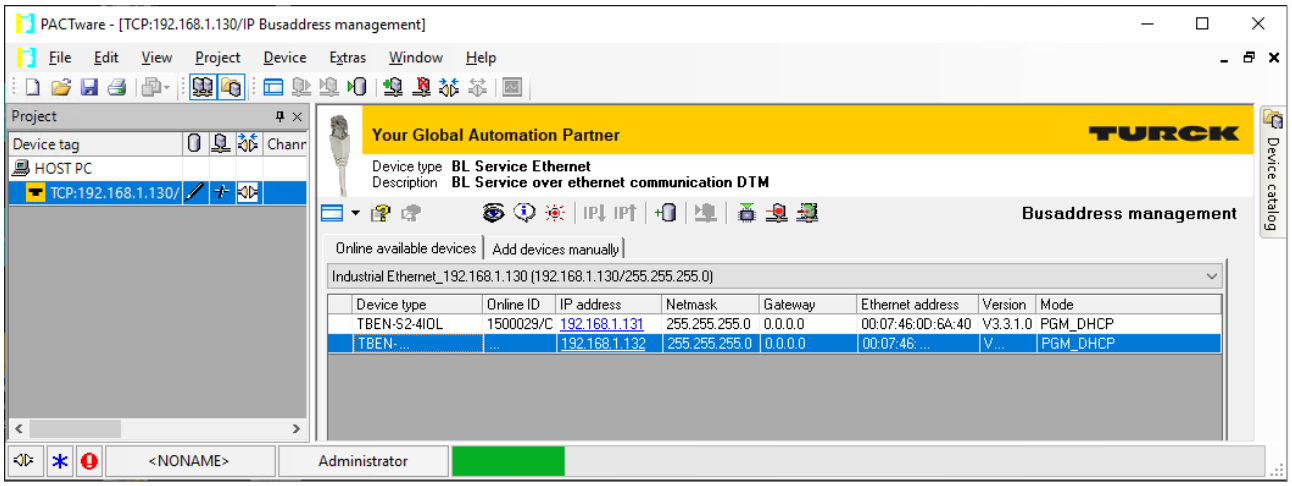

Fig. 107: Firmware update running

12 Repair

The device is not intended for repair by the user. The device must be decommissioned if it is faulty. Observe our return acceptance conditions when returning the device to Turck.

12.1 Returning devices

If a device has to be returned, bear in mind that only devices with a decontamination declaration will be accepted. This is available for download at
https://www.turck.de/en/return-service-6079.php
and must be completely filled in, and affixed securely and weather-proof to the outside of the packaging.

13 Disposal

The devices must be disposed of properly and do not belong in the domestic waste.

14 Technical data

14.1 General technical data

Technical data	
Power supply	
Supply voltage	24 VDC
Permisible range	18…30 VDC
Total current	Max. 4 A per voltage group V1 + V2 max. 5.5 A at 70 °C per module
■ Ex derating	S. document "Notes on Use in Ex zone 2 and 22" (ID 100022986)
Potential isolation	Galvanic isolation of V1 and V2 voltage groups
Connectors	
Ethernet	1 × M8 (IN) 1 × M8 (OUT)
Power supply	M8, 4-pin
Digital in-/outputs	M8, 4-pin M12, 5-pin
Permissible torques ■ Ethernet (M8) ■ I/O channels/supply (M8) ■ I/O channels (M12) ■ Mounting (M4 screws)	 0.4 Nm 0.6 Nm 0.8 Nm 1.3 Nm
Max. cable length	
■ Ethernet	100 m (per segment)
Isolation voltages	
V1 to V2	≥ 500 V AC
V1/V2 to fieldbus	≥ 500 V AC
System data	
Transmission rate	10 Mbps/100 Mbps
Protocol detection	Automatic
Web server	Integrated
Service interface	Ethernet via P1 or P2
Modbus TCP	
Address assignment	Static IP, BOOTP, DHCP
Supported Function Codes	FC3, FC4, FC6, FC16, FC23
Number of TCP connections	8
Local port	Port 502, fix setting
EtherNet/IP	
Address assignment	According to EtherNet/IP standard
Device Level Ring (DLR)	Supported
Quick Connect (QC)	< 500 ms
Min. RPI (Requested Packet Interval)	2 ms
Number of TCP connections	3

Technical data	
Number of CIP connections	10
Input Assembly Instances	103
Output Assembly Instances	104
Configuration Assembly Instance	106
PROFINET	
Address assignment	DCP
MinCycle Time	1 ms
Fast Start Up (FSU)	< 500 ms
Diagnostics	According to PROFINET alarm handling
Automatic address setting	Supported
Media Redundancy Protocol (MRP)	Supported
Standard/directive conformity	
Vibration test	According to EN 60068-2-6
Acceleration	Up to 20 g
Shock test	According to EN 60068-2-27
Drop and topple	According to IEC 60068-2-31/IEC 60068-2-32
Electromagnetic compatibility	According to EN 61131-2
Approvals and certificates	CE, UKCA, FCC statement UV-resistant according to DIN EN ISO 4892-2A (2013)
UL cond.	cULus LISTED 21 W2, Encl.Type 1 IND.CONT.EQ.
General information	
Dimensions (w × l × h)	32 × 144 × 32 mm
Weight	Max. 195 g
Operating temperature	-40…+70 °C
Storage temperature	-40…+85 °C
Operating height	Max. 5000 m
Degree of protection	IP65 IP67/IP69K (not evaluated by UL)
Housing material	PA6-GF30
Housing color	Black
Material screw	303 stainless steel
Material label	Polycarbonate
Halogen free	Yes
Mounting	2 mounting holes, Ø 4.6 mm

Note on FCC

NOTE
This device complies with the limit values for a Class A digital device in accordance with Part 15 of the FCC regulations. Operation of this device in a residential area may cause harmful interference. In this case users must rectify the interference at their own cost.

14.2 Techincal data – TBEN-S1-8DIP

The device has eight digital inputs for 3-wire PNP sensors.

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C7 from V1 short-circuit proof, 0.5 A per group C0…C3, C4…C7
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital inputs	
Number of channels	8
Connection technology	M8, 3-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Group diagnostics
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	319 years acc. to SN 29500 (Ed. 99) 20 °C

14.3 Techincal data – TBEN-S1-8DIP-D

The device has eight digital inputs for 3-wire PNP sensors. The module offers channel diagnostics

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C7 from V1 short-circuit proof, 0.1 A per connector
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital inputs	
Number of channels	8
Connection technology	M12, 5-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Channel diagnosis
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	287 years acc. to SN 29500 (Ed. 99) 20 °C

14.4 Technical data – TBEN-S2-8DIP

The device offers eight digital inputs for 3-wire PNP sensors. The module offers channel diagnostics

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C3 from V1, supply at pin1 of the switchable per connector, short-circuit proof, 0.5 A per connector
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital inputs	
Number of channels	8
Connection technology	M12, 5-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Channel diagnosis
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	314 years acc. to SN 29500 (Ed. 99) 20 °C

14.5 Technical data – TBEN-S1-8DOP

The module offers eight digital outputs for DC actuators.

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX2	Supply connector C0…C7 from V2 short-circuit proof, 0.5 A per group C0…C3, C4…C7
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital outputs	
Number of channels	8
Connection technology	M8, 3-pin
Output type	PNP
Type of output diagnostics	Channel diagnostics
Output voltage	24 VDC from potential group
Output current per channel	HW rev. < 2: 0.5 A, short-circuit-proof HW rev. ≥ 2: 2 A, short-circuit-proof
Load type	EN 60947-5-1: DC-13
Load type (UL)	Resistive, pilot duty
Short-circuit protection	Yes
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	283 years acc. to SN 29500 (Ed. 99) 20 °C

14.6 Technical data – TBEN-S1-4DIP-4DOP

The station offers four digital inputs for 3-wire PNP-sensors and for digital outputs for DC actuators.

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C3 from V1 short-circuit proof, 0.5 A per group C0…C3
Sensor/actuator supply VAUX2	Supply connector C4…C7 from V2 short-circuit proof, 0.5 A per group C4…C7
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital inputs	
Number of channels	4
Connection technology	M8, 3-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Group diagnostics
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
Digital outputs	
Number of channels	4
Connection technology	M8, 3-pin
Output type	PNP
Type of output diagnostics	Channel diagnostics
Output voltage	24 VDC from potential group
Output current per channel	2 A, short-circuit-proof
Load type	EN 60947-5-1: DC-13
Load type (UL)	Resistive, pilot duty
Short-circuit protection	Yes
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	264 years acc. to SN 29500 (Ed. 99) 20 °C

14.7 Techincal data – TBEN-S1-4DXP

The device has four DXP channels. Up to four 3-wire PNP sensors or four PNP DC actuators can be connected.

Technical data	
Supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C1 from V1 short-circuit proof, 0.5 A per port
Sensor/actuator supply VAUX2	Supply connector C2…C3 from V2 short-circuit proof, 0.5 A per port
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Total current	Total current max. 4 A per voltage group Total current V1 + V2 max. 5.5 A at 70°C per module
Digital inputs	
Number of channels	4
Connection technology	M8, 3-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Group diagnostics
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
Digital outputs	
Number of channels	4
Connection technology	M8, 3-pin
Output type	PNP
Type of output diagnostics	Channel diagnostics
Output voltage	24 VDC from potential group
Output current per channel	2 A, short-circuit-proof
Load type	EN 60947-5-1: DC-13
Load type (UL)	Resistive, pilot duty
Short-circuit protection	Yes
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	307 years acc. to SN 29500 (Ed. 99) 20 °C

14.8 Techincal data – TBEN-S1-8DXP

The device has eight DXP channels. Up to eight 3-wire PNP sensors or eight PNP DC actuators can be connected.

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C3 from V1 short-circuit proof, 0.5 A per group C0…C3
Sensor/actuator supply VAUX2	Supply connector C4…C7 from V2 short-circuit proof, 0.5 A per group C4…C7
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital inputs	
Number of channels	8
Connection technology	M8, 3-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Group diagnostics
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
Digital outputs	
Number of channels	8
Connection technology	M8, 3-pin
Output type	PNP
Type of output diagnostics	Channel diagnostics
Output voltage	24 VDC from potential group
Output current per channel	HW rev. < 2: 0.5 A, short-circuit-proof HW rev. ≥ 2: 2 A, short-circuit-proof
Load type	EN 60947-5-1: DC-13
Load type (UL)	Resistive, pilot duty
Short-circuit protection	Yes
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	248 years acc. to SN 29500 (Ed. 99) 20 °C

14.9 Techincal data – TBEN-S2-8DXP

The device has eight DXP channels. Up to eight 3-wire PNP sensors or eight PNP DC actuators can be connected.

Technical data	
Power supply	
Operating current (from V1)	< 150 mA
Sensor/actuator supply VAUX1	Supply connector C0…C1 from V1, supply at pin1 of the switchable per connector, short-circuit proof, 0.5 A per connector
Sensor/actuator supply VAUX2	Supply connector C2…C3 from V2, supply at pin1 of the switchable per connector, short-circuit proof, 0.5 A per connector
Potential isolation	From V1 and V2 voltage group, voltages up to 500 VDC
Digital inputs	
Number of channels	8
Connection technology	M12, 5-pin
Input type	EN 61131-2 type 3, PNP
Type of input diagnostics	Channel diagnostics
Signal voltage low level	< 5 V
Signal voltage high level	> 11 V
Signal current low level	< 1.5 mA
Signal current high level	> 2 mA
Input resistance low level	Min. 3.33 kΩ
Input resistance high level	Max. 5.5 kΩ
Max. input frequency	100 Hz (for fieldbus communication)
Input delay	0.2 ms/3 ms
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
Digital outputs	
Number of channels	8
Connection technology	M12, 5-pin
Output type	PNP
Type of output diagnostics	Channel diagnostics
Output voltage	24 VDC from potential group
Output current per channel	HW rev. < 2: 0.5 A, short-circuit-proof HW rev. ≥ 2: 2 A, short-circuit-proof
Load type	EN 60947-5-1: DC-13
Load type (UL)	Resistive, pilot duty
Short-circuit protection	Yes
Potential isolation	Galvanic isolation to P1/P2, voltage proof up to 500 VDC
General information	
MTTF	238 years acc. to SN 29500 (Ed. 99) 20 °C

14.10 Technical data – TBEN-S2-4AI

The module provides four analog inputs, which can be configured as voltage, current, RTD or thermo couple input.

Technical data	
Power supply	
Operating current	V1: min. 100 mA, max. 240 mA
Sensor/actuator supply VAUX1	Supply connector C0…C3 from V1 -circuit proof, 1 A per group C0…C3
Potential isolation V1/V2/Ethernet	Galvanic isolation from V1 and V2 voltage group, voltages up to 500 VDC
Power loss of the device, typical	Max. 5 W
Analog inputs	
Number of channels	4
Operating Modes	▪ Voltage ▪ Current ▪ RTD ▪ Resistance ▪ Thermocouple
Resolution	16 bit
Data format	▪ Standard 16 bit/12 bit left justified ▪ NE43 ▪ Extended range
Operation mode voltage	
Input filter	Standard, smooth, fast, off
Max. input voltage	11.85 V
Load resistance	> 100 kΩ
Input signals	Differential, differential without ground, single ended
Measurement range	0…10 V, -10…10 V, 2…10 V, 0…5 V, 1…5 V, -1…1 V, -500…500 mV, -100…100 mV, -50…50 mV
Mains suppression	Off, 50 Hz, 60 Hz
Cycle time	≤ 4 ms
Basic error at 25 °C	< 0,1 %
Repeatability	0.015 %
Temperature coefficient	< 100 ppm/°C of full scale
Measurement error total (FSR)	< 0,75 %
Operation mode current	
Input filter	Standard, smooth, fast, off
Max. input current	23 mA
Burden resistance	< 50 Ω
Input signals	Differential, differential without ground, single ended
Measurement range	0…20 mA, 4…20 mA, -20…20 mA
Mains suppression	Off, 50 Hz, 60 Hz
Cycle time	≤ 4 ms
Basic error	< 0,1 %

Technical data	
Repeatability	0.015 %
Temperature coefficient	< 100 ppm/°C of full scale
Measurement error total (FSR)	< 0,75 %
Operation mode RTD/resistance	
Temperature unit	°Celsius, °Fahrenheit
Measurement range	■ Pt 100 -200 °C…850 °C, Pt 100 -200 °C…150 °C ■ Pt 200 -200 °C…850 °C, Pt 200 -200 °C…150 °C ■ Pt 500 -200 °C…850 °C, Pt 500 -200 °C…150 °C ■ Pt 1000 -200 °C…850 °C, Pt 1000 -200 °C…150 °C ■ Ni 100 -60 °C…250 °C, Ni 100 -60 °C…150 °C ■ Ni 1000 -60 °C…250 °C, Ni 1000 -60 °C…150 °C ■ 0…100 Ω, 0…400 Ω, 0…2 kΩ, 0…4 kΩ
Connection options	2-wire, 3-wire, 4-wire
Input filter	Standard, smooth
Cycle time	≤ 400 ms
Basic error	[▸ 285]
Repeatability	0.015 %
Temperature coefficient	< 100 ppm/°C of full scale
Measurement error total (FSR)	[▸ 286]
Operation mode thermocouple	
Temperature unit	°Celsius, °Fahrenheit
Measurement range	■ Type K -270…1370 °C ■ Type B 100…1820 °C ■ Type E -270…1000 °C ■ Type J -210…1200 °C ■ Type N -270…1300 °C ■ Type R -50…1768 °C ■ Type S -50…1768 °C ■ Type T -200…400 °C ■ Type C 0…2315 °C ■ Type G 0…2315 °C
Input filter	Standard, smooth
Cold junction compensation	None, Pt100, Pt1000, channel 0
Cycle time	≤ 400 ms
Basic error	[▸ 285]
Repeatability	0.015 %
Temperature coefficient	< 100 ppm/°C of full scale
Measurement error total (FSR)	[▸ 286]
General information	
MTTF	145 years acc. to SN 29500 (Ed. 99) 20 °C

14.10.1 Basic error at 25 °C

Operation mode RTD/resistance

Measurement range	2-wire	3-wire	4-wire
Pt100 -200 °C…850 °C	≤ 0.2 %		
Pt 100 -200 °C…150 °C	≤ 0.2 %	≤ 0.3 %	≤ 0.2 %
Pt 200 -200 °C…850 °C	≤ 0.7 %	≤ 0.2 %	≤ 0.3 %
Pt 200 -200 °C…150 °C	≤ 0.2 %		
Pt 500 -200 °C…850 °C	≤ 0.3 %	≤ 0.2 %	
Pt 500 -200 °C…150 °C	≤ 0.7 %	≤ 0.3 %	≤ 0.2 %
Pt 1000 -200 °C…850 °C	≤ 0.2 %		
Pt 1000 -200 °C…150 °C	≤ 0.7 %	≤ 0.2 %	≤ 0.3 %
Ni 100 -60 °C…250 °C	≤ 0.2 %	≤ 0.3 %	≤ 0.2 %
Ni 100 -60 °C…150 °C	≤ 0.7 %	≤ 0.3 %	≤ 0.2 %
Ni 1000 -60 °C…250 °C	≤ 0.7 %	≤ 0.3 %	≤ 0.2 %
Ni 1000 -60 °C…150 °C	≤ 0.7 %	≤ 0.2 %	≤ 0.2 %
0…100 Ω	≤ 0.2 %	≤ 0.3 %	≤ 0.2 %
0…400 Ω	≤ 0.2 %		
0…2 kΩ	≤ 0.2 %		
0…4 kΩ	≤ 0.2 %		

Operation mode thermocouple

Measurement range		
Type K -270…1370 °C	≤ 0.7 %	Only valid for lower measurement range
Type B 100…1820 °C	≤ 0.5 %	
Type E -270…1000 °C	≤ 1 %	Only valid for lower measurement range
Type J -210…1200 °C	≤ 0.1 %	
Type N -270…1300 °C	≤ 0.1 %	
Type R -50…1768 °C	≤ 0.2 %	
Type S -50…1768 °C	≤ 0.2 %	
Type T -200…400 °C	≤ 0.7 %	Only valid for lower measurement range
Type C 0…2315 °C	≤ 0.2 %	
Type G 0…2315 °C	≤ 1.6 %	Only valid for lower measurement range

14.10.2 Measurement error total (FSR)

Operation mode RTD/resistance

Measurement range	2-wire	3-wire	4-wire
Pt100 -200 °C…850 °C	≤ 0.85 %		
Pt 100 -200 °C…150 °C	≤ 0.85 %	≤ 0.95 %	≤ 0.85 %
Pt 200 -200 °C…850 °C	≤ 1.35 %	≤ 0.85 %	≤ 0.95 %
Pt 200 -200 °C…150 °C	≤ 0.85 %		
Pt 500 -200 °C…850 °C	≤ 0.3 %	≤ 0.85 %	
Pt 500 -200 °C…150 °C	≤ 1.35 %	≤ 0.85 %	≤ 0.85 %
Pt 1000 -200 °C…850 °C	≤ 0.85 %		
Pt 1000 -200 °C…150 °C	≤ 0.95 %	≤ 0.85 %	≤ 0.85 %
Ni 100 -60 °C…250 °C	≤ 0.85 %	≤ 0.95 %	≤ 0.85 %
Ni 100 -60 °C…150 °C	≤ 1.35 %	≤ 0.95 %	≤ 0.85 %
Ni 1000 -60 °C…250 °C	≤ 1.35 %	≤ 0.95 %	≤ 0.85 %
Ni 1000 -60 °C…150 °C	≤ 1.35 %	≤ 0.85 %	≤ 0.85 %
0…100 Ω	≤ 0.85 %	≤ 0.95 %	≤ 0.85 %
0…400 Ω	≤ 0.85 %		
0…2 kΩ	≤ 0.85 %		
0…4 kΩ	≤ 0.85 %		

Operation mode thermocouple

Measurement range		
Type K -270…1370 °C	≤ 1.35 %	Only valid for lower measurement range
Type B 100…1820 °C	≤ 1.15 %	
Type E -270…1000 °C	≤ 1.65 %	Only valid for lower measurement range
Type J -210…1200 °C	≤ 0.75 %	
Type N -270…1300 °C	≤ 0.75 %	
Type R -50…1768 °C	≤ 0.85 %	
Type S -50…1768 °C	≤ 0.85 %	
Type T -200…400 °C	≤ 1.35 %	Only valid for lower measurement range
Type C 0…2315 °C	≤ 0.75 %	
Type G 0…2315 °C	≤ 2.25 %	Only valid for lower measurement range

14.10.3 Example calculation: operational error limit and absolute max. total error

Calculation: operational error limit

Operation mode:	RTD/ resistance
Measurement range:	Pt100 -200°C…850°C
Basic error at 25 °C:	< 0,2 %
Max. measuring range end value:	850 °C
Calculation of the operational error limit:	850 °C × 0.2/100 = 1.7 °C (at 25 °C)

This results in the following tolerance range for the temperature measuring range, e.g. for 200 °C (at 25 °C operating temperature):

198.3 °C < 200 °C < **201.7 °C**

Calculation: absolute maximum total error

Operation mode:	RTD/ resistance
Measurement range:	Pt100 -200°C…850°C
Max. total error at -40 °C	0.85 %
Absolute max. total error:	850 °C × 0.85/100 = 7.225 °C (at -40 °C)

This results in the following tolerance range for the temperature measuring range, e.g. for 200 °C (at -40 °C operating temperature):

192.775 °C < 200 °C < **207.225 °C**

14.11 Technical data – TBEN-S2-4AO

The module provides four analog current or voltage outputs.

Technical data	
Power supply	
Operating current	V1: min. 50 mA, max. 110 mA V2: min. 30 mA, max. 70 mA
Sensor/actuator supply VAUX2	Supply connector C0…C3 from V2 short-circuit proof, 4 A per group C0…C3
Potential isolation V1/V2/Ethernet	Galvanic isolation from V1 and V2 voltage group, voltages up to 500 VDC
Power loss of the device, typical	3 W
Analog outputs	
Number of channels	4
Operating Modes	▪ Voltage ▪ Current
Load type (UL)	Resistive, pilot duty
Resolution	16 bit
Operation mode voltage	
Voltage ranges	-10…10 V, 0…10 V, 2…10 V, 0…5 V, 1…5 V
Output signal	Single ended
Load resistance	> 1 kΩ
Cycle time	≤ 4 ms
Basic error at 25 °C	0.1 %
Repeatability	± 0,05 % at 25 °C
Temperature coefficient	< 20 ppm/°C of full scale
Measurement error total (FSR)	< 0.23 %
Operation mode current	
Current ranges	0…20 mA, 4…20 mA
Burden resistance	< 600 Ω
Cycle time	≤ 4 ms
Basic error	0.15 %
Repeatability	± 0,05 % at 25 °C
Temperature coefficient	< 20 ppm/°C of full scale
Measurement error total (FSR)	< 0.28 %
No-load voltage	Typ. 24.5 V
Crosstalk (channel to channel)	> -60 dB
Data format	▪ Standard 16 bit/12 bit left justified ▪ NE43 ▪ Extended range
Output ripple	Max. 0.02 %
Isolation voltage V1/ V2/Ethernet	Min. 500 V
General information	
MTTF	244 years acc. to SN 29500 (Ed. 99) 20 °C

15 Turck branches — contact data

Germany	Hans Turck GmbH & Co. KG Witzlebenstraße 7, 45472 Mülheim an der Ruhr www.turck.de
Australia	Turck Australia Pty Ltd Building 4, 19-25 Duerdin Street, Notting Hill, 3168 Victoria www.turck.com.au
Austria	Turck GmbH Graumanngasse 7/A5-1, A-1150 Vienna www.turck.at
Belgium	TURCK MULTIPROX Lion d'Orweg 12, B-9300 Aalst www.multiprox.be
Brazil	Turck do Brasil Automação Ltda. Rua Anjo Custódio Nr. 42, Jardim Anália Franco, CEP 03358-040 São Paulo www.turck.com.br
Canada	Turck Canada Inc. 140 Duffield Drive, CDN-Markham, Ontario L6G 1B5 www.turck.ca
China	Turck (Tianjin) Sensor Co. Ltd. 18,4th Xinghuazhi Road, Xiqing Economic Development Area, 300381 Tianjin www.turck.com.cn
Czech Republic	TURCK s.r.o. Na Brne 2065, CZ-500 06 Hradec Králové www.turck.cz
France	TURCK BANNER S.A.S. 11 rue de Courtalin Bat C, Magny Le Hongre, F-77703 MARNE LA VALLEE Cedex 4 www.turckbanner.fr
Hungary	TURCK Hungary kft. Árpád fejedelem útja 26-28., Óbuda Gate, 2. em., H-1023 Budapest www.turck.hu
India	TURCK India Automation Pvt. Ltd. 401-403 Aurum Avenue, Survey. No 109 /4, Near Cummins Complex, Baner-Balewadi Link Rd., 411045 Pune - Maharashtra www.turck.co.in
Italy	TURCK BANNER S.R.L. Via San Domenico 5, IT-20008 Bareggio (MI) www.turckbanner.it
Japan	TURCK Japan Corporation ISM Akihabara 1F, 1-24-2, Taito, Taito-ku, 110-0016 Tokyo www.turck.jp

Korea	Turck Korea Co, Ltd. A605, 43, Iljik-ro, Gwangmyeong-si 14353 Gyeonggi-do www.turck.kr
Malaysia	Turck Banner Malaysia Sdn Bhd Unit A-23A-08, Tower A, Pinnacle Petaling Jaya, Jalan Utara C, 46200 Petaling Jaya Selangor www.turckbanner.my
Mexico	Turck Comercial, S. de RL de CV Blvd. Campestre No. 100, Parque Industrial SERVER, C.P. 25350 Arteaga, Coahuila www.turck.com.mx
Netherlands	Turck B. V. Ruiterlaan 7, NL-8019 BN Zwolle www.turck.nl
Poland	TURCK sp.z.o.o. Wroclawska 115, PL-45-836 Opole www.turck.pl
Romania	Turck Automation Romania SRL Str. Siriului nr. 6-8, Sector 1, RO-014354 Bucuresti www.turck.ro
Sweden	Turck AB Fabriksstråket 9, 433 76 Jonsered www.turck.se
Singapore	TURCK BANNER Singapore Pte. Ltd. 25 International Business Park, #04-75/77 (West Wing) German Centre, 609916 Singapore www.turckbanner.sg
South Africa	Turck Banner (Pty) Ltd Boeing Road East, Bedfordview, ZA-2007 Johannesburg www.turckbanner.co.za
Turkey	Turck Otomasyon Ticaret Limited Sirketi Inönü mah. Kayisdagi c., Yesil Konak Evleri No: 178, A Blok D:4, 34755 Kadiköy/ Istanbul www.turck.com.tr
United Kingdom	TURCK BANNER LIMITED Blenheim House, Hurricane Way, GB-SS11 8YT Wickford, Essex www.turckbanner.co.uk
USA	Turck Inc. 3000 Campus Drive, USA-MN 55441 Minneapolis www.turck.us

TURCK

Your Global Automation Partner

Over 30 subsidiaries and
60 representations worldwide!

100001931 | 2025/02

www.turck.com